

palm prē

User Guide

Intellectual property notices

© 2010 Palm, Inc. All rights reserved. Palm, Pre, Synergy, webOS, and the Palm and Pre logos are among the trademarks or registered trademarks owned by or licensed to Palm, Inc. Microsoft and Outlook are trademarks of the Microsoft group of companies. Exchange ActiveSync Enabled. Facebook® is a registered trademark of Facebook, Inc. Google and Google Maps are trademarks of Google, Inc. Doc View and PDF View are provided by Documents To Go®, a product of DataViz, Inc. (dataviz.com). All other brand and product names are or may be trademarks of, and are used to identify products or services of, their respective owners.

Disclaimer and limitation of liability

Palm, Inc. and its suppliers assume no responsibility for any damage or loss resulting from the use of this guide. Palm, Inc. and its suppliers assume no responsibility for any loss or claims by third parties that may arise through the use of this software. Palm, Inc. and its suppliers assume no responsibility for any damage or loss caused by deletion of data as a result of malfunction, dead battery, or repairs. Be sure to make backup copies of all important data on other media to protect against data loss.

Patent pending. This product also is licensed under United States patent 6,058,304.

Use of this device requires providing a valid email address, mobile phone number, and related information for account setup and activation. A data plan is also required. An unlimited usage data plan is strongly recommended or additional data charges may apply.

Open Source License information

You can view the Open Source License terms on your phone. Tap the Center button, and then tap the **Launcher** icon. Swipe left until the **PDF View** icon appears. Tap **PDF View**, then tap **Open Source Information.pdf**.

You can also view the file on your computer. Connect your phone to your computer with the **USB cable**. On your phone, tap **USB Drive**. On your computer, locate and double-click the **Palm Pixi** drive. To locate the drive, do the following for your operating system:

- Windows Vista: Open **Computer**.
- Windows XP: Open **My Computer**.
- Mac: Open **Finder**.
- Linux (Ubuntu): The drive is displayed on the desktop.
- Other Linux distribution: The location of the drive may vary by system.

After you open the drive, double-click the file **Open Source Information.pdf**.

Recycling and disposal



This symbol indicates that Palm products should be recycled and not be disposed of in unsorted municipal waste. Palm products should be sent to a facility that properly recycles electrical and electronic equipment. For information on environmental programs visit palm.com/environment or recyclewirelessphones.com/.

As part of Palm's corporate commitment to be a good steward of the environment, we strive to use environmentally friendly materials, reduce waste, and develop the highest standards in electronics recycling.

v. 2.0

Contents

Chapter 1 Welcome

- 6 Your Palm® Pre™ phone
- 7 What's in the box?
- 7 Where can I learn more?

Chapter 2 Basics

- 10 Get to know your phone
- 14 Set up your phone
- 15 Charge the battery
- 16 Turn the phone on/off
- 19 Use gestures: tap, swipe, drag, flick, pinch
- 24 Open applications
- 25 Work with applications
- 28 Enter and save information
- 32 Use the menus
- 33 Search to find info and make calls
- 35 View and respond to notifications
- 36 Update the software on your phone
- 38 Use App catalog to shop for new applications
- 41 Copy files between your phone and your computer

Chapter 3 Data transfer

- 44 Data transfer overview
- 44 How do I get data from my old phone?
- 44 How do I get data off my computer?
- 46 I'm already using Google, Facebook, Yahoo! and/or Microsoft Exchange. How do I sync data?

- 46 I want to keep using my current desktop app and sync with an online account on my phone
- 47 I don't need to sync, but I do want a copy of my data backed up somewhere besides my phone
- 47 I'd rather sync directly with my computer

Chapter 4 Phone

- 50 Make calls
- 52 Receive calls
- 53 Use voicemail
- 54 What can I do during a call?
- 57 What's my number?
- 57 View your call history
- 58 Save a phone number to Contacts
- 58 Use a phone headset
- 59 Customize phone settings

Chapter 5 Email, text, multimedia, and instant messaging

- 64 Email
- 75 Messaging

Chapter 6 Contacts, Calendar, and other personal information

- 84 Contacts
- 93 Calendar
- 100 Tasks

	104	Memos
	106	Clock
	107	Calculator
	108	Facebook
Chapter 7		Photos, videos, and music
	110	Camera
	110	Photos
	115	Videos
	117	YouTube
	118	Music
Chapter 8		Web and wireless connections
	124	Wi-Fi
	127	Location Services
	128	Web
	133	Google Maps
	133	Bluetooth® wireless technology
	136	Use your phone as a modem
Chapter 9		Documents
	138	Doc View
	141	PDF View
Chapter 10		Preferences
	146	Backup
	149	Erase your Palm profile data
	149	Date & Time
	149	Device Info
	153	Regional Settings
	153	Screen & Lock
	156	Sounds & Ringtones

Chapter 11		Troubleshooting
	160	For users of other Palm® devices
	160	Battery
	164	Screen and performance
	165	Phone
	166	Hands-free devices
	167	Synchronization
	169	Sending and receiving data in Email, Messaging, and Web
	170	Email
	171	Messaging
	171	Wi-Fi
	171	Web
	172	Calendar and Contacts
	173	Camera
	173	Transferring information from your computer
	174	Backing up and restoring data
	174	Updates
	175	Transferring information from another Palm® webOS™ platform phone
	175	Third-party applications
	176	Making room on your phone

Terms

Online accounts available for webOS phones

Specifications

Regulatory and safety information

Index



Welcome

Congratulations on the purchase of your Palm® Pre™ phone.

In this chapter

- 6 Your Palm® Pre™ phone
- 7 What's in the box?
- 7 Where can I learn more?

Your Palm® Pre™ phone

In one compact and indispensable device, you now have all of the following:

- An advanced wireless phone running the Palm® webOS™ platform
- A full suite of organizer applications: Contacts, Calendar, Memos, and Tasks
- High-speed data with EvDO and 1x support
- Wi-Fi capability
- A 3-megapixel digital camera
- GPS functionality
- Integrated text, multimedia, and instant messaging (IM)
- Tools to view and manage Microsoft Office and Adobe PDF files
- App Catalog, where you can download applications designed for your phone; select from an ever-expanding list of applications

Your Palm® Pre™ phone puts Palm's new multitasking, gesture-based operating system, the Palm® webOS™ platform, inside a small, beautiful device with a keyboard that you can slide out whenever you need it. Here are a few highlights of your new phone.

Gestures: On your Pre phone, you make calls, move around, and manage your applications and info by making simple gestures either on the touchscreen or in the gesture area directly beneath the screen. For more information, see [Use gestures: tap, swipe, drag, flick, pinch](#), and go to palm.com/support to see animations that demonstrate these gestures. Carry the Gesture Guide (included in the box with your Pre phone) around with you and you'll soon know all the gestures by heart.

Multitasking: You can have many applications open at once and easily move among them. Go to the Launcher to open apps. See the lineup of your open apps in Card view. Tap an app to bring it into the foreground and work with it. For more information, see [Open applications](#).

The Palm® Synergy™ feature: The Synergy™ feature on your Pre phone displays information from several sources in a single view, so you can access your info quickly, without having to remember where you stored it.

For example, suppose you have a Google account for personal email, contacts, and calendar events, and an Exchange account for your corporate email, contacts, and events. The Email, Contacts, and Calendar applications on your Pre phone all provide a kind of view in which you can see information from both of those accounts in one place—but even though the information is brought into one view, the sources of that information are kept separate. For more information, read about linked contacts, layered calendars, and the single inbox for your email in [Contacts](#), [Calendar](#), and [Email](#).

NOTE See [Online accounts available for webOS phones](#) for the current list of online accounts that you can set up on your phone and for information about the behavior of these accounts.

Thanks also to the Synergy feature, in the Messaging application, all your conversations with the same person are grouped together in one chat-style view. If you start an IM chat with Ed, for example, you can continue the same conversation when Ed signs out of IM by sending him a text message—and you can see it all in the same view. For more information, see [Messaging](#).

Universal search: Need to call Ed? Just slide out the keyboard and type **ed**. If he's listed in your Contacts, you can get his numbers from the search results. Tap a number and you've made the call. Search works just as fast when you need to search the web. For more information, see [Search to find info and make calls](#).

Sync: Your Pre phone gives you synchronization without a cable. You can sync with online services that Palm has partnered with so that you can store and sync your info in online accounts. You can access your data even when you are not able to make a connection to the web because a copy of your data is stored on the device.

Your Palm profile: When you set up your phone, you create a Palm profile. Your profile gives you access to services like automatic updates and automatic, frequent backups of any of your info that is stored only on your phone and isn't synchronized with an online account. (See [What is a Palm profile?](#))

WARNING Please refer to [Regulatory and safety information](#) for information that helps you safely use your phone. Failure to read and follow the important safety information in this guide may result in property damage, serious bodily injury, or death.

What's in the box?

All of the following items are included in the phone box:

Hardware



- Palm Pre phone and pouch
- USB cable
- AC charger
- 3.5mm stereo headset

Print material

- Getting Started Guide
- Gesture Guide
- Palm Warranty
- End User License Agreement

Where can I learn more?

- **On-device Help:** Read short how-tos and watch animations on your new phone.

To view all Help: [Open Help](#) .

To view **Help topics for a single application:** Open the application, open the [application menu](#), and tap **Help**.

- **Online support from Palm:** Visit palm.com/support to edit your Palm profile, watch how-to animations, learn about transferring data, and read comprehensive information about your phone.
- **Customer service from** your wireless service provider: For questions about your mobile account or features, contact your wireless service provider customer care.



Basics

You're about to discover the many things about your Palm® Pre™ phone that will help you better manage your life and have fun, too. As you become more familiar with your phone, you'll want to personalize the settings and add applications to make it uniquely yours.

But first, take the few easy steps in this chapter to set up your phone and get it running. Then learn about the key features that make moving around on your phone and accessing your information easy: gestures, menus, search, notifications, and more.

In this chapter

- 10 Get to know your phone
- 14 Set up your phone
- 15 Charge the battery
- 16 Turn the phone on/off
- 19 Use gestures: tap, swipe, drag, flick, pinch
- 24 Open applications
- 25 Work with applications
- 28 Enter and save information
- 32 Use the menus
- 33 Search to find info and make calls
- 35 View and respond to notifications
- 38 Use App catalog to shop for new applications
- 41 Copy files between your phone and your computer

Get to know your phone

Slide out the keyboard

- Hold the phone as shown below and gently push up.



Front view



- 1 Earpiece
- 2 Touchscreen: Tap and make other gestures directly on the screen. See [Touchscreen](#).
- 3 Volume
- 4 Gesture area: Make the back gesture and begin other gestures here. See [Use gestures: tap, swipe, drag, flick, pinch](#).
- 5 Microphone
- 6 Center button
- 7 Keyboard: See [Keyboard](#).
- 8 Charger/microUSB connector

TIP Be careful not to scratch, crush, or apply too much pressure on the touchscreen. Do not store your phone in a place where other items might damage it. When you pack your phone away, use the pouch to protect it. Do not use harsh chemicals, cleaning solvents, or aerosols to clean the phone.

Keyboard



- 1 **Orange key:** Press to enter numbers, punctuation, and symbols that appear above the letters on the keys (see [Enter alternate keyboard characters](#)), or to move the cursor (see [Text selection gestures](#)).
- 2 **Shift:** See [Enter uppercase letters](#) and [Text selection gestures](#).
- 3 **Space**
- 4 **Backspace**
- 5 **Enter:** Press to enter a line return (for example, in a memo or in an email message you are composing) or to accept information you entered in a field. See [Enter information in a field](#).
- 6 **Sym:** Press to enter symbols and accented characters that don't appear on the keys. See [Enter characters from the symbols table](#).

Touchscreen



- 1 **Application name:** Displays the name of the currently open application. Drag down over the app name to open the [application menu](#).
- 2 **Launcher:** See [Open an application in the Launcher](#).
- 3 **Scroll arrow:** Swipe up or down to see icons that are on the page but hidden.
- 4 **Quick Launch:** See [Open an application in Quick Launch](#).
- 5 **Connection icons:** Show the status of wireless service connections and battery strength (see [Icons in the title bar](#)). Drag down over the icons to open the [connection menu](#).
- 6 **Page indicators:** Show how many Launcher pages are to the right or the left of the currently displayed page. Swipe left or right on the screen to see other pages.
- 7 **Notification icons:** Show missed calls, new voicemail and email messages, and more. Tap the bottom of the screen to view notification details. See [View all your notifications](#).

Icons in the title bar

You can monitor the status of several items using icons at the top of the phone screen.

Table 1. Title bar icons and descriptions

Item	Description
	The battery is being charged.
	The battery is fully charged.
	The battery is low. See Charge the battery .
	Airplane mode is turned on. This means that the phone, Bluetooth® wireless technology feature, and Wi-Fi feature are off (incoming calls go to voicemail). See Turn wireless services off (airplane mode) .
	Wi-Fi is turned on. The number of filled-in bars denotes signal strength. See Wi-Fi .
	The phone is searching for a Wi-Fi network.
	The phone is on. The number of filled-in bars denotes signal strength. See Turn wireless services on .
	Your phone is connected to a 1x data network. Data is not currently being transmitted over the network. See I can't tell if data services are available .
	Your phone is connected to a 1x data network and data is being transmitted over the network.
	Your phone is connected to an EvDO data network. Data is not currently being transmitted over the network. See I can't tell if data services are available .
	Your phone is connected to an EvDO data network and data is being transmitted over the network.
	The phone is searching for a wireless service provider network.
	No wireless service provider network is available.

Table 1. Title bar icons and descriptions


Item	Description
	Bluetooth® wireless technology is turned on. See Bluetooth® wireless technology .
	A Bluetooth connection is in progress.
	A Bluetooth connection has been made.
	Your phone is performing a search on the characters you entered. If you are in Card view or the Launcher, your phone conducts a universal search (see Search to find info and make calls). If you are in an application such as Contacts or Memos, your phone searches for items within the app that match the search term you entered.
	Your phone is in roaming coverage. See Set roaming and data usage preferences .
	TTY is turned on. See Enable TTY/TDD .

Back view



- 1 Camera flash
- 2 Camera lens
- 3 Speaker

Top view

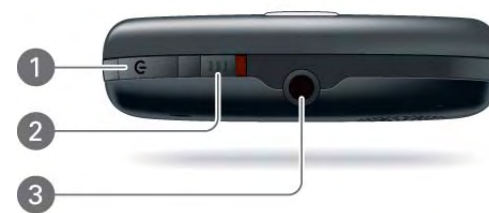

- 1 **Power:** Press to wake up or turn off the screen. Press and hold to turn wireless services on and off, replace the battery, or turn your device completely on and off. Turn your device completely off before you remove the battery.
- 2 **Ringer switch:** Slide to turn the ringer and notification sounds on or off. (Red means off.) The ringer switch does not affect music or video playback sounds.
- 3 **3.5mm headset jack.**

Bottom view



* Back cover release

Set up your phone

- 1 Press and hold the **power** button  on the upper-right corner of your phone until you see a logo on the screen (approximately five seconds). Please be patient while your phone starts up.

TIP If your phone does not turn on after you insert the battery and press and hold **power**, you need to connect your phone to the AC charger to charge it (see [Charge the battery](#)).

- 2 Follow the onscreen instructions to complete setup. To create a Palm profile, enter a working email address and a password (see [What is a Palm profile?](#)). Be sure to make a note of your password and keep it in a safe place.

NOTE If you have a Palm profile from an old webOS phone that you no longer use, you can enter that profile email address and username to download that profile information to your new phone. But if you are still using the other phone, you must create a new Palm profile for your XXX phone—you can't use the same profile on two phones.

IMPORTANT If you see a notification that an update is available, tap **Install Now** to install it. Palm periodically sends updates to enhance the applications and features on your phone.

Your phone is ready to use. To learn how to make your first call, see [Make calls](#).

Verify your profile

After you finish setup, look for an email on your computer at the address you used for your Palm profile. Click the link in the email to do the following:

- Verify your Palm profile.

- Follow a link to learn about getting data like contacts and appointments onto your phone from your desktop organizer software (see [Data transfer](#)).

TIP If you don't see the confirmation email in your Inbox, check your spam mail folder in your desktop email program.

What is a Palm profile?

Your Palm profile provides the following benefits:

- Automatic system and software updates are sent to your phone.
- A Palm profile account is automatically created for you on your phone. In this account you can store Contacts and Calendar info that you don't store in online accounts like Google or Exchange.

NOTE You cannot access Palm profile data on the profile website. You can access the data on your phone only.

- Info stored in your Palm profile account, as well as info you have in applications on your phone (like Memos and Tasks), is automatically backed up to servers administered by Palm.
- Should your phone be lost or stolen, you can do a remote erase of the info on the phone.

NOTE If you want to erase data on your phone while you are still in possession of the phone—for example, before you give it to someone else—don't do a remote erase. Instead, do a partial or full erase of the phone itself (see [Erase data and reset your phone](#)).

For detailed information about your Palm profile, see [Backup](#).

Although you create a Palm profile by entering a valid email address, setting up a Palm profile is different from setting up email on your phone. To set up email, see [Set up email](#). To change your Palm profile information after you have set it up, see [Update your Palm profile settings](#).

Charge the battery

When the battery is very low, the **battery**  icon in the upper-right corner of the screen changes to red. When the battery is fully charged, the icon appears full and changes to green .

WARNING Use only batteries and chargers that are approved by Palm with your phone. Failure to use a battery or charger approved by Palm may increase the risk that your phone will overheat, catch fire, or explode, resulting in serious bodily injury, death, or property damage. Use of unapproved third-party power supply accessories may damage the device and void the warranty for the product.

Although the battery may come with a sufficient charge to complete the setup process, we recommend that after setup you charge your phone until the battery  icon in the upper-right corner of the screen is full to ensure that the battery is fully charged.

See [Maximizing battery life](#) for tips on making your battery's power last longer.

- 1 On the right side of your phone, open the **charger/microUSB connector**. This is easier to do if you slide the keyboard out first.



- 2 Connect the small end of the **USB cable** to the **charger/microUSB connector**.



- 3 Connect the other end of the **USB cable** to the **AC charger**.
- 4 Plug the **AC charger** into a working outlet.

TIP You can also charge your phone battery by connecting your phone to your computer using the USB cable. Charging this way takes much longer than using the AC charger.

Maximizing battery life

Battery life depends on how you use your phone. You can maximize the life of your battery by following a few easy guidelines:

- Charge your phone whenever you can. Charge it overnight. The battery has a much longer useful life when it is topped off frequently than when it is charged after it is fully drained.
- Set your screen to turn off automatically after a shorter period of inactivity (see [Set the interval for turning the screen off automatically](#)).
- Keep your battery away from direct sunlight and other sources of heat. Temperatures over 45 degrees Celsius (113 degrees Fahrenheit) can permanently reduce the capacity and life span of any lithium-ion battery.
- As with any mobile phone, if you are in an area with no wireless coverage, your phone continues to search for a signal, which consumes power. Turn off your phone if you are outside a coverage area (see [Turn wireless services off \(airplane mode\)](#)).
- The fewer wireless connections you have, the less power is required of the battery. Turn on airplane mode when you don't need to be wirelessly connected. Airplane mode turns off your connection to your wireless service provider, and it also turns off Wi-Fi and Bluetooth. You can turn on Wi-Fi (see [Wi-Fi](#)) and Bluetooth (see [Bluetooth® wireless technology](#)) separately when airplane mode is on. You can also turn off GPS (see [Location Services](#)).
- If you set up an email account in the Email application, set the interval to automatically download email to every two hours or less frequently (see [Enter advanced account settings](#)).
- Lower the screen brightness (see [Change screen brightness](#)).
- Keep in mind that frequent use of instant messaging (IM) can reduce battery life.
- Turn the phone completely off if you won't be using it for an extended period of time (see [Turn everything \(the screen and wireless services\) on/off](#)).

- Buy an extra battery as a spare for periods of heavy use or long periods when you cannot charge your phone. To purchase batteries that are compatible with your phone, go to palm.com/store.

Turn the phone on/off

Your Pre phone's screen can be turned on and off separately from its wireless services (which are the Phone , Wi-Fi , and Bluetooth®  applications). This means you can wake up the screen to use just the organizer features of your device (Calendar, Contacts, Tasks, Memos, and so on) without turning on the phone and other wireless features. Also, when the screen is turned off, the phone can be on and ready for you to receive phone calls or messages.

Turn the screen on/off

Turn the screen on and leave the wireless services turned off when you want to use only the organizer features, for example, when you're on a plane and you must turn off all wireless services, but you want to look at your calendar.

To turn the screen on, do one of the following:

- Press **power** . Drag  up to unlock the screen.



* Power

- Slide out the keyboard.
- Press **Center** . This wakes up the screen only when the keyboard is slid out.

To turn the screen off, press **power** .

To save power, the screen dims automatically after a period of inactivity, then turns off. If you're on a call when the screen dims and turns off, the call is not affected. To brighten the screen if it has dimmed, tap the screen.

TIP You can set how long the screen stays on during a period of inactivity (see [Set the interval for turning the screen off automatically](#)).

Turn wireless services off (airplane mode)

Airplane mode turns off your phone as well as the Bluetooth® wireless technology and Wi-Fi features. Use airplane mode when you are on a plane or anywhere else you need to turn off all wireless services. You can still use apps like Calendar, Contacts, Photos, Music, Doc View, and PDF View.

Do one of the following:

- Tap the upper-right corner of any screen to open the connection menu. Tap **Turn on Airplane Mode**.
- Press and hold **power**  and tap **Airplane Mode**.

When your phone is in airplane mode, the airplane mode  icon appears at the top of every screen, and Airplane Mode appears in the upper-left corner of the screen in the Launcher, Card view, and Phone. Your phone is not connected to any mobile network.



TIP When your phone is in airplane mode, you can turn the other wireless features on individually. For Wi-Fi, see [Turn Wi-Fi on/off](#). For Bluetooth, see [Turn the Bluetooth feature on/off](#). To turn your phone back on, you must turn airplane mode off.

Turn wireless services on

When you turn on your phone, it automatically connects to your mobile network so that you can make and receive phone calls and use other wireless services (if supported by the local network).

- If airplane mode is turned on, you need to turn it off before you can connect to your mobile network. Tap the upper-right corner of any screen to open the connection menu. Tap **Turn off Airplane Mode**.

When your phone locates a signal, your wireless service provider appears in the upper-left of the screen in the Launcher, Card view, and Phone, and the signal-strength  icon appears at the top of the screen.



When you are inside a coverage area, the bars of the signal-strength  icon are filled in. If you're outside a coverage area, the bars in the signal-strength icon appear dimmed with an X.


Turn everything (the screen and wireless services) on/off

Usually, turning your phone off and/or putting it in airplane mode is sufficient for normal periods when you have the phone with you but you're not using it.

NOTE When you turn everything off, the phone's alarms, ringer, and notifications are also turned off.

On rare occasions, however, you may want to put your phone into deep sleep because you are not going to use it for an extended period. At those times, do one of the following:

- Press and hold **power** , and tap **Power**. Tap **Shut Down/Swap Battery**, and tap **Shut Down**.

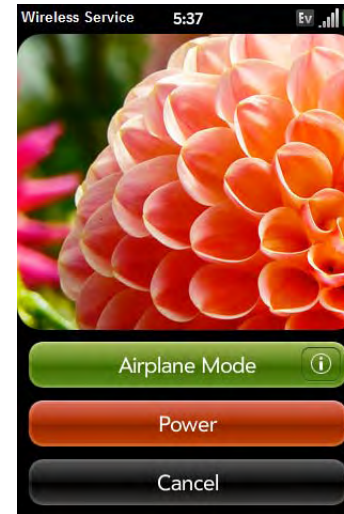

- **Open Device Info**  and tap **Reset Options**. Tap **Shut Down**, and tap **Shut Down** again.
- To turn both the screen and wireless services back on, press and hold **power** .

Use gestures: tap, swipe, drag, flick, pinch

Gestures are an important, basic part of your phone. They're easy to learn, and they make working with the phone fast. You make most gestures with one finger. For a few, you need two. Make gestures with the tip of your finger. Do not use your fingernail. Don't bear down.

To see short animations illustrating how to make gestures, go to palm.com/support or tap **Clips** in Help on your phone (see [Open applications](#) for information on how to open Help).

You make gestures in two areas on your phone: the touchscreen and the gesture area. The gesture area is the black area extending along the bottom of the screen.



* Gesture area

You also need to know about the Center button. Press the Center button to do the following:

- When you're working in an application, press Center to see Card view. Card view shows you all the applications that are currently open, displayed as a series of cards (small active windows).
- When you're in Card view, press Center to maximize the app in the center of the view.

Basic gestures

Tap: Tap with the tip of the finger—not the fingernail. Tap fast and firmly, and then immediately lift your fingertip off the screen. Don't bear down on what you're tapping. Don't wait for a response; the response comes after you lift your finger. Don't linger on the gesture; a tap takes a split second to do.



Swipe: A swipe is most often a horizontal gesture, from right to left or left to right. Do it fast, do it lightly. In a swipe, your fingertip just skims the surface of the touchscreen or gesture area.



One kind of swipe you'll use a lot: **Back**. Make the back gesture from right to left anywhere in the gesture area. Back takes you up one level from a detailed view to a more general view of the application you're working in. For example, when you finish reading an email message, make the back gesture to close the message and return to your list of messages. Or when you finish writing a memo, make the back gesture to close and save the memo and return to the display of all your memos. When you make the back gesture in an application and that's the only screen of that app that's open, you minimize the app and go back to Card view.

In Web, the back gesture performs the same function as the back button on the browser, allowing you to move back through previously viewed pages.



The **forward** gesture, available in Web only, is a swipe from left to right anywhere in the gesture area. The forward gesture allows you to move forward through previously viewed web pages.

Drag: Drag is the gesture you make for a slow scroll up and down, such as in a list, in a document, or on a web page. Slide your fingertip slowly along the surface—no need to bear down.



One kind of drag that you'll use a lot brings up **Quick Launch** when you're in an application. This drag gesture begins in the gesture area and ends on the touchscreen. As your fingertip slowly crosses the border between the gesture area and the touchscreen, it seems to drag Quick Launch into view. To open one of the apps in Quick Launch, move your finger to its icon. When you see the app name appear, lift your finger. The application opens.

You also make the drag gesture as part of a drag and drop.

Flick: As its name tells you, this is a quick gesture, great for scrolling long lists, documents, or pages. Do it fast, do it lightly; as with a swipe, your fingertip just skims the surface. The faster you flick, the faster and farther you scroll up or down a list.



To **close an application** in Card view, flick the card up toward the top of the touchscreen. This is called **throwing** the card off the top of the screen.

In some applications, such as Email and Messaging, you can throw a list item off the side of the screen to delete the item.

If an application is maximized, you can flick up from the gesture area to the screen to minimize the app and display Card view. This is the **up** gesture. If you make the up gesture when Card view is displayed, you open the Launcher.

Scroll gestures

Scroll a specific amount: Drag the screen in the desired direction.



Scroll fast: Flick the screen in the desired direction.



Stop scrolling: Tap or drag the screen while scrolling.



Zoom gestures

Zoom in/pinch out to increase the size of items on the screen in Email, Web, Photos, Doc View, PDF View, Google Maps: Place two fingers on the screen and spread them slowly apart.



Zoom out/pinch in to decrease the size of items on the screen in Email, Web, Photos, Doc View, PDF View, Google Maps: Place two fingers on the screen and bring them together.



Zoom in or out a fixed amount (Web, Photos): Double-tap the screen.



Text selection gestures

TIP See [Cut, copy, and paste information](#) and [Use the Copy All or Select All feature](#) for information on working with text you've selected.

Insert the cursor in a text field: Tap the location. See [Cut, copy, and paste information](#).



Move the cursor: Tap the location to insert the cursor. Press and hold the **orange**  key. Place your finger anywhere onscreen and drag your finger in the direction you want to move the cursor.



Select text when you can see a cursor: Tap the location to insert the cursor. Press and hold **Shift** . Place your finger anywhere onscreen and drag your finger in the direction you want to select text. Tap the highlighted text to deselect it.



Select a paragraph of text: When you cannot insert a cursor in the text—for example, on a web page or in an email you received—the smallest amount of text you can select is a whole paragraph. Press and hold **Shift** , and then tap a paragraph. Tap an adjacent paragraph to add it to your selection (you can't skip around). If you need to scroll down to select the next paragraph, release **Shift** , scroll, press **Shift** , and tap the paragraph. Tapping any part of the highlighted selection deselects it.

Drag and drop

Tap and hold the item, drag it, and then lift your finger to drop it. You get a visual cue that the item is ready to be dragged. For example, an icon in the Launcher is ready to be dragged when you see a halo around the icon. A card in Card view is ready to be dragged when it changes size and becomes transparent.



Delete a list item

Throw the item off the side of the screen. If prompted, tap **Delete** to confirm the deletion.



The delete gesture is available in applications such as Email, Messaging, Tasks, Music, and Bluetooth. If you can't delete a list item by throwing it, open the item and look in the [application menu](#) for a delete command.

TIP To delete multiple list items, throw each one off the screen. If you get the **Delete** confirmation prompt after throwing the first item, you don't need to tap it—just throw the second item, and the first deletion is confirmed automatically.

Open applications

You can have as many applications open at one time as you like, limited only by the amount of memory available on your phone at the time.

Open an application in Quick Launch

Quick Launch is the bar of five icons that is always available at the bottom of Card view and the Launcher. To open an application from Quick Launch, just tap the icon.



Quick Launch can display no more than five icons. By default it displays, from left to right, Phone, Contacts, Email, Calendar, and the Launcher. You can change the order of icons (except the Launcher icon) in Quick Launch

(see [Reorder Quick Launch icons](#)), or swap in whatever applications you like (see [Change the applications that appear in Quick Launch](#)).

NOTE If you have a notification or the dashboard is open (see [View and respond to notifications](#)), you need to dismiss them to access Quick Launch.

When an application fills the whole screen, make the following gesture to display Quick Launch and open one of its applications.

- 1 Drag up slowly from the gesture area to the screen.

NOTE Don't confuse this “drag up” with the up gesture, which is a flick up from the gesture area to the screen that displays Card view.

- 2 Move your finger to the application icon. When you see the app name appear, lift your finger. The application opens.



Open an application in the Launcher


The Launcher displays all your applications that are not on Quick Launch. The Launcher includes multiple pages, which you can organize to group apps the way you want (see [Reorder Launcher icons](#)).

- 1 Press **Center** , and tap .



TIP You can also open the Launcher by flicking up twice from the gesture area to the screen. If you are in Card view, just flick up once to open the Launcher

- 2 To find the app you want, swipe up or down to see all the icons on a page. Swipe left or right to see other pages.

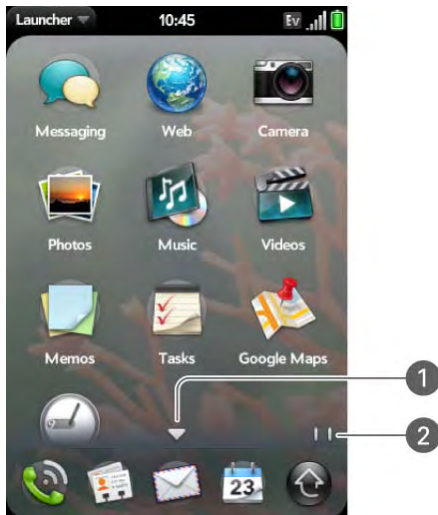

- 1 Arrow indicates that you can swipe up to see partially or fully hidden icons.
 - 2 Page indicators show that there are two Launcher pages to the right—swipe right to left on the screen to see them.
- 3 Tap the application icon.

To close the Launcher, do one of the following:

- Press **Center** .
- Tap .
- Make the up gesture: Flick up from the gesture area to the screen.

Open an application using search

- 1 Press **Center**  to open Card view.
- 2 Enter the name of the application.
- 3 When the application icon appears in the search results, tap it.

Work with applications

Go up one level in an app (back gesture)

The back gesture takes you up one level from a detailed level to a more general view of the application you're working in. For example, when you finish reading an email message, make the back gesture to close the message and return to your list of messages. Or when you finish writing a memo, make the back gesture to close and save the memo and return to the display of all your memos. When you make the back gesture in an application and that's the only screen of that app that's open, you minimize the app and go back to Card view.

To make the back gesture, swipe right to left anywhere in the gesture area.



Display all open applications (Card view)

Card view displays open applications as small cards, so that you can easily scroll through them and drag them to change their order.

When an application fills the screen and you want to go to Card view, press **Center** .



Move among open applications

- 1 In Card view (see [Display all open applications \(Card view\)](#)), swipe left or right on the screen to see other open apps.



- 2 Tap a card to maximize the application.

TIP You can also maximize the center card in Card view by flicking down from the screen to the gesture area.

TIP You can set a preference to move among open apps without first going to Card view (see [Turn advanced gestures on/off](#)).

Reorder open cards

- 1 In Card view (see [Display all open applications \(Card view\)](#)), tap and hold a card to further reduce the size of the cards.

TIP You can also tap anywhere on the screen around the cards to reduce the size of the cards.

- 2 Tap and hold a card, and after the card becomes transparent, drag it to another position.



Close an application

- In Card view (see [Display all open applications \(Card view\)](#)), throw the **card** off the top of the screen.



Change the applications that appear in Quick Launch

If Quick Launch contains five icons, you must remove an application from Quick Launch before you can add another one. You can remove any application except the Launcher.

- 1 Open the Launcher. Quick Launch appears at the bottom.

- 2 Tap and hold a **Quick Launch icon**, and after you see the visual cue appear around the icon, drag it onto the Launcher.



- 3 Tap an **icon** in the Launcher, and after the visual cue appears around the icon, drag the icon onto the Quick Launch bar.

Reorder Quick Launch icons

You can change the position of any Quick Launch icon except the Launcher icon.

- 1 In Card view, tap and hold a **Quick Launch icon**.
- 2 After a halo appears around the icon, drag it to another location.



Reorder Launcher icons

- 1 In the Launcher, tap and hold an **icon**.
- 2 After the halo appears around the icon, drag it to another location.
- 3 To move the icon to another page, drag it to the left or right edge of the screen. Don't release the icon until the new page appears.



Delete an application

You can delete applications that you installed on your phone.

- 1 While pressing and holding the **orange**  key, tap the app icon.
- 2 Tap **Delete**.

TIP You can also delete an application you installed by opening the Launcher, opening the [application menu](#), and tapping **List Apps**. On the list of applications, tap and hold an app name or throw the app off the side of the screen, and then tap **Delete**.

Enter and save information

Use the keyboard



- 1 Orange button: Press to enter numbers, punctuation, and symbols that appear above the letters on the keys (see [Enter alternate keyboard characters](#)), or to move the cursor (see [Text selection gestures](#)).
- 2 Shift: See [Enter uppercase letters](#) and [Text selection gestures](#).
- 3 Space
- 4 Backspace
- 5 Enter: Press to enter a line return (for example, in a memo or in an email message you are composing) or to accept information you entered in a field. See [Enter information in a field](#).
- 6 Sym: See [Enter characters from the symbols table](#).

Table 2. Symbols and accented characters

Press Sym  and press...	to select...
l or L	‘ ’ , “ ”
m or M	μ
n or N	ñ Ñ ¿
o or O	ó ò ô õ æ ð ø Ó Ò Ö Õ Œ Ñ Ø ² “ ” „ < > « »
p or P	¶ ~ \ ` • ÷ ^ [] { } < > « » Ø μ
q or Q	\ ~
r or R	® ²
s or S	ß š Š ~ \ ` • ÷ ^ [] { } < > « » Ø
t or T	™ ³ ¾
u or U	ú û ü û Ú Û Ü Û [] { } < > « »
v or V	^
w or W	÷ ^ ±
x or X	x □
y or Y	ÿ ý Ÿ ŷ ¥ [] { } < > « »
z	ž Ž •
, or _	~ \ ` • ÷ ^ [] { } < > « » Ø μ
.	... ~ \ ` • ÷ ^ [] { } < > « » Ø μ
@	° • Ø

Enter information in a field

You can enter information in a field by typing or by pasting previously copied information (see [Cut, copy, and paste information](#)).

Applications with text fields support the auto-correct feature. If the app recognizes a common misspelling, it auto-corrects the word. To cancel the auto-correction, press **Backspace** .

To accept the information you entered, do one of the following:


- Tap outside the field.
- Press **Enter** . If a screen contains multiple fields, pressing Enter accepts the information you just entered and jumps the cursor to the next field.
- When you are done entering information on the screen containing the field, make the back gesture to accept the information and back out of the screen (see [Go up one level in an app \(back gesture\)](#)).


Select items in a list

Lists enable you to select from a range of options. Lists are different from menus (see [Use the menus](#)), which give you access to additional features.

Lists are hidden until you tap the currently displayed option for that list.

- 1 Tap the currently displayed option to open the list. For example, when creating a new event in Calendar, tap **No Reminder** to display the list of reminder options.

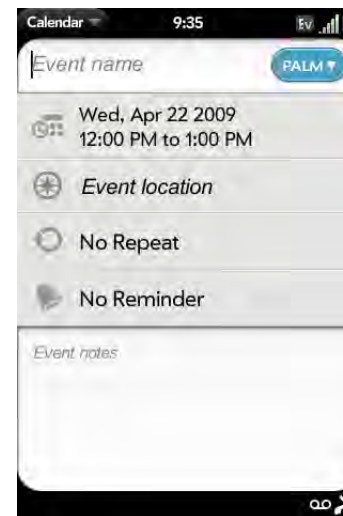

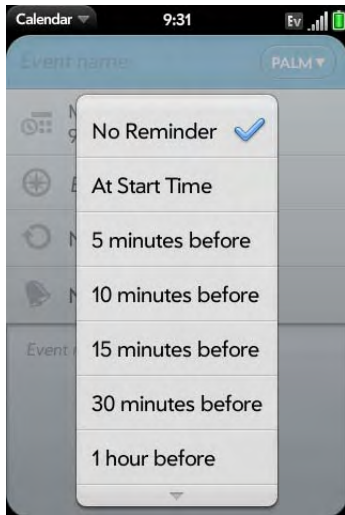

- 2 Tap the list item you want.

Cut, copy, and paste information

You can copy any selectable text, and you can cut any selectable text that you yourself entered, for example, in a memo or an email. This includes text you can select by dragging the cursor and paragraphs you can select by tapping them (see [Text selection gestures](#)).

- 1 Select the text you want to cut or copy (see [Text selection gestures](#)).
- 2 Open the [application menu](#) and tap **Edit > Cut** or **Copy**.
- 3 Open the app and insert the cursor where you want to paste the text (see [Text selection gestures](#)).
- 4 Open the [application menu](#) and tap **Edit > Paste**.

TIP You can also use keyboard shortcuts to cut, copy, and paste. After selecting the text or inserting the cursor, press and hold the gesture area until a light appears under the surface of the gesture area, and press **X** (cut), **C** (copy), **V** (paste), or **A** (copy/select all, in the apps that support this feature).

Use the Copy All or Select All feature

Some applications offer a Copy All menu option. For example, in Messaging, you can start or open a conversation, open the [application menu](#), and tap **Edit > Copy All**. This saves the entire conversation as plain text, which you can paste in a memo, email message, and so on.

Other apps offer a Select All menu option. For example, in Memos, you can open a memo, open the [application menu](#), and tap **Edit > Select All**. This highlights the full memo text, which you can cut or copy.

Some apps offer both the Copy All and Select All features to perform different text-selection tasks:

- **Email:** In an open email message in Email, use Copy All to copy the entire message (including header info such as sender, recipient, and subject), or use Select All to select just the message body text.
- **Contacts:** On the contact details screen, use Copy All to copy the contents of the contact entry as plain text; or, on the contact edit screen, insert the cursor in a field and use Select All to highlight the contents of that field.

Save information

- On most screens, your information is saved automatically. Just make the back gesture to close the screen (see [Go up one level in an app \(back gesture\)](#)), and your info is saved at the same time.
- Your info is also saved if you minimize an app screen to a card and throw the card off the top of the screen to close the app.
- On screens with a Done button, tap **Done** to save your information.

Use the menus

Most applications have an application menu hidden in the upper-left corner, which provides access to additional features. There is also a connection menu hidden in the upper-right corner, which provides access to wireless services.

Some applications have additional menus. For example, in Photos, tap an open picture and tap  to display a menu of tasks you can do with the picture (see [Photos](#)).

To get the most out of your phone, it's a good idea to familiarize yourself with the additional features available through the menus in various applications.

Open the application menu

The application menu contains items for the application you are working in, such as Cut and Copy, Preferences, Help, and other application-specific commands.

1 Do one of the following:


- Tap the application name in the upper-left corner of the screen.



- Drag down from the upper-left corner of the phone (above the screen) onto the screen.



- 2 Tap a menu item to open it. If a menu item displays a right-pointing arrow , tap the item to display the submenu for that item—for example, tap the **Edit** menu item to display the submenu containing Cut, Copy, and Paste items. If you see a downward-pointing arrow  at the bottom of the menu, scroll down to see additional menu items.

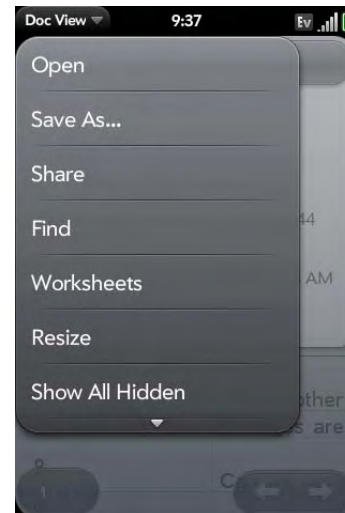

Open the connection menu

The connection menu lets you manage wireless services—the phone, Bluetooth® wireless technology, and Wi-Fi.

DID YOU KNOW? The connection menu also displays the current day and date and the battery charge level.

1 Do one of the following:

- Tap the upper-right corner of the screen.



- Drag down from the upper-right corner of the phone (above the screen) onto the screen.




2 Tap a menu item to turn that wireless feature on or to display a list of menu items for that feature (see [Turn wireless services off \(airplane mode\)](#) for more information). If you see a downward-pointing arrow at the bottom of the menu, scroll down to see additional menu items.

Search to find info and make calls

Use universal search

You can search for contacts and applications on your phone, or search the web.

- 1 Open Card view (see [Display all open applications \(Card view\)](#)) or the Launcher (see [Open an application in the Launcher](#)).
- 2 Begin typing the search term or keyword (see [Universal search application keywords](#)). As you type, search displays any contact names and application names that match the character, or application names that are associated with the keyword (see [Universal search application keywords](#)). As you continue typing, the search results narrow.

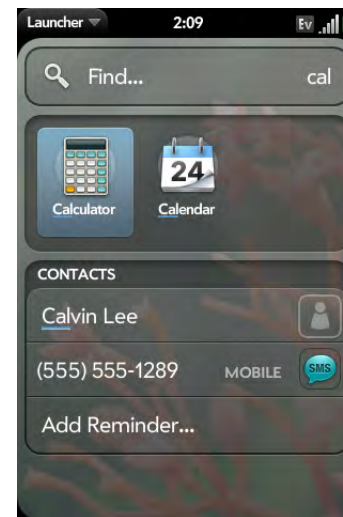

TIP You can also start a search by copying text in another application, opening the Launcher, and pasting the text. The text appears at the top of the screen as the search term. Note that you can't paste text in Card view.

3 Do one of the following:

- To look up or get in touch with someone: Tap a contact name to open the person's contact information. Tap a phone number to dial it, an email address to send a message, and so on. If only the contact name is displayed, tap the name to display ways to get in touch. You can also tap **Add Reminder** to add a reminder message to the contact (see [Assign a reminder message to a contact](#)).
- To perform a web search: Tap the search term you entered to open a list of web search options, and tap the option. If your search returns no contacts or applications, the web search options are displayed automatically.
- To open an application: Tap the application.

Universal search application keywords

If you don't know the name of the app you are searching for, you can enter a keyword associated with the app. This table shows the keywords you can use to find an app on your phone.

Table 3. Universal search application keywords

Application name	Keywords
App Catalog	Store
Backup	Settings, Preferences
Bluetooth	Settings, Preferences, Wireless
Calendar	Datebook, Meetings, Events
Clock	Alarm, Time, Watch
Contacts	Addresses, People
Date & Time	Clock, Settings, Preferences
Device Info	Settings, Preferences, Reset
Doc View	Word, Excel, PowerPoint
Email	Mail
Google Maps	Maps

Table 3. Universal search application keywords

Application name	Keywords
Location Services	Settings, Preferences
Memos	Notes, Stickies, Notepad
Messaging	Text, SMS, MMS, IM, Instant Chat
Music	Songs, Tunes, Audio
PDF View	Acrobat
Phone	Dial
Photos	Pictures
Regional Settings	Settings, Preferences
Screen & Lock	Wallpaper, Security, Desktop, Brightness, Unlock, Gestures, Settings, Preferences
Sounds & Ringtones	Audio, Music, Volume, Vibrate, Silent, Settings, Preferences
Tasks	To Do, Todos, Checklist
Updates	Settings, Preferences
Videos	Movies
Web	Browser, Blazer, Internet
YouTube	Videos, Movies

Search within an application

In applications such as Contacts, Memos, Doc View, and PDF View, you can search for entries or files. From the list view, enter the file name; a few words from a memo; or a contact name, initials, address, or number. See the individual application sections for details.

You can also enter a search term in the Help application to search for help content related to the term.

View and respond to notifications

Respond to a notification

Notifications show up at the bottom of the screen to notify you of new voicemail and messages, upcoming appointments, missed calls, and more.



Do one of the following:


- Tap the notification to act on it.
- For some types of notifications, throw the notification off the side of the screen to dismiss it.

TIP By default, if a notification arrives when the screen is off, the gesture area light pulses. You can turn this feature off (see [Get notifications when the screen is off](#)).

View all your notifications

For most types of notifications, if you do not tap a notification after a few seconds, it becomes an icon in the lower-right portion of the screen.

- 1 Tap anywhere on the bottom of the screen to display your notifications.

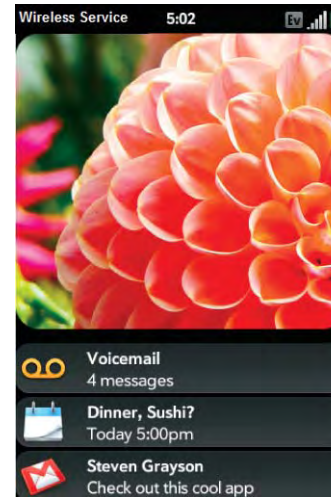

- 2 Tap a notification to act on it. If a notification icon has a number next to it, the number indicates how many items are included in the notification—how many voicemail or email messages you have, and so on.

Some notifications give you multiple options. For example, on a calendar notification, tap the calendar icon to open Calendar in Day view with the event displayed, or tap the event name to open the event details screen. A missed call notification gives you options to call the number, view and call alternate numbers for a contact, send a text message, view a contact entry, or add a number to Contacts.

Reorder notifications and other dashboard items

The area that displays all of your notifications (see [View all your notifications](#)) is called the dashboard.

- Tap and hold a dashboard item, and then drag it to a different location.
- Throw a dashboard item off the side of the screen to dismiss it.

Update the software on your phone

Palm continually provides updates to your phone's operating system. Update notifications are sent to your phone automatically when a system update is available (see [Respond to a system software notification](#)). When you update your phone's operating system, your personal information and files are not affected. In addition to receiving update notifications, you can manually check for operating system updates at any time (see [Manually check for system updates](#)).

What's more, both Palm and many application developers make updates available for applications you have installed on your phone. You can check in App Catalog at any time for application updates (see [Update downloaded applications](#)).

In addition to receiving update notifications, you can manually check for software or application updates at any time (see [Manually check for system updates](#)).

Respond to a system software notification

When you get a notification that a system update is available, do one of the following:

- Tap **Install Now** twice. When installation is complete and the phone resets, tap **Done**.
- Tap **Install Later**. The next time you charge your phone, you receive another update notification. You can again choose whether to install the update now or later. You have ten minutes to decide; otherwise, the update installs automatically.

NOTE You can use your phone while updates are being downloaded, but you cannot use your phone to make calls (including emergency calls) while updates are being installed.

IMPORTANT Do not remove the battery while updates are being installed.


Here is some additional information about system updates:

- If you have Wi-Fi turned on and the battery has at least a 30% charge, your phone automatically downloads a system update if one is available—you don't have to do anything. If Wi-Fi is not turned on when the update becomes available, the Palm servers continue to check your device for Wi-Fi availability for two days.
- If you do not have Wi-Fi turned on anytime within two days of an update's becoming available, your phone automatically downloads the update over your wireless service provider's network as long as the battery has a 30% charge and you have an EvDO data connection, as indicated by the  icon at the top of the screen.
- If the battery has less than a 30% charge, you must charge the battery before you can download or install an update.


- To avoid roaming charges, updates are not downloaded if your phone is in roaming coverage.
- If you do not install an update immediately after downloading it, you are prompted to install the update the next time you charge your phone. You can choose whether to install the update now or later. You have ten minutes to decide; otherwise, the update installs automatically.

Manually check for system updates

1 Open Updates .

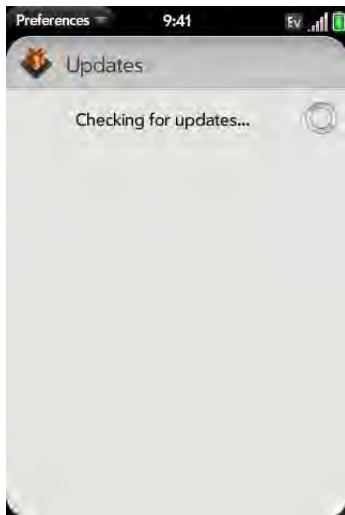

2 If a message appears stating that a system update is available, do the following:

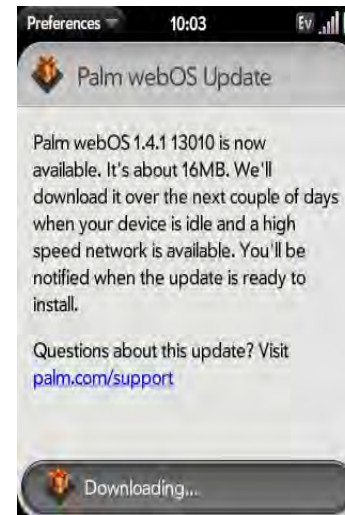

- Tap **Download Now**.
- When prompted, tap **Install Now**.
- After installation has finished and the phone resets, tap **Done**.

IMPORTANT Do not remove the battery while updates are being installed.

NOTE After you download the Palm webOS 1.4.0 update, you can download future updates over a 1xRTT connection, as indicated by the **1x** icon at the top of the screen. Tap **Updates** and then tap **Download Now**.

Use App catalog to shop for new applications

Browse applications in App Catalog


Use App Catalog to browse and download any of the many applications available for your phone. App Catalog contains both free apps and apps you can buy.

NOTE Applications you installed on your old Palm OS® by ACCESS or Windows Mobile smartphone do not work on your Pre phone because your Pre phone uses the new Palm® webOS™ platform. Check App Catalog for a new version of your old favorites. Or purchase the Classic app from App Catalog. Classic enables you to run Palm OS applications on your Pre phone.

- 1 **Open App Catalog** .
- 2 Review the terms of use and tap **Accept**.
- 3 Swipe right or left on the thumbnails to see featured and popular applications, or do one of the following:
 - To search by name: Tap **Search**, enter the search term, and press **Enter** .
 - To search apps by category: Tap **Explore**. Tap  to see a list of categories. Tap  to see a tag cloud.

DID YOU KNOW? In a tag cloud, categories that have more items or more popular items appear in a larger font size, giving you a visual clue as to which categories you might want to explore.

- To find the most recently added apps: Tap **Recent**.
- To find the most popular apps: Tap **Popular**.

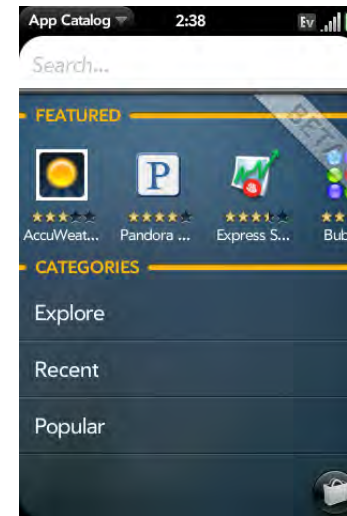

- 4 (Optional) To sort the list of applications or to browse results by date, name, rating, or price, tap one of the icons at the bottom of the screen, and tap a sort icon.
- 5 When the app you want appears, tap the name to display app details.

- 6 On the app details screen, do any of the following:



- Tap a screenshot to see a larger view.
- Tap **Reviews** to read all reviews.
- Tap **Share** and then tap **Email** or **Text Message** to share info about an app with a friend.
- Tap **Developer Website** to go to the app developer's home page.
- If available, tap **Support** to go to the developer's product support page.

Download a free application

BEFORE YOU BEGIN Before you download an app, make sure you have enough storage space on your phone to fit the app. [Open Device Info](#) and look at the **Available** field under **Phone**.

- 1 [Open App Catalog](#) .
- 2 Find a free app you want (see [Browse applications in App Catalog](#)).
- 3 Tap the app name, and then tap **Download for free**.

- 4 If the application uses Location Services a notification appears (see [Location Services](#)). Tap **Continue**.
- 5 To open a downloaded app, tap **Tap to Launch**. The app also now appears as an icon on the first page of the **Launcher**, so you can open it from the **Launcher** as well.

Buy an application

BEFORE YOU BEGIN Before you download an app, make sure you have enough storage space on your phone to fit the app. [Open Device Info](#) and look at the **Available** field under **Phone**.

- 1 [Open App Catalog](#) .
- 2 Browse to the app you want (see [Browse applications in App Catalog](#)).
- 3 Tap the app name, and then tap **Download for [amount]**.
- 4 If the application uses Location Services, a notification appears (see [Location Services](#)). Tap **Continue**.
- 5 Do one of the following:
 - To buy the app: If required, enter your Palm profile password to authorize the purchase and tap **Continue**.
 - To set up a billing account: Tap **Continue**, enter your Palm profile password, and tap **Continue**. See [Set up a billing account](#).If you enter an incorrect Palm profile password three times, a message appears that explains how you can contact Customer Support for help.
- 6 Tap **OK**.

DID YOU KNOW? After you purchase an application, you can tap **Reviews** on the app details screen to see reviews from others. Or, on the Reviews screen, tap **Review** to write a review.

- 7 To open a downloaded app, tap **Tap to Launch**. The app also now appears as an icon on the first page of the Launcher, so you can open it from the **Launcher** as well.

TIP If you delete a purchased application you can reinstall it without paying for it again (see [Manage applications](#)).

Manage applications

- 1 [Open App Catalog](#) .
- 2 Tap  and tap **Applications**.
- 3 Tap the app name.
- 4 Do one of the following:
 - To report a problem with an application: Open the [application menu](#) and tap **Report A Problem**.
 - To share info about an app: Tap **Share** on the app details screen and then tap **Email** or **Text Message**.
 - To delete an application: Open the [application menu](#), tap **Delete Application**, and then tap **Delete**.
 - To reinstall a deleted application: Search for the application (see [Browse applications in App Catalog](#)). Tap the app name and tap **Download again for free**. You do not need to buy the app again.

Update downloaded applications

- 1 [Open App Catalog](#) .
- 2 Tap .
- 3 Tap **Updates**. The list shows apps that have an available update.
- 4 Tap an app name and tap **Update Available**.

- 5 To launch the updated app, tap **Tap to Launch**.

Set up a billing account

- 1 [Open App Catalog](#) .
- 2 Do one of the following:
 - Tap an app you want to buy, and tap **Continue**.
 - Open the [application menu](#), tap **Preferences & Accounts**, and tap **Add Account**.
- 3 Enter your Palm profile password and tap **Continue**.

NOTE If you enter an incorrect Palm profile password three times, a message appears that explains how you can contact Customer Support for help.

- 4 Select a credit card, enter details of your credit card and billing address, and tap **Submit**.

IMPORTANT Your credit card details are not stored on your phone. They are encrypted and stored in your Palm profile.

- 5 Tap **OK** to verify your email address. Purchase receipts are sent to this address. Tap **Change This Address** if you want to change the email address.
- 6 In **Password is Required**, select one of the following:

Once every 4 hours: You must enter your password the first time you make a purchase. If you make any other purchases within four hours, you don't need to enter your password again. After four hours, you enter your password again for the first purchase, which starts a new four-hour clock.

Every Purchase: You must enter your password for each purchase, regardless of the time interval.

Update or delete a billing account

- 1 [Open App Catalog](#) .
- 2 Open the [application menu](#) and tap **Preferences & Accounts**.
- 3 Tap your account name.
- 4 Enter your Palm profile password and tap **Continue**.
- 5 Do one of the following:
 - Edit the account information: Change the information as needed and tap **Submit**.
 - Delete the account information from your phone: Tap **Remove Account**.

Copy files between your phone and your computer

Copy files and folders using USB Drive mode

You can copy any type of file from a computer to your phone, and from your phone to your computer, by putting your phone in USB Drive mode.

After you copy a file to your phone, you can open the file if your phone has an application that supports the file type. You can open many file formats for photos, videos, and music; Microsoft Office files; and PDF files. You can also copy ringtones that you download from your computer's web browser.

IMPORTANT All files that you store on the USB Drive of your phone are not backed up to your Palm profile, and they cannot sync to any of your online accounts. So be sure to keep a copy of all such files somewhere besides your phone just in case you lose your phone or you must do a full erase of the info on your phone.

When your phone is in USB Drive mode, you can't make or receive calls or use other wireless features such as email or the web.

BEFORE YOU BEGIN Before you copy files from your computer, make sure you have enough storage space on your phone to fit the file. [Open Device Info](#) and look at the **Available** field under **Phone**.

- 1 Connect your phone to your computer using the **USB cable**.
- 2 On your phone, tap **USB Drive**. On your computer, your phone appears as a removable drive.
- 3 On a Windows computer, if the Found New Hardware wizard opens, click **Cancel** to close the wizard.
- 4 Open **My Computer** (Windows XP), **Computer** (Windows Vista/Windows 7), or **Finder** (Mac), double-click the drive representing your phone, and drag and drop files to your phone. The drive displays folders that you can use to organize the files you copy. You can also create your own folders.
- 5 On a Windows computer, to end the connection safely, right-click the drive representing your phone and click **Eject**. On a Mac computer, from your desktop, drag the drive representing your phone to the **Trash**. Trash changes to **Eject**.
- 6 Disconnect the **USB cable** from the computer and the phone when the USB drive screen is no longer displayed on your phone.

TIP If you use iTunes 9.0.1 or earlier, you can synchronize non-DRM photos, videos, and music files from your computer to your phone using Media Sync mode (see [Enable media sync](#)).

Delete files and folders using USB Drive mode

When your phone is in USB Drive mode, you can't make or receive calls or use other wireless features such as email or the web.

- 1 Connect your phone to your computer using the **USB cable**.
- 2 On your phone, tap **USB Drive**. On your computer, your phone appears as a removable drive.
- 3 On a Windows computer, if the Found New Hardware wizard opens, click **Cancel** to close the wizard.
- 4 Open **My Computer** (Windows XP), **Computer** (Windows Vista/Windows 7), or **Finder** (Mac), double-click the drive representing your phone, and delete the files or folders.
- 5 On a Windows computer, to end the connection safely, right-click the drive representing your phone and click **Eject**. On a Mac computer, from your desktop, drag the drive representing your phone to the **Trash**. Trash changes to **Eject**.
- 6 Disconnect the **USB cable** from the computer and the phone when the USB drive screen is no longer displayed on your phone.

If, however, you prefer to leave your personal data on your computer and sync it directly with the data on your phone, there are third-party solutions (sold separately) available to enable you to do that. For more information, go to palm.com/sync-solutions.

Copy music, photos, and videos using third-party software

Besides using USB Drive mode to copy your photos, videos, and DRM-free music from your computer to your phone, you can also use solutions available from third-party software developers (sold separately) that facilitate the transfer of media files to your phone. For more information, open the browser on your computer and go to palm.com/sync-solutions.

KEY TERM DRM-free: Describes a file that is not protected by Digital Rights Management. DRM-free music files can be copied as many times as you like and can be played on your Pre phone.

Sync personal data using third-party software

You can set up online accounts like Google and Exchange to sync your contacts (see [How do I add names and other info into Contacts?](#)) and calendar events (see [How do I get events into Calendar?](#)).



Data transfer

If you have data such as contacts or calendar events in a desktop organizer such as Palm® Desktop software by ACCESS or Microsoft Outlook®, you can transfer that data to your Palm® Pre™ phone.

From a Windows computer, you can transfer contacts, calendar events, tasks, and memos/notes from Palm Desktop software by ACCESS version 6.2 and Microsoft Outlook 2003 or later. From a Mac computer, you can transfer contacts, calendar events, and tasks from Address Book and iCal.

In this chapter

- 44 Data transfer overview
- 44 How do I get data from my old phone?
- 44 How do I get data off my computer?
- 46 I'm already using Google, Facebook, Yahoo! and/or Microsoft Exchange. How do I sync data?
- 46 I want to keep using my current desktop app and sync with an online account on my phone
- 47 I don't need to sync, but I do want a copy of my data backed up somewhere besides my phone
- 47 I'd rather sync directly with my computer

Data transfer overview

While you have many options for transferring data, Palm recommends that you take advantage of the Palm® Synergy™ feature by putting your data in an online account—for example, if you don't have a Google account, we recommend that you create one and store your data there (see [How do I add names and other info into Contacts?](#), [How do I get events into Calendar?](#), and [How do I send and receive email on my phone?](#)).

If you don't want to sync with an online account, there are other ways to get data on your phone. See [I'd rather sync directly with my computer](#).

Consider carefully whether you want to be able to access and change your data somewhere besides your phone. If you do, do you prefer the other means of access to be a website (for example, Google), or to be software that is installed on your computer? In either case, you can set things up so that you can synchronize new or changed data between your phone and the other data location.

You can also decide not to have a sync setup for your data, in which case you can use your Palm profile to back up your data (see [Backup](#)). You can't access this data anywhere but on your phone. However, your data is backed up, and in an emergency (such as a lost or stolen device), you can remotely remove the data on your lost or stolen phone and restore it to a new Pre phone.

How do I get data from my old phone?



Do you want to sync your personal information between your Pre phone and Google or Exchange, but first need to get your data out of an old phone that you want to stop using? You can do a one-time, one-way export of data to your Pre phone, and then if you choose to, use the Synergy feature to sync the data to Google or Exchange.

- 1 On your computer, set up an account on the Google website (go to [gmail.com](#)) or with Microsoft Exchange (speak to an IT person at your company).
- 2 Open **Contacts**  on your Pre phone.
- 3 Enter your username and password for the Google or Exchange account.

NOTE You don't have to go to Calendar to set up your account there—that's done automatically using the username and password you enter in Contacts.

- 4 Go to one of the stores of your wireless carrier and ask a support agent for help in transferring data from your old phone. When you're ready to transfer data from your old phone, be sure to tell the agent which account to transfer the data to.

How do I get data off my computer?



Do you want to sync your personal information between your Pre phone and Google or Exchange, but first need to get the data out of a desktop app that you want to stop using? You can do a one-time, one-way export of data

to your phone, and then if you choose to, sync the data to Google or Exchange.

- 1 On your computer, set up an account on the Google website (go to gmail.com) or with Microsoft Exchange (speak to an IT person at your company).
- 2 Open **Contacts**  on your Pre phone.
- 3 Enter your username and password for the Google or Exchange account.

NOTE You don't have to go to Calendar to set up your account there—that's done automatically using the username and password you enter in Contacts.

- 4 To transfer data from a desktop app that you want to stop using, go to palm.com/migrate-pre for more information about the Data Transfer Assistant (DTA)—it's a free download from Palm.

About the Data Transfer Assistant (DTA)

The DTA enables you to do a one-time, one-way export of data from selected desktop apps to your Pre phone through the USB cable included with your phone. After the data is on your phone, you can select the account you want to import the data to.

IMPORTANT The DTA is not synchronization software. It is meant to be used once per desktop app, to export your info from the desktop app to an account on your phone.

These are the desktop apps that the DTA works with, and the data that the DTA transfers to your phone:

Table 1. DTA: application data transferred

Operating system	Desktop application	Contacts	Calendar	Tasks	Memos/notes
Windows XP, Vista®, or 7 (32bit or 64bit)	Outlook 2003 or later	Yes	Yes	Yes	Yes
	Palm Desktop v6.2.2	Yes	Yes	Yes	Yes
Mac OS 10.5	Address Book	Yes			
	iCal		Yes	Yes	

Note the following:

- Depending on the amount of data you are transferring, it can take up to an hour to transfer data with the DTA.
- On Vista, only Outlook 2007 is supported.
- If you have an earlier version of Palm Desktop, you can download version 6.2.2 for free from palm.com/desktop. Install it, sync with your old Palm device, and then use the DTA to transfer your data.
- Do you use Palm Desktop on the Mac? Don't worry, you can export your contacts, calendar events, and tasks into Address Book and iCal. Then use the DTA to transfer your data. For more information, go to palm.com/migrate-pre.

I'm already using Google, Facebook, Yahoo! and/or Microsoft Exchange. How do I sync data?



If you are already using Google, Facebook, Yahoo!, and/or Exchange to manage your calendar and contacts, then all you need to do to sync data to your phone is set up one or more of these accounts on your phone. The data syncs automatically.

Table 2. Online account sync table

Set up your Pre phone to sync with...	To sync this data...
Google	Contacts and calendar events
Exchange	Contacts, calendar events, and tasks
Yahoo!	Contacts and calendar events
Facebook	Contacts and calendar events

NOTE Changes you make in your Yahoo! or Facebook account on the web show up on your phone. There's nothing you have to do. Contacts and calendar events you add or change on your phone, however, do not automatically update your Yahoo! or Facebook account on the web.

- 1 [Open Contacts](#) .
- 2 Enter your account credentials for your Google, Facebook, Yahoo!, or Exchange account. See [Use Contacts for the first time](#).

NOTE You don't have to go to Calendar to set up your account there—that's done automatically using the credentials you entered in Contacts.

I want to keep using my current desktop app and sync with an online account on my phone



If you want to continue using a desktop app to store your contacts, calendar events, and tasks—iCal and Address Book on the Mac, or desktop Outlook® or Palm® Desktop by ACCESS on Windows—consider adopting this solution.

Download and install a third-party application (sold separately) that can sync your desktop app to Google. Your desktop app syncs with your Google account, and your phone also syncs with Google.

- 1 On your computer, set up an account on the Google website (go to [gmail.com](#)).

- 2 **Open Contacts**  on your Pre phone.
- 3 Enter the account credentials for your Google account.

NOTE You don't have to go to Calendar to set up your account there—that's done automatically using the username and password you enter in Contacts.

- 4 Install a third-party application on your computer that enables you to sync with Google. Go to palm.com/migrate-pre to learn about available third-party sync solutions.
- 5 Follow the instructions of the third-party app to sync the data in your desktop app with Google. The next time Google syncs with your phone, your data appears on your phone.

I don't need to sync, but I do want a copy of my data backed up somewhere besides my phone

Use the Data Transfer Assistant to move your data into your Palm profile account. For information on your Palm profile account, see [Backup](#).



I'd rather sync directly with my computer



Would you rather sync your Pre phone directly to your computer without going through the web? Download a third-party application (sold separately) that enables synchronization of your phone and your desktop app.

- 1 Go to palm.com/migrate-pre to learn about third-party applications that enable you to sync your phone with your computer using Wi-Fi.
- 2 Follow the instructions given by the third-party vendor to install the app on your computer.

NOTE You may also have to install another part of the application on your phone. Follow the instructions of the third-party vendor.



Phone

You can effectively manage multiple calls. You can answer a second call, swap between calls, and set up a three-way conference call. You can also work with other applications while on a call. Your Palm® Pre™ phone helps you to do all these tasks with ease.

In this chapter

- 50 Make calls
- 52 Receive calls
- 53 Use voicemail
- 54 What can I do during a call?
- 57 What's my number?
- 57 View your call history
- 58 Save a phone number to Contacts
- 58 Use a phone headset
- 59 Customize phone settings

Make calls

For information on turning the phone off and back on, see [Turn the phone on/off](#).

Dial using the onscreen dial pad

The onscreen dial pad is useful when you need to dial numbers that are expressed as letters and when you need large, brightly lit numbers that you can tap.

- 1 [Open Phone](#) .
- 2 Tap the dial pad numbers to enter the number.



- 3 Tap  to dial.

TIP Press **Backspace** or tap the onscreen backspace icon (to the right of the number you enter) to delete numbers you've entered one at a time. Tap and hold the icon to delete all the numbers.

TIP You can paste numbers copied from other applications—for example, from an email message or a memo—into the dial pad.


TIP To enter +, tap and hold **0** onscreen.

Dial by contact name using universal search

- 1 Open Card view (see [Display all open applications \(Card view\)](#)) or the Launcher (see [Open an application in the Launcher](#)).
- 2 Begin typing the contact first or last name, or initials.
- 3 Tap one of the contact's phone numbers to dial it. If only the contact name is displayed, tap the name to display the phone numbers for that contact, and tap the number.

Dial using the keyboard

- 1 In the Launcher, Card view, or Phone, use the keyboard to enter the number. You do not need to press the **orange**  to enter numbers, *, or #.

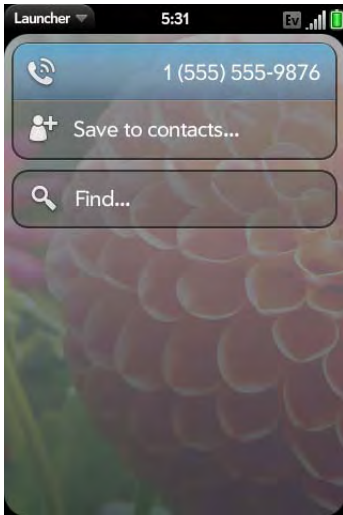

- 2 When you finish entering the number, tap it to dial.

TIP You can also enter a number with the keyboard when the dial pad is displayed. After entering the number, tap the onscreen dial icon to dial.

TIP To enter +, press and hold the **0** key on the keyboard.

Dial using a speed dial


See [Assign a speed dial to a contact](#) for instructions on creating a speed dial.

- In the Launcher, Card view, or Phone, press and hold the speed-dial key you assigned to the number.

Dial by contact name in the Phone application

See [How do I add names and other info into Contacts?](#) for instructions on adding contacts to your phone. You can also look up and dial contacts using universal search (see [Dial by contact name using universal search](#)).

- 1 **Open Phone** .
- 2 Using the keyboard, enter a name or initials until the contact you want appears.

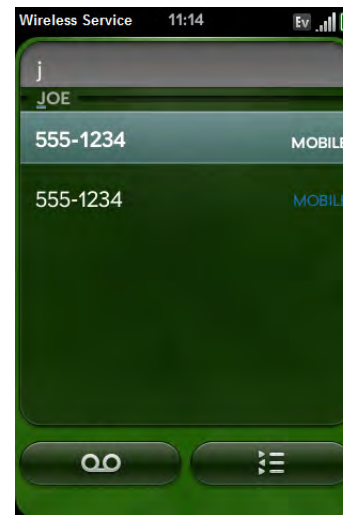

DID YOU KNOW? If you press E, R, or any other key that displays both a letter and a number, you see both matching names and numbers onscreen.

DID YOU KNOW? If your company uses Microsoft Exchange Server with a Global Address List (GAL), entering the contact search information returns matching results from the GAL as well.

- 3 Tap the number.

TIP If you do not want contact matches to appear when you type a number on the keyboard, you can turn off the Show Contact Matches preference (see [Show contact matches](#)). When this preference is off, you can still dial by contact name in the Phone application. After opening **Phone**, tap the contact list icon to the right of “Enter name or number.” Type the contact name or initials, and tap the number when it appears.

Redial the last number dialed

- 1 **Open Phone** .
- 2 Tap . When the contact name or number appears at the top of the screen, tap  again to dial.

Dial your national emergency number

- 1 Press **power**  to wake up the screen.
- 2 Press **Center**  to display Card view.
- 3 Enter the emergency number, and tap the number to dial. If the phone is turned off, a notification appears prompting you to turn it on. You don't have to press the **orange**  key to enter numbers.

Dial from another application

If a phone number appears in another application as an underlined link, you can begin dialing the number directly from that application. For example, you can dial phone numbers that appear in web pages, in messages (email, text, or multimedia), or in calendar events.

- 1 If a phone number appears as an underlined link, tap the number. This displays the dial pad with the number already entered.
- 2 Tap  to dial.

TIP In Messaging, you can dial a contact from a conversation by tapping **Text** or the IM account name in the upper-right corner of the screen to open a list of phone numbers you have for that contact, and then tapping the number you want to call.

Receive calls

If you want to answer calls, your phone must be on. This is different from having only the screen turned on (see [Turn the phone on/off](#)). When your phone is off, your calls go to voicemail.

TIP You can pick the ringtone for incoming calls (see [Select the ringtone for incoming calls](#)). You can set a ringtone for individual contacts as well (see [Add a ringtone to a contact](#)).

Answer a call

Do one of the following:

- If the screen is on when the phone starts ringing, tap .



- If the screen is off, drag  up to unlock the screen and answer the call.

DID YOU KNOW? If you are playing music or a video on your phone and a call arrives, playback pauses automatically and resumes when you hang up or ignore the call.

TIP You can see a photo of the person calling you by assigning a caller ID photo. See [Add a photo to a contact](#).

Silence the ringer on an incoming call

When you silence the ringer on an incoming call, you can answer the call or let it ring through to voicemail.

Do one of the following:

- Press **power** .
- Press **volume**.
- Slide the **ringer** switch off (red means off). This silences the ringer and any notification sounds. These sounds remain off until you slide the **ringer** switch back on. Other sounds, such as music and video playback, are not affected by sliding the ringer switch off.

Ignore a call

To send a call immediately to voicemail, do one of the following:

- Tap .
- Press **power**  twice.

To reply to a caller who is in your Contacts list after you ignore a call, tap the ignored call notification. This opens the caller's contact entry, where you can select a reply method. To reply to a caller who's not in your Contacts list, go to your call history (see [View your call history](#)).

Use voicemail

Set up voicemail

- 1 In the Launcher, Card view, or Phone, press and hold **1** . When the search results screen appears, continue holding **1**  until the Phone application appears.
- 2 Follow the voice prompts to set up your voicemail.

Listen to voicemail messages

- 1 Do one of the following:
 - In the Launcher, Card view, or Phone, press and hold **1** .
 - Tap a voicemail notification at the bottom of the screen.
 - **Open Phone** . Then tap .
 - **Open Phone** . Then tap and hold **1** onscreen.
- 2 Follow the voice prompts to listen to your messages.

What can I do during a call?


Your phone offers many advanced telephone features, including call waiting and three-way conferencing. These features depend on your service plan. Contact your wireless service provider for more information.

While you're on a call, info about the call appears on the call screen. When you're on a call, you can open other applications and work in them, and you won't lose your call. See [Open applications](#).

If you created a reminder in the contact info of a caller, the reminder appears as a notification when you make a call to or receive a call from the person. See [Assign a reminder message to a contact](#).

Manage a call

Do any of the following:

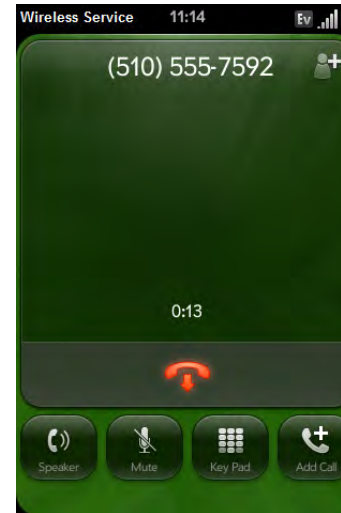

- Put the call on speakerphone: Tap .
- Mute the microphone so you can't be heard: Tap .

TIP You don't need an on-hold button to put a call on hold. Just tap the mute icon to mute your end of the line.

- Open the dial pad to enter numbers for navigating phone trees, responding to prompts, and so on: Tap .
- Add a call: See [Make a second call](#).

- Adjust call volume: Press **Volume**.



* Volume

DID YOU KNOW? You can send and receive text messages during a call. This is a great way to stay connected with friends and colleagues during a long call (see [Create and send a text or multimedia message](#)).

End a call

Do one of the following:


- Tap .
- If a headset is attached, press the headset button.

Use another application while on a call

While you're on a call, you can use many other applications on your phone, for example, the personal information applications (Contacts, Calendar, and so on). You can also send and receive text messages. But you can use the network for only one activity at a time—phone or data—so you cannot use the network to browse the web, send and receive email, or send and receive multimedia or instant (IM) messages.

NOTE You cannot send or receive multimedia messages using a Wi-Fi network.

- 1 Open the **Launcher** or **Quick Launch** while on a call.
- 2 Tap the other application.
- 3 Tap the call notification at the bottom of the screen to return to the call screen.

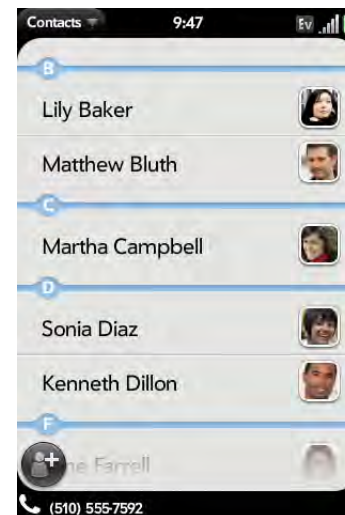

Make a second call


- 1 While on a call, tap .
- 2 Dial the second call.

Answer a second call (call waiting)

When a second call notification appears, tap . The first call is put on hold.

Switch between two calls

- Tap  to put the active call on hold and switch to the other caller.

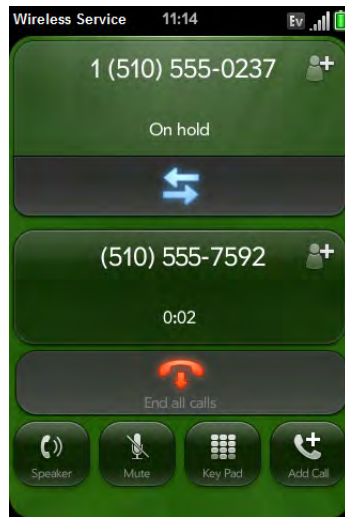


Make a conference call

When you're on a call, you can make a second call and create a three-way conference call, provided that the service is available in your area. Please contact your wireless service provider for more information. Additional charges may apply and minutes in your mobile account may be deducted for each call you make.

- 1 Make a first call, and then make a second call. This is the limit of conference callers. Check your service plan about conference calls.

- 2 Tap  to create the conference call.

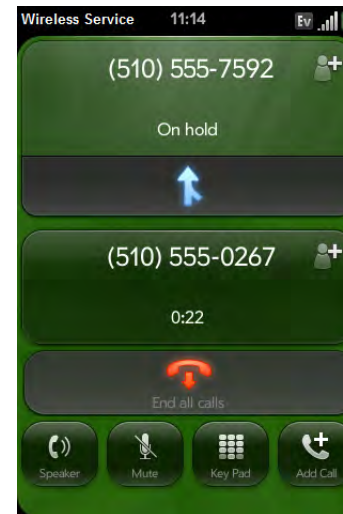

- 3 Do one of the following:
 - Tap  to end all calls.
 - Ask one of the callers to hang up, so you can stay connected to the other caller.

Look up or send a message to a contact

When you're on a call with a contact, tap the contact name to see the person's information in Contacts. With the contact entry open, you can do the following:

- Tap  to send the contact a text message. For example, if the contact is on hold while you're having a long conversation with a second caller, you can send the contact a text stating you'll call him or her back.
- Tap **Edit** to edit the contact entry. For example, if a contact gives you his or her new email address while you're talking, you can enter the address during the call.

What's my number?

- 1 [Open Phone](#) .
- 2 Open the [application menu](#) and tap **Preferences**. Your phone number appears at the top of the Phone Preferences screen.




TIP You can also see your phone number by opening **Device Info**. The number appears as the first entry under **Phone**.

View your call history

- 1 [Open Phone](#) .
- 2 Tap .

- 3 (Optional) If a call history entry includes a number next to the call icon on the left, this indicates that you made and/or received that number of calls in a row to or from that number. Tap the entry to see the individual call entries.
- 4 Do any of the following:

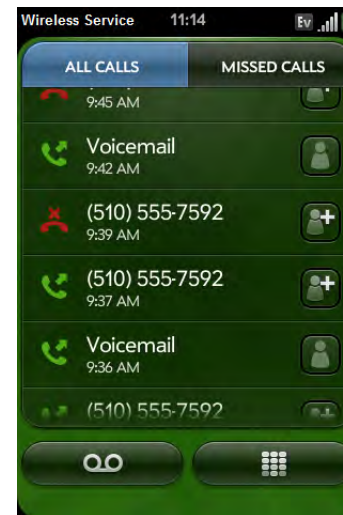

- Switch the types of calls displayed: Tap **All Calls** or **Missed Calls**.
- Call a number: Tap the number.
- Display other options for the contact or number: Tap  or the contact picture to the right of the number.

DID YOU KNOW? If you had calls to or from a contact using more than one of that contact's phone numbers, all calls are collapsed into a single entry, and the most recently used number is displayed.

- Delete a call history entry: Throw the entry off the side of the screen. Tap **Delete** to confirm.
- Clear the call history: Open the [application menu](#), tap **Clear Call History**, and tap **Clear Call History** to confirm.

Save a phone number to Contacts

You can save the number from an incoming or outgoing call to an existing contact, or create a new contact for the number. If an incoming call uses caller ID blocking, you cannot save the number.

- 1 Do one of the following:
 - Before dialing a number you entered in the dial pad: Tap **Add to Contacts**.
 - During a call: Tap .
 - After a call: From the dial pad, tap . Tap  to the right of the number, and tap **Add To Contacts**.
- 2 Tap one of the following:

Add New Contact: Create a new contact for the phone number.

Add To Existing: Tap the contact you want to add the phone number to.

Use a phone headset

You can connect the headset that came with your phone for hands-free operation.

WARNING If driving while using a phone is permitted in your area, we recommend using a headset or hands-free car kit (sold separately). However, be aware that use of a headset that covers both ears impairs your ability to hear other sounds. Use of such a headset while operating a motor vehicle or riding a bicycle may create a serious hazard to you and others, and may be illegal. If you must use a stereo headset while driving, place a speaker in only one ear. Leave the other ear free to hear outside noises, and use the headset only if it is legal and you can do so safely.

Use a wired headset

Your phone works with headsets that have a 3.5mm connector (look for three colored bands on the plug). When in doubt, ask the third-party headset manufacturer if the product is compatible with your phone. If you hear a headset buzz or experience poor microphone performance, your headset may be incompatible with your phone.

- 1 Connect the headset. While on a call, the  icon changes to .
- 2 The headset button performs different actions depending on what's happening on the phone. Press the headset button once to perform any of the following tasks:
 - Answer an incoming call
 - Respond to call waiting
 - Hang up a single active call or all calls on a conference call
- 3 If you want to stop using the headset, do any of the following:
 - Switch from the headset to your phone's speakerphone: Tap  and tap **Speaker**.
 - Switch from the wired headset to a previously paired Bluetooth® hands-free device: Tap  and tap the device name.
 - Use your phone without the headset: Disconnect the headset.

Set up and use a Bluetooth® hands-free device

Your phone is compatible with many headsets and car kits (sold separately) enabled with Bluetooth® wireless technology version 2.1, with EDR and Stereo (with AVRCP media controls).

After you set up a connection with a Bluetooth headset or hands-free car kit, you can communicate using that device whenever it is within range and the Bluetooth feature on your phone is turned on. The range varies greatly, depending on environmental factors. The maximum is about 10 meters.

NOTE You can use a stereo (A2DP-enabled) Bluetooth headset or speakers to listen to music files on your phone. You cannot, however, use a mono Bluetooth headset to listen to music files.

- 1 [Open Bluetooth](#) .
- 2 If the Bluetooth setting at the top of the screen is off, tap **Off** to switch the Bluetooth feature from Off to On.
- 3 Tap **Add device** and tap the device name.
- 4 To use a Bluetooth device with your phone, follow the instructions that came with the Bluetooth device.
- 5 To switch to another Bluetooth device while on a call: Tap  and tap the new device name. You can also tap **Handset** or **Speaker** to use your phone without the headset.

TIP If you make a Bluetooth connection with a car kit, you might get a notification on your phone asking if you want to upload contacts to the car kit. Tap **Allow** to upload contacts. If you later want to delete the contacts from the car kit, check the car kit documentation for instructions.

For more information on using the Bluetooth feature on your phone, see [Bluetooth® wireless technology](#).

Customize phone settings

Use Phone Preferences to customize phone settings.



Show contact matches

By default, when you have the dial pad displayed but you're using the keyboard to enter a phone number, both numbers and letters appear and your phone performs a search of matching names in Contacts. If you turn off this preference, typing on the keyboard with the dial pad displayed enters numbers only, and no search is done in Contacts.

- 1 [Open Phone](#) .
- 2 Open the [application menu](#) and tap **Preferences**.
- 3 In **Show Contact Matches**, tap **On** or **Off**.

TIP If you turn off the Show Contact Matches preference, you can still perform a contact search in the Phone application. After opening **Phone**, tap the contact list icon to the right of “Enter name or number.” Type the contact name or initials, and tap the number when it appears.

Use dialing tones

Dialing tones, also known as DTMF tones, are the tones that play when you press a key to dial. A short tone plays briefly and then stops, no matter how long you press the key. A long tone plays until you release the key.

- 1 **Open Phone** .
- 2 Open the **application menu** and tap **Preferences**.
- 3 In **DTMF tones**, tap **Short** or **Long**, and then tap the option you want.

Use dialing shortcuts

Dialing shortcuts add a prefix at the beginning of a number, so you can dial an extension instead of the whole number.

- 1 **Open Phone** .
- 2 Open the **application menu** and tap **Preferences**.
- 3 Under **Dialing Shortcuts**, tap **Add new number**.
- 4 Set the following:

When I Dial: Tap this field and select the number of digits you need to enter to have your phone add a dialing shortcut.

Use This Dialing Prefix: Enter the prefix to be added at the beginning of the dialed number. The combination of prefix and digits you enter must add up to a complete phone number.

- 5 Tap **Done**.

Example: A complete phone number in your company’s phone system has 11 numbers, for example, 1-408-555-1122. When dialing from a phone that’s part of the system, you need to dial only the last five digits (51122). When you create a dialing shortcut on your phone, you select “5 digit numbers” for **When I Dial** and enter “140855” in **Use This Dialing Prefix**. So when you dial your co-worker’s five-digit extension (81122), your phone automatically dials the whole number: 1-408-555-1122.

Set roaming and data usage preferences

Use roaming and data usage preferences to set options for using your phone in your home network and while roaming. For example, you can set options to prevent placing a call or making a data connection while roaming, so that you avoid extra charges.

- 1 **Open Phone** .
- 2 Open the **application menu** and tap **Preferences**.
- 3 Under **Network**, set any of the following:

Allow voice roaming: Set whether to allow phone calls when you are roaming.

Data roaming: Set whether to allow web browsing, email, multimedia messaging, and instant messaging when you are roaming.

Data Usage: Set whether to turn data services—web browsing, email, multimedia messaging, and instant messaging—**On** or **Off**.

Enable TTY/TDD

A TTY (also known as TDD or text telephone) is a telecommunications device that allows people who are deaf or hard of hearing, or who have speech or language disabilities, to communicate by telephone. Your phone is compatible with select TTY devices.

You can connect a TTY/TDD machine to your phone using the headset jack. Check with the manufacturer of your TTY device for connectivity information. Be sure that the TTY device supports digital wireless transmission.

NOTE When TTY is enabled, you cannot use the headset jack for anything else, and all audio modes are disabled on your phone, including holding the phone up to your ear and listening.

- 1 Connect a TTY/TDD device to your phone using the headset jack.
- 2 [Open Phone](#) .
- 3 Open the [application menu](#) and tap **Preferences**.
- 4 In **TTY/TDD**, tap **Off** to switch TTY/TDD from Off to On.



Email, text, multimedia, and instant messaging

Enjoy the ease and speed of keeping in touch with friends, family, and colleagues anywhere you can access the your wireless service provider data network or a Wi-Fi network. You can send and receive attachments as well.

And keep the Messaging app in mind for times when you need to send a short text, multimedia, or instant message to a mobile phone number—especially handy when you're in a meeting that's running late.

In this chapter

64	Email
75	Messaging

Email

How do I send and receive email on my phone?

Use the Email application on your phone to access the many email accounts you have: company (like Exchange), ISP (like Earthlink and Comcast), and web-based (like Gmail).


The Synergy™ feature makes it easy to synchronize all data from an online account. By setting up a sync account for one app, synchronization of the other apps is automatically set up for you. For example, if you set up your Google contacts account in Contacts before you set up Gmail, when you first open Email, you find that your Gmail messages are already downloaded. And when you first open Calendar, you find that your Google calendar events are already in your phone's Calendar app.

For email accounts that do not make use of the Synergy feature, you need to enter the settings for that account—such as username and password—directly in the Email application (see [Set up email](#)).

You can also use your phone's web browser to view your web-based email—just go to the email provider's website.

Merged inboxes in Email

You can set up multiple email accounts on your phone. When you open Email, you see all your accounts in a single view: Account List view. From there, you can open the inbox of an individual account—or, thanks to the Synergy feature, you can see all messages from all your inboxes displayed in a single merged view called All inboxes.

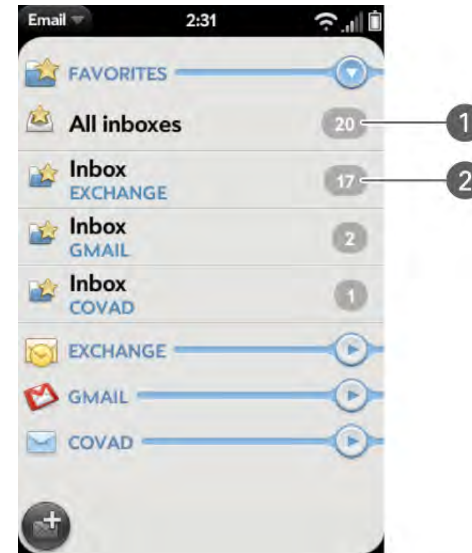

- 1 Number to the right of All inboxes indicates total number of unread email messages.
- 2 Number to the right of individual folder name indicates number of unread messages in that folder.

If you reply to a message when you're working in All inboxes, the message is sent from the same account in which it was received.

If you create a new message when you're working in All inboxes, the message goes out using the account you set as the default account (see [Set email preferences](#)).

Set up email

BEFORE YOU BEGIN

- Before you use your phone to send or receive messages, check with your wireless service provider for pricing and availability of email services and data rate plans.

- Make sure your phone is on and you're inside a coverage area before you send or receive messages. If you want delivery of Microsoft Office Outlook® email using Microsoft Direct Push, make sure that your IT organization uses Exchange Server 2007, or Exchange Server 2003 with Service Pack 2.

Set up email: Common providers

Follow this procedure if you have a common email provider, for example, AOL, EarthLink, or Yahoo! If you are setting up the Email application to work with your corporate email account that uses Microsoft Exchange, see [Set up email: Microsoft Exchange](#). If you have a less common email provider, see [Set up email when automatic setup fails](#).

If the email account you set up takes advantage of the Synergy feature, then setting up email also synchronizes the provider's calendar and contacts.

- 1 [Open Email](#) .
- 2 The first time you open Email, do one of the following:



- If this is the first email account you set up: The email address you used for your Palm profile is entered by default. Use that address, or enter an address for one of your other email accounts. Enter your password for the account, tap **Sign In**, and tap **Done**.
- If you already set up an account that takes advantage of the Synergy feature and want to set up another one: Tap **Add An Account** and enter the email address and password. Tap **Sign In**.

- 3 Any other time you open Email, open the [application menu](#), tap **Preferences & Accounts**, and tap **Add An Account**. Enter the email address and password and tap **Sign In**.
- 4 Tap **Add An Account** to add another account.

Set up email: Microsoft Exchange

Follow this procedure to get email from an Exchange account.

BEFORE YOU BEGIN Get this info from your email provider or system administrator:

- Mail server name or IP address for receiving mail
- Server domain name
- Your username and password

NOTE If your corporate Exchange system uses policies such as remote wipe and password enforcement (including minimum password length, allowed number of failed password attempts, and other parameters), those policies are supported in your Exchange account on your phone. Check with your system administrator for details.

- 1 [Open Email](#) .

- 2 The first time you open Email, do one of the following:



- If this is the first email account you set up: The email address you used for your Palm profile is entered by default. Use that address, or enter an address for one of your other email accounts. Enter your password for the account and tap **Sign In**.
 - If you already set up an account that takes advantage of the Synergy feature and want to set up another one: Tap **Add An Account**. Enter your username and password, and tap **Sign In**.
- 3 Any other time you open Email, open the [application menu](#), tap **Preferences & Accounts**, and tap **Add An Account**. Enter your username and password, and tap **Sign In**.
- 4 Tap **OK**, and tap **Manual Setup**.
- 5 Tap **Mail Type** field, tap **POP** to display the list of options, and then tap **Exchange (EAS)**.

- 6 Enter info for the incoming and outgoing mail server as needed, based on the server information you got from your email provider or system administrator (see **BEFORE YOU BEGIN** at the beginning of this procedure). You can enter either the server name or IP address in the **Incoming Mail Server** field.
- 7 Tap **Sign In**.
- 8 Tap **Add An Account** to add another account.

Set up email when automatic setup fails

Follow these steps if automatic setup does not work for your email account.

BEFORE YOU BEGIN Get this info from your email provider or system administrator:

- Account type (POP or IMAP)
 - Incoming and outgoing mail server names
 - Incoming mail server username and password
 - Incoming and outgoing server port numbers
 - Any SSL requirements for incoming and/or outgoing mail
 - Any authentication (ESMTP) requirements for outgoing mail
 - Root folder (IMAP accounts only)
- 1 If you have already started account setup and the “Unable To Sign In” message appears, tap **OK**, tap **Manual Setup**, and skip to step 7. Otherwise, continue with step 2.
- 2 [Open Email](#) .

- 3 The first time you open Email, do one of the following:



- If this is the first email account you are setting up: The email address you used for your Palm profile is entered by default. Use that address, or enter an address for one of your other email accounts. Enter your password for the account and tap **Sign In**.
 - If you already set up an account and want to set up another one: Tap **Add An Account**. Enter your username and password and tap **Sign In**.
- 4 Any other time you open Email, open the [application menu](#), tap **Preferences & Accounts**, and tap **Add An Account**. Enter your username and password.
- 5 Open the [application menu](#) and tap **Manual Setup**.
- 6 Tap the **Mail Type** field and tap your account type.
- 7 Enter info for the incoming and outgoing mail server as needed, based on the server information you got from your system administrator (see BEFORE YOU BEGIN at the beginning of this procedure).
- 8 Tap **Sign In**.

Enter advanced account settings

These settings apply only to the account you select in step 3.

- 1 [Open Email](#) .
- 2 Open the [application menu](#) and tap **Preferences & Accounts**.
- 3 Tap the account name.
- 4 Set any of the following:



Account Name: Enter the name that appears in the account list.

Full Name: Enter the name you want to appear in the From field for messages you send.

Show Icon: Set whether a notification icon appears onscreen when a new message arrives.

Play Sound: Set whether a sound plays when a new message arrives.

Vibrate: Set whether your phone vibrates when a new message arrives.

Signature: Tap to create a signature that's added to outgoing messages (see [Add a signature to outgoing messages](#) for more information).

Reply-to Address: Enter the address you want recipients to see and reply to on your outgoing messages, if this is different from the email address you send the message from.

Sync deleted emails (POP accounts only): Set whether messages should be deleted on the server when you delete them from your phone.

Show Email: Set how many days' worth of messages to retrieve from the server.

Get Email: Set how frequently to synchronize email for this account.

Default Folders (IMAP accounts only): Specify the folder where messages you send, save as drafts, or delete are stored.

Remove Account: See [Delete an email account](#).

Change Login Settings: See [Change account login settings](#).

Change account login settings

When you change your password for an online email account, remember to make the change in the account settings on your phone.

- 1 [Open Email](#) .

- 2 Open the [application menu](#) and tap **Preferences & Accounts**.
- 3 Tap the account name.
- 4 Tap **Change Login Settings** and tap the relevant fields to change the account information.

Delete an email account


When you delete an email account from your phone, it removes the account information from your phone only. It does not affect your account with the email provider.

- 1 [Open Email](#) .
- 2 Open the [application menu](#) and tap **Preferences & Accounts**.
- 3 Tap the account name.
- 4 Tap **Remove Account**, and then tap **Remove Email Account**.

Create and send an email message

- 1 [Open Email](#) .
- 2 If this is the first time you opened the Email application, and you set up at least one email account, tap **Done**. If you have not set up an email account, see [Set up email](#).

3 Tap .

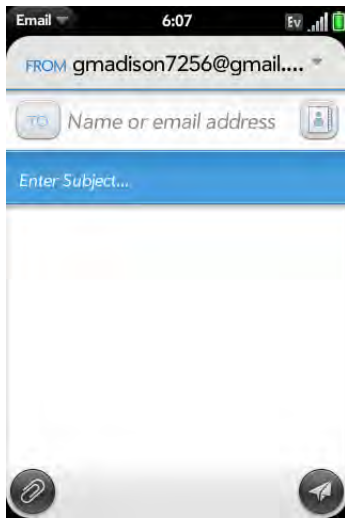

- 4 (Optional) Tap **From** to change the email account you are using to send the message. This option appears only if you have more than one email account set up on your phone.
- 5 In the To field, do one of the following to address the message:
 - Enter a contact name, initials, or email address. Tap the email address when it appears.
 - Tap  to open the full contact list. Tap the contact you want, or enter a name or address to narrow the list.
 - Enter the full email address for a recipient who is not a contact.
- 6 (Optional) Tap **To** to open the Cc and Bcc fields, and enter an address.
- 7 (Optional) Repeat steps 5 and 6 to enter additional addresses.
- 8 Enter the subject, press **Enter** , and enter the body text.
- 9 (Optional) To format body text, do one of the following:
 - To enter bold, italic, or underlined text: Open the [application menu](#) and tap **Edit** > **[the option you want]**. Enter the text. To turn off the

formatting, open the [application menu](#) and tap **Edit** > **[the option you want to turn off]**.

- To enter colored text: Open the [application menu](#) and tap **Edit** > scroll down > **Text Color**. Tap the color and enter the text.

TIP To format text you already entered, select the text, open the [application menu](#), and tap **Edit** > **[the option you want]**. To turn off a formatting option, open the [application menu](#) and tap **Edit** > **[the option you want to turn off]**. For text color, tap the black square.

- 10 (Optional) To set the priority for the message: Open the [application menu](#) and tap **Set As Normal Priority** or **Set As High Priority**.

11 Tap .

Add attachments to a message

- 1 While composing a message, tap .
- 2 To locate a file, do the following:
 - Tap an icon at the bottom of the screen to search for pictures, videos, music files, or documents.
 - Begin typing the file name.

TIP To take a new picture to send as an attachment, tap the photo icon at the bottom of the screen and tap **New Photo**.

- 3 Tap the file name.
- 4 Repeat steps 1–3 to attach other files.

Save a message as a draft

- While composing a message, open the [application menu](#) and tap **Save As Draft**.

Receive and read email messages


The Email application synchronizes messages anytime you open a mail folder. It also synchronizes messages on an automatic schedule—the default interval is every 30 minutes (see [Enter advanced account settings](#) for information on changing the interval).

Follow these steps to manually retrieve messages.

- 1 [Open Email](#) .
- 2 If the folders for the account you want are hidden, tap  to display the folders.
- 3 Tap the folder you want to check messages for. If synchronization doesn't start, tap .

TIP How can you tell if sync is happening? Look for the animated circular movement around the number of messages in the upper-right corner of the screen.

- 4 Tap a message to open it.

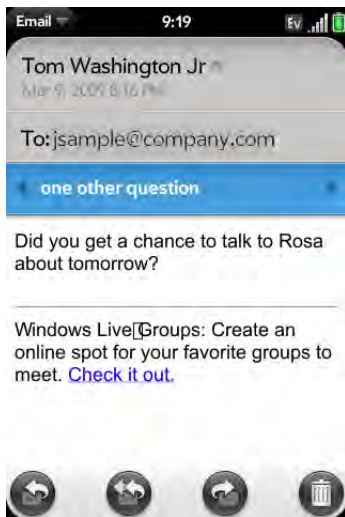

- 5 (Optional) If the message contains a phone number in the subject line, tap the number >  to call it.
- 6 (Optional) If the message contains a URL in the subject line, tap it to open the page in Web.
- 7 Tap  or  in the subject line to view the previous or next message.
- 8 To view messages for another account, make the back gesture (see [Go up one level in an app \(back gesture\)](#)) to return to the account list, and tap the account name.

Turn email notifications on/off

The settings you select here apply to individual email accounts. You can apply different settings to each email account.

- 1 [Open Email](#) .
- 2 Open the [application menu](#) and tap **Preferences & Accounts**.
- 3 Tap an account in **Accounts**, and turn **Show Icon On**.
- 4 Tap **Alert** and tap one of the following for when you receive an email notification:

Vibrate: The phone vibrates, and there is no other sound.

System Sound: The system sound plays (see [Manage system sounds and notifications](#)).

Ringtone: Select a ringtone to play when a notification arrives. If the ringer switch is off, the phone vibrates.

Mute: No sound plays and the phone does not vibrate with a notification.

Save or share an inline image

If a message contains an inline image—an image inserted right into the body text—you can share the image with someone else via email. If you choose this option, a new blank email message opens with the image file as an attachment.

If the image is in JPG, GIF, BMP, or PNG format, you can also save it to and view it in the Photos app.


- 1 With the message open, press and hold the **orange**  key and tap the image.
- 2 Tap **Copy to Photos** (if available) or **Share**.

Open email attachments

You can receive any kind of file sent to you, but you can open an attachment only if your phone has an application that can open the file type.

- To open a single attachment: Tap the attachment name to download the attachment. If the attachment is a supported file type (MP3, PDF, DOC, XLS, PPT, GIF, JPG), it opens automatically.

- To open multiple attachments: Tap the list of attachment names to view the attachments, and tap an attachment name to open the file.

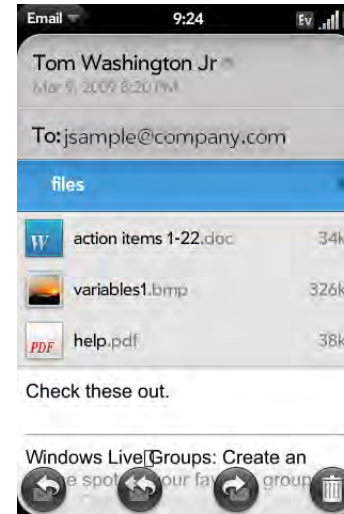

- To save an attached image that appears in the body of an email to your phone: Tap the image to save it. If the image is in JPG, GIF, BMP, or PNG format, you can view it in Photos.

Save attachments

When you open attachments of certain file types, you can save them to your phone so you can view them later in one of your phone's applications.

- 1 Open the attachment (see [Open email attachments](#)).
- 2 Do one of the following:
 - For pictures in JPG, GIF, BMP, or PNG format: Tap **Copy To Photos**.
 - For other file types: Open the [application menu](#) and tap **Save As**. If the Save As menu item is not available, you cannot save the attachment.

To open a saved attachment on your phone, open the application that can display the attachment. The attachment appears in the list of available files. Tap the file to open it.

Add a contact from an email message

You can add a contact name or email address to your Contacts list directly from the To, Cc, or Bcc field of an incoming email message. You can either create a new contact or add the information to an existing contact.

- 1 In a message you received, tap the name or email address.
- 2 Tap **Add To Contacts**.
- 3 Tap one of the following:
 - Add New Contact:** Create a new contact for the name or address.
 - Add To Existing:** Tap the contact you want to add the name or address to.

View a contact from an email message

- In a message you've received from someone listed in the Contacts app, tap the name to open the contact entry.

Search for an email message

You can search for messages in any email folder.

- In the folder containing the message, type a few characters of a name or email address in the From, To, or CC line, or a few characters of the subject. Matching results appear as you type. Keep entering characters to narrow the list.

Reply to a message

- 1 Open a message.
- 2 Do one of the following:
 - Reply to just the sender: Tap .
 - Reply to the sender and all other addressees: Tap .
- 3 Enter the reply message text and tap .

Forward a message

- 1 Open a message and tap .
- 2 Address the forwarded message (see [Create and send an email message](#)).
- 3 Enter the forwarded message text and tap .

Move a message to another folder

- 1 Open a message.
- 2 Open the [application menu](#) and tap **Move to folder**.
- 3 Tap the folder you want.

Mark a message as read or unread

- 1 Open a message.
- 2 Open the [application menu](#) and tap **Mark as read/unread**.

Flag or unflag a message

When you flag a message, a  is placed beside the message in your Inbox. You might flag a message to highlight it as something that you need to return to.

- 1 Open a message.
- 2 Open the [application menu](#) and tap **Set flag** or **Remove flag**.

Show or hide message header details

- 1 Open a message.
- 2 Tap a recipient name to show details. Tap again to hide details.

Delete a message

Deleting a message moves it to your deleted items folder, so it's still on your phone. Depending on your email account, this folder is called Deleted Items, Deleted, Trash, or something else.

If you accidentally delete a message, you can move it back to the original folder (see [Move a message to another folder](#)). To remove a message from your phone permanently, delete it from the deleted items folder.

TIP If you change the folder where you store deleted messages for an IMAP account (see [Enter advanced account settings](#)), deleting messages from the folder removes them from your phone.

Do one of the following:

- In the message list: Throw the message off the side of the screen.
- In an open message: Tap .

Add a signature to outgoing messages

A signature includes information you want to add to the closing of all your outgoing messages—for example, your name, address, and phone numbers; your website; or a personal motto. You can use a different signature for each email account.

- 1 [Open Email](#) .
- 2 Open the [application menu](#) and tap **Preferences & Accounts**.
- 3 Tap the account you want.
- 4 Tap the **Signature** field and enter the signature text. To format the text with bold, italics, or color, select the text (see [Text selection gestures](#)), open the [application menu](#), and tap **Edit** > **[the option you want]**.




View mail folders

- 1 [Open Email](#) .

2 Do any of the following:

- View all folders for an account: Tap .
- Open a folder: Tap the folder name.
- View folder information such as last sync and number of messages: Open the folder, and then tap the folder header.

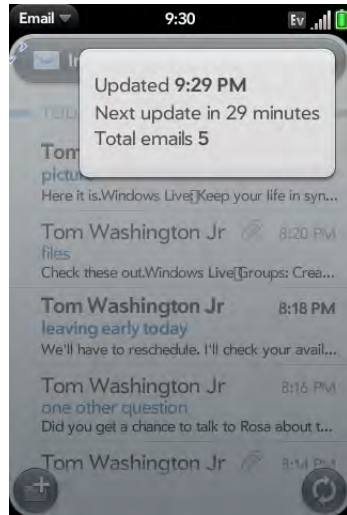

Add an email folder as a favorite

Favorites appear at the top of Account List view.

- 1 [Open Email](#) .
- 2 If the folder you want is not displayed, tap  to the right of the email account name to display the folder.
- 3 Tap  to the right of the folder name.

To remove a folder as a favorite, repeats steps 1 and 2 and tap  to the right of the folder name.

Set email preferences

- 1 [Open Email](#) .
- 2 Open the [application menu](#) and tap **Preferences & Accounts**.
- 3 Set any of the following:



Smart Folders: Set whether to include All Inboxes and/or All Flagged messages as favorites at the top of Account List view.

Accounts: Tap an account name to enter advanced settings (see [Enter advanced account settings](#)).

Default Account: Tap the account shown and then tap the account you want to set as the new default. The default account is used to send a message if you create a new message in Account List view or in a merged folder view such as All Inboxes or All Flagged. If you have only one email account on your phone, the Default Account preference is not displayed.

Add An Account: See [Set up email](#).

Reorder accounts

You can change the order of the accounts in Account List view.

- 1 [Open Email](#) .
- 2 Open the [application menu](#) and tap **Preferences & Accounts**.
- 3 Tap and hold the account name, wait for the visual cue, and then drag the account up or down. This changes the order of the accounts in Account List view.

Reply to meeting invitations

You receive meeting invitations on your phone in the same way that you receive email messages. However, you cannot create meeting invitations on your phone.

Tap to accept, tentatively accept, or decline an invitation.

Here are the key features of meeting invitations:

- Meeting invitations appear on your phone in the Email application, not in the Calendar application.
- From within the Email application, you can accept, decline, or tentatively accept a meeting invitation.
- If you accept or tentatively accept an invitation, it appears as an event in Calendar.
- You can reply to and forward meeting invitations in the same way as email messages.

TIP If you receive an updated meeting invitation, you can again choose to accept, decline, or tentatively accept. If you receive a meeting cancellation, open the message and tap **Remove From Calendar** to delete the meeting from your calendar.

Send email messages from within another application

Use the share menu item in any application that supports this feature to send an item as an attachment to an email message. This feature is available in the Contacts, Photos, Doc View, PDF View, and Memos applications, among others. Depending on the app, the menu item might be named **Share**, **Send**, or **Email**. For details, see the section in this guide on the specific application.

Messaging

What kinds of messages can I send and receive?

You can use the Messaging application to send and receive the following types of messages:

- Text and multimedia messages (see [Create and send a text or multimedia message](#))
- Instant messages for an IM account you already have set up online (see [Set up an instant messaging \(IM\) account](#))

The Synergy feature enables the Messaging app to gather all your text, multimedia, and instant messages to and from the same contact into a single conversation (sometimes called a thread). So you can see your entire message history with someone regardless of the different methods you happened to use to communicate with that person (see [Work with conversations](#)). You can even switch from account to account without losing the thread of your conversation (see [Switch between messaging accounts in a conversation](#))—just pick the messaging account that's most likely to keep you in unbroken contact with the person you're talking to.

Work with conversations

When you exchange more than one message with a person, the messages are grouped into a conversation. A single conversation can contain text, multimedia, and IM messages. When you start or continue a conversation, the upper part of the conversation screen displays all messages you've exchanged with this person, and the bottom part provides the area where you type your next message.

You can carry on conversations with multiple people at the same time.


- 1 [Open Messaging](#) .
- 2 Do one of the following:
 - **Start a new conversation:** Create a message (see [Create and send a text or multimedia message](#) or [Send and receive IM messages](#)), or tap a message and reply to it.
 - **Continue an existing conversation:** Tap the conversation.
- 3 Enter your message.
- 4 Tap .

TIP To save the contents of a conversation, open the conversation, open the [application menu](#), and tap **Copy All**. This saves the entire conversation as plain text, which you can paste in a memo, email message, and so on.

Switch between messaging accounts in a conversation

In a single conversation, you can switch between text/multimedia messaging and an IM account. So if you are having an IM chat with someone and he or she goes offline, you can send the person a text message to wrap up the conversation. You can also switch between different phone numbers for sending a text message to a person.

- 1 In Messaging, start a new conversation or open one that's listed in Conversations view.
- 2 Tap **Text** or an IM account name in the upper-right corner of the screen. If available, the other ways to communicate with this contact appear in a list. Tap the account or phone number you want to use.

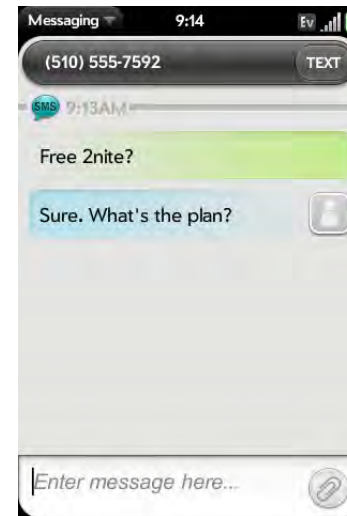

Dial a number from a conversation

- 1 [Open Messaging](#) .
- 2 Tap a conversation, and then tap the contact name or phone number at the top of the screen.
- 3 Tap the number you want to dial.

Switch between Conversations view and Buddies view

Conversations view lists all of your Messaging conversations. Buddies view lists all of your IM buddies.

- 1 **Open Messaging** .
- 2 For Conversations view, tap **Conversations**. For Buddies view, tap **Buddies**.



- 3 In Buddies view, tap  to expand a buddy list. Tap a buddy name to contact that person.

Create and send a text or multimedia message

Each text message can have up to 140 characters. If you send a text message to an email address, the email address is deducted from the 140-character count.

Multimedia messages consist of both text and pictures. You can include pictures in JPG format.

DID YOU KNOW? You can send and receive text messages even while you are on a phone call. This is easiest when using a hands-free headset or the speaker.

BEFORE YOU BEGIN Make sure that your phone is on and that you're inside a coverage area (see [Turn wireless services on](#)).

- 1 **Open Messaging** .
- 2 The first time you open Messaging, tap **Done** to send a text or multimedia message. Thereafter, skip to step 3.

TIP If you want to set up an instant messaging (IM) account the first time you open Messaging, tap **Add An Account** and see [Set up an instant messaging \(IM\) account](#) for instructions.

- 3 Tap . The cursor is in the To field. Do one of the following to address the message:
 - Enter a contact's first or last name or initials, screen name, phone number, or email address. Tap the phone number, IM, or email address you want to use to send the message when it appears.
 - Tap  to open your full contact list. Tap the contact you want or enter a name or address to narrow the list.
 - Enter a phone number for a recipient who is not a contact.


TIP Do you need to enter a short code that contains letters, for example, to text a vote to a TV poll or to make a donation to a charity? Use the keyboard to enter it; just press the letter keys. For example, if the code is "win01," press **W** to enter w, **I** to enter i, and so on. No need to figure out the numbers that correspond to the letters. This is not the same as dialing a number that contains letters, for example, (555) 256 PALM. To dial a number like this, you must use the onscreen dial pad and tap the numbers that correspond to the letters P, A, L, M, which are 7256.

- 4 Tap the **To** field and repeat step 3 to enter additional recipients.
- 5 Do one of the following to attach a picture in JPG format to a multimedia message:
 - If you did not yet enter the message text: Tap . Tap the album containing the picture you want. Tap the picture, or tap **New Photo** and take the picture.

- If you already entered the message text: Open the [application menu](#) and tap **Add Picture**. Tap the album containing the picture you want and tap the picture, or tap **New Photo** and take the picture.
- 6 Tap **Attach Photo**.
 - 7 Do one of the following to attach a video to a multimedia message:
 - If you did not yet enter the message text: Tap , tap , and then tap the album containing the video, and tap the video, or tap **New Video**. If you tap **New Video**, tap  to start recording, tap  to stop, and tap the new video.
 - If you already entered the message text: Open the [application menu](#) and tap **Add Video**, tap , tap the album containing the video and tap the video, or tap **New Video**. If you tap **New Video**, tap  to start recording, tap  to stop, and then tap the new video.
 - 8 Enter the message text if you did not already do so, and tap .

TIP You can include emoticons in your message (see [Use emoticons in a message](#)).

TIP You can also send a contact entry as part of a multimedia message. Do this in the Contacts app (see [Send Contacts](#)).

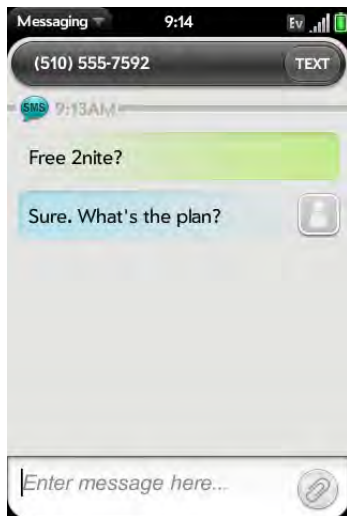

Use emoticons in a message

To include an emoticon in a text, multimedia, or IM message, type in a keyboard character combination for that emoticon. Most emoticons can be created by more than one combination. After you send the message, the emoticon image appears in the conversation on your phone and on the recipient's phone, as long as the receiving IM application supports the image.

This table shows the emoticons that are supported on your phone.

NOTE Emoticon combinations that use words, such as :cool or :cry, are not supported in most chat applications. Emoticons created using these combinations may not appear correctly on the recipient's phone.

Table 1. Supported emoticons

To display this emoticon...	Enter any of these keyboard character combinations...
	>:o >:-o >:O >:-O >:(>:-(:angry :mad
	o_O :confused
	8) 8-) B) B-) :cool
	:'(=(:cry
	:[:-[=[=-[:redface
	:S :-S :s :-s %-(%(X-(X(:eww :gross
	!l :-! :eek
	:(:-(- =(=(- :sad
	:O :-O :o :-o =O =-O =o =-o :surprised :shock :omg
	^^ ^_^ ^-^ :grin :biggrin

Table 1. Supported emoticons

To display this emoticon...	Enter any of these keyboard character combinations...
	<3 :heart
	O:) O:-) o:) o:-) :innocent :angel
	:-* :* =* =-* :kiss
	:-D :D =D ==D :laugh :lol
	>:-) >:) >:-> >:> :evil :twisted
	: :- :neutral :meh
	:-& :& =& ==& :-@ :@ =@ ==@ :sick
	:) :-) =) ==) :smile
	:/ :-/ :\ :-\ =/ ==/ =\ ==\ :doh
	;) ;-) :wink
	:P :-P :p :-p :b :-b =p =P =b ==b ==p =-P :yuck :razz

Receive and view text and multimedia messages

You can view pictures and videos and listen to music files included in a multimedia message. You can save pictures in JPG format to your phone for viewing in the Photos application.

- 1 **Open Messaging** .
- 2 Tap a conversation to view messages.
- 3 In a multimedia message, tap a music, video, or vCard file name to view the attached file. (Attached pictures are displayed within the message.) Tap **Copy Photo** to save an attached JPG picture.

Add a contact from a text or multimedia message

- 1 In a conversation, tap the header of a message received from someone who is not a contact.
- 2 Tap **Add To Contacts**.
- 3 Tap one of the following:

Add New Contact: Create a new contact for the name or address.

Add To Existing: Tap the contact you want to add the name or address to.

View a contact's information from a message

- In a conversation, tap the header of a message received from a contact to open the contact entry.

Dial a number from a message

- Tap a phone number.

Delete a message

- 1 In a conversation, throw the message off the side of the screen.
- 2 Tap **Delete** to confirm.

Delete a conversation

- 1 In Conversations view, throw the conversation off the side of the screen.
- 2 Tap **Delete** to confirm.

Set up an instant messaging (IM) account

To use an IM account on your phone, such as a GoogleTalk IM account, you must already have the account online. If you have an IM account with a provider that takes advantage of the Synergy feature, that IM account is automatically added to your phone when you enter your username and password for that provider in Email, Calendar, or Contacts.


- 1 [Open Messaging](#) .
- 2 Do one of the following:
 - **The first time you open Messaging:** Tap **Add An Account**.
 - **Any other time:** Open the [application menu](#) and tap **Preferences & Accounts**. Tap **Add IM Account**.
- 3 Tap the account type and enter your username and password.



- 4 Tap **Sign In**.

Sign in to an IM account

- 1 [Open Messaging](#) .
- 2 Tap **Buddies**.

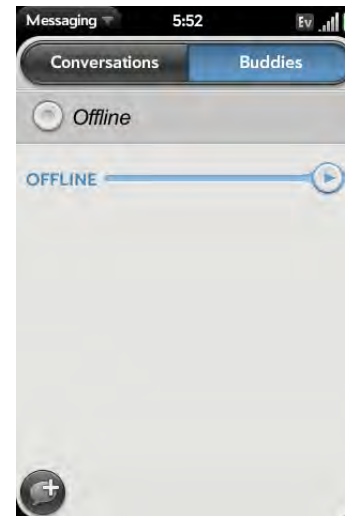

- 3 Tap  to the left of the text **Offline** and tap **Available**.

Sign out of an IM account

- 1 [Open Messaging](#) .
- 2 Tap **Buddies**.
- 3 Tap the status icon to the left of your online status (**Available** or **Busy**) and tap **Sign off**.

Send and receive IM messages

BEFORE YOU BEGIN Make sure that your phone is on and that you're inside a coverage area (see [Turn wireless services on](#)).

- 1 [Open Messaging](#) .
- 2 Do one of the following to start or continue a conversation:
 - In Conversations or Buddies view, tap  to start a new conversation.
 - In Conversations view, tap an existing conversation and enter a new message.
 - In Buddies view, tap a buddy name and enter a new message.
- 3 Tap **Text** or an IM account name in the upper-right corner of the screen, and tap the IM account you want to use.
- 4 Enter the message text and tap .

TIP You can include emoticons in your message (see [Use emoticons in a message](#)).

- 5 When the message recipient replies, the reply appears below your message in the conversation. Repeat step 4 to send another message.

Change your online status

- 1 [Open Messaging](#) .
- 2 Tap **Buddies**.
- 3 Tap the status icon to the left of the status description, and tap your new status.
- 4 Tap  to confirm your status.

Change your custom message

Your custom message is seen by your IM buddies. It appears next to your IM screen name and status. It can contain any text you want.

- 1 [Open Messaging](#) .
- 2 Tap **Buddies**.
- 3 Do one of the following:
 - **If you already have a custom message:** Tap the current message and enter the new message text.
 - **If you're creating a custom message for the first time:** Tap the status text (**Available**, **Busy**, and so on) and enter the custom message text.

Change your IM account username and password

If you change the username or password for your IM account online, you need to enter the updated information for the account on your phone.

- 1 [Open Messaging](#) .
- 2 Open the [application menu](#) and tap **Preferences & Accounts**.
- 3 Tap the account name.
- 4 Enter the new information and tap **Sign In**.


Delete an IM account

- 1 [Open Messaging](#) .
- 2 Open the [application menu](#) and tap **Preferences & Accounts**.
- 3 Tap the account name.
- 4 Tap **Remove Account**, and tap **Remove Account** again to confirm.

Turn messaging notifications on or off

You can set your phone to show a notification and/or play a sound when a new message arrives. These settings apply to all your Messaging accounts.

- 1 [Open Messaging](#) .
- 2 Open the [application menu](#) and tap **Preferences & Accounts**.
- 3 Turn either of the following new message notifications on or off:

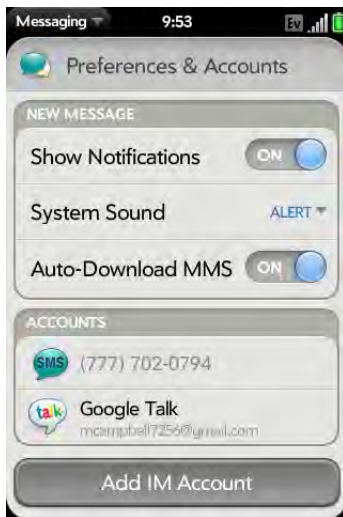

Show Notifications: Set whether a notification appears when you receive a new message.

System Sound: If Show Notifications is on, set whether an alert sound plays when you receive a new message. Tap **Alert**, and then tap **Vibrate**, **System Sound**, **Ringtone**, or **Mute**. If you select **Ringtone**, tap the name of the ringtone to select it. See [Sounds & Ringtones](#) for information on selecting a ringtone.



Contacts, Calendar, and other personal information

Your Palm® Pre™ phone is all you need to organize your personal information and keep it with you wherever you go.

All your personal information is backed up and kept private either in your Palm profile or in one of your online accounts.

In this chapter

84	Contacts
93	Calendar
100	Tasks
104	Memos
106	Clock
107	Calculator
108	Facebook

Contacts

How do I add names and other info into Contacts?

You have a few options for getting contact information to show up in Contacts.

Connect to an online address book: If you have an address book in an online account that works with the Palm Synergy™ feature (for example, Google or Microsoft Exchange), you can set up Contacts on your phone to synchronize and display contacts that you store in the online address book. Set up synchronization the first time you open Contacts (see [Use Contacts for the first time](#)), or anytime after that (see [Customize Contacts](#)). After you set up the connection to the online address book, contacts you enter online show up automatically in Contacts, and contacts you enter on your phone sync to the online account, provided the account allows writing from the phone to the online account.

The Synergy feature makes it easy to synchronize other data from an online account. By setting up synchronization in one app, synchronization of the other apps is automatically set up for you. For example, if you set up your Gmail account in Email before you set up Contacts, when you first open Contacts, you find that your Google contacts are already downloaded. And when you first open Calendar, you find that your Google calendar events are already in your phone's Calendar.

NOTE See [Online accounts available for webOS phones](#) for the current list of online accounts that you can set up on your phone, from which you can access contacts.

Enter a contact directly in Contacts: See [Create a contact](#) for instructions. You can assign the contact to one of your online address books—if you do, it synchronizes with the online address book. Or you can create the contact in your Palm profile account, which means it shows up on your phone only. Palm profile contacts are included in the daily backup of your Palm profile information, so you can restore them if they are accidentally erased.

Use a third-party sync solution: You can keep your info up to date wherever you are, without having a direct connection to your computer. When you sync, any changes you've made to Contacts are automatically added to your computer or to your phone.


Transfer contacts using the Data Transfer Assistant: When you transfer contacts from desktop software or an old phone, you select which account to assign those contacts to. Look for those contacts in the account you select (see [How do I get data off my computer?](#)).

Download vCard info to Contacts: A vCard is a file type made especially for contact info. It may contain one or many contact entries. A vCard can be attached to an email or a multimedia message, and you can download the info in a vCard to your Contacts app. See [Receive vCards](#).

Linked contacts

The Synergy feature automatically links contacts from different accounts if it finds data in common between them. For example, if you have a contact in Exchange and in Google for Emily Weeks, your phone links the contacts so that all Emily's info shows up on a single contact screen. You need to open just one view to see all of Emily's info. The actual data remains separate in the various accounts where you originally created the data; it's just assembled in one view on your phone for your convenience.

How can you tell if a contact is linked? Look in the upper-right corner of the contact screen. If you see a stack of photos and a number, that means that you're looking at a linked contact, with combined info from contacts you're storing in separate accounts.

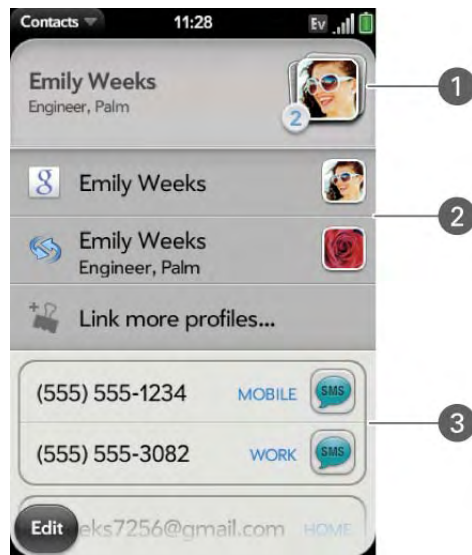

- 1 Tap the stack of photos to see the contacts that are linked.
- 2 Emily is a contact in your Google online account and in your Palm profile account.
- 3 Scroll down to see Emily's combined contact info.

You can unlink linked contacts, and you can manually link contacts (see [Link a contact](#) or [Unlink a contact](#)).

Use Contacts for the first time

- 1 [Open Contacts](#) .



- 2 Do one of the following:
 - **To set up your first online account to sync:** Tap the account type, enter the account information, and tap **Sign in**.
 - **To set up a second online account to sync:** Tap **Add An Account**, tap the account type, enter the account information, and tap **Sign In**.
 - **To open Contacts without creating an online account:** Tap **Done**. This opens your Palm profile account, and you can start creating contacts in this account.

NOTE If you add your Facebook or LinkedIn account to Contacts, your friends' Facebook and LinkedIn email addresses show up in Contacts. You cannot change Facebook or LinkedIn info from Contacts on your phone. You also cannot add friends to your Facebook or LinkedIn account from Contacts. To work directly with Facebook or LinkedIn, go to facebook.com or linkedin.com in the Web application (see [Web](#)). To update your status and see your Facebook news feed, use the Facebook application developed for your phone (see [Facebook](#)).

Create a contact

If you are using Contacts for the first time, you go through a few different steps to add or access the contacts on your phone (see [Use Contacts for the first time](#)). Follow this procedure to add contacts directly on your phone after the first time you use Contacts.


1 [Open Contacts](#) .

2 Tap .

When you can add a contact to an account, if you don't specify the account, the new contact is added to your default account.

3 (Optional) Tap the account icon to the right of **Name** to change the account to which the new contact will be added.

NOTE If an account doesn't appear in the list, you can't add data to that account from your phone.

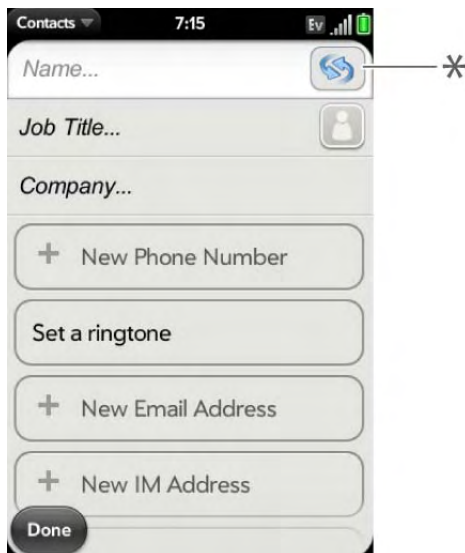

* Account icon, showing Palm profile account

- 4 Tap fields to enter contact details, select a ringtone for that contact, add notes, or add birthday details for the contact. Scroll to see all of the fields available for contact info.
- 5 Tap **Name** to enter the contact name. To add a prefix and other details to a name, open the [application menu](#) and tap **Name Details**.
- 6 Tap fields to enter contact details, select a ringtone for this contact, and so on. Scroll to see all fields. You can add a reminder that appears whenever you and this person get in touch. See [Assign a reminder message to a contact](#).

TIP When you enter a phone number that requires pauses—for example, a number for which you need to enter a password or respond to prompts, you can insert a pause or a stop in the number. To insert a two-second pause, enter a **T** where you want the pause to appear. To insert a stop, enter a **P** where you want the stop to appear. To dial the next set of numbers after the stop, you will need to tap the screen.

7 Tap **Done**.

Find a contact

You can find a contact from Card view or the Launcher view. To learn how, see [Use universal search](#). To find a contact within the Contacts app, use these steps.

1 [Open Contacts](#) .

2 Enter any of the following:

- First, middle, or last name
- First and last initial (no space between)

- Company
- Nickname




- 3 For more search options, tap **Global Address Lookup**. (This option is available if you are using Microsoft Exchange with a Global Address List.)
- 4 Tap the contact.

View, edit, copy, or delete contact information

- 1 [Open Contacts](#) .

- 2 Search for a contact (see [Find a contact](#)), and tap the contact name.

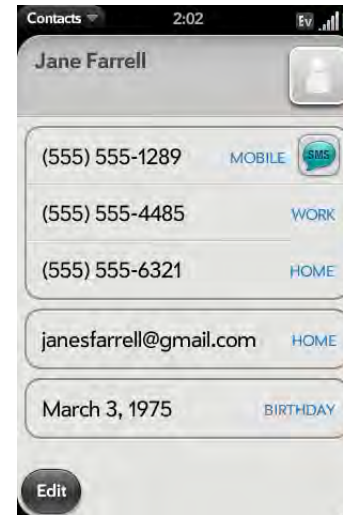

- 3 To edit a contact, tap **Edit**.
Info that's dimmed means it originates from an account that you can't edit on your phone (like Facebook).
- 4 In a linked contact, tap the account icon in the upper-right corner to edit fields specific to that account.

NOTE The fields that make up the contact header (name, photo, job title, company) are unique to each account. You must open a specific account to enter these fields.

- 5 Do any of the following:
 - To add or change information: Tap a field (see [Enter information in a field](#)).

NOTE In a linked contact, when you enter info in a field for the first time, you can assign that info to any account by tapping the account button in the field.


- To copy a contact: Open the [application menu](#), tap **Edit**, and tap **Select All**.
The contents of the contact entry are copied as plain text, with carriage returns between each element.
- To delete a piece of contact information: Throw the item off the side of the screen, and tap **Delete**.

6 Tap **Done**.

Add a photo to a contact

The photo you add appears onscreen when this contact calls you, or when you call this contact.

- 1 While creating (see [Create a contact](#)) or editing (see [View, edit, copy, or delete contact information](#)) a contact, do one of the following:
 - To add or change the photo in the default account, tap .
 - In a linked contact, to add or change the photo of another account, tap the account icon in the upper-right corner and tap the other account (see [Linked contacts](#)).

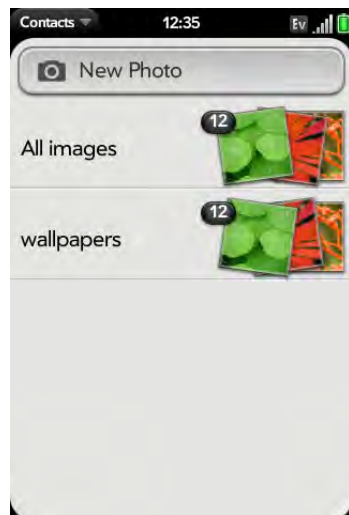

- 2 Do one of the following:
 - To take a new photo: Tap **New Photo**, take the picture.
 - To use an existing photo: Tap the album containing the picture, tap the picture.
- 3 (Optional) Do either or both of the following:
 - To zoom out or in on part of the picture: Pinch in or out on the picture.
 - To capture the portion of the picture you want: Tap and hold the picture, and then drag the portion you want to the center of the onscreen box. This portion becomes the contact photo.
- 4 Tap **Attach Photo**.

Add a ringtone to a contact

Select the ringtone you want to hear when a contact calls you.

- 1 While creating (see [Create a contact](#)) or editing (see [View, edit, copy, or delete contact information](#)) a contact, tap **Set a ringtone**.
- 2 Do one of the following:
 - Tap a ringtone name.
 - To use a music file as a ringtone: Tap  and tap the file name. Tap the file name again in the ringtone list.
- 3 (Optional) Tap  to preview the ringtone.
- 4 Tap **Done**.


TIP To change the ringtone for a contact, tap the ringtone and tap **Change Ringtone**. **Delete Ringtone** deletes the ringtone from the contact, not from the list of available ringtones.

Assign a speed dial to a contact

You can assign a speed dial to any contact phone number. You can assign up to 26 speed dials.

DID YOU KNOW? You cannot assign 1 (the E key) as a speed dial. The number 1 is reserved for speed dialing your voicemail system.

- 1 **Open Contacts** .
- 2 Search for a contact (see [Find a contact](#)), and tap the contact name.
- 3 Open the [application menu](#) and tap **Set Speed Dial**.

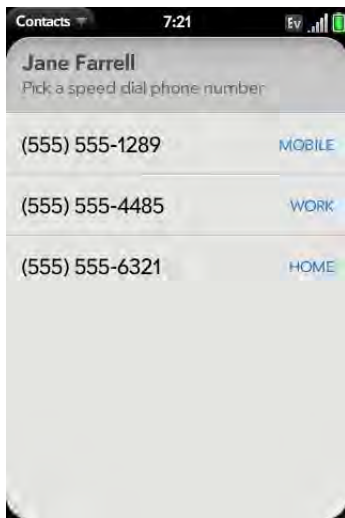

- 4 Tap the phone number you want to assign a speed dial to, and then do one of the following:
 - To assign a speed dial: Tap the key to use as a speed dial.
 - To reassign a speed dial to the selected number: Tap the assigned speed dial and then tap **Reassign To [Name]**.

Assign a reminder message to a contact

If you have an important message or a question for a contact, you can enter a reminder right on your phone. The next time you and the contact are in touch—whether by phone call, email, or text message/IM—a notification appears showing the contact name and a message bubble. Tap the bubble to view the reminder.

- 1 **Open Contacts** .
- 2 Search for a contact (see [Find a contact](#)), and tap the contact name.
- 3 Open the [application menu](#) and tap **Add Contact Reminder**.
- 4 Enter the reminder, and make the back gesture to save it.

TIP To remove a reminder message before it pops up as a notification, open the [application menu](#), and tap **Add Contact Reminder**. Tap the **trash icon**.


Link a contact

When your phone recognizes matching information in two or more contacts—for example, the same name and phone number—it automatically gathers the info from the two records into a single view that displays all the contact information. You can also manually link contacts. The info for your linked contacts appears combined only on your phone—the actual info is kept separate and distinct in the accounts it came from.

IMPORTANT To maintain the integrity of your contact data, it's important that you link only one person's contact info in different accounts. For example, if you have contact info for Emily Weeks in Google, Facebook, Microsoft Exchange, and your Palm profile account, go ahead and link all four contacts into a linked contact. But don't link Emily's contact info with her sister Allison's.

- 1 **Open Contacts** .
- 2 Search for a contact (see [Find a contact](#)), and tap the contact name.

- 3 In the open entry, tap the contact name in the header, and tap **Link more profiles**.

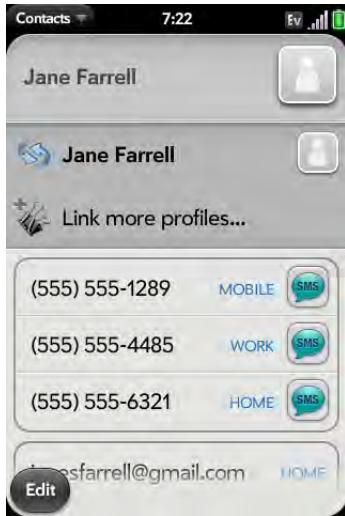

- 4 Search for the contact (see [Find a contact](#)) and tap it to link the two contacts.
- 5 After you create the link, be sure the linked contact appears in your Contacts list under the name you're most likely to search for and recognize (and not, say, under a person's IM screen name, which can be unrelated to their real name. To do this, tap the contact name you want to appear, and tap **Set As Primary Profile**. When you search for a contact using universal search (see [Use universal search](#)), the search feature looks through primary profile information only.

Unlink a contact

- 1 [Open Contacts](#) .
- 2 Search for a contact (see [Find a contact](#)), and tap the contact name.

- 3 Tap the contact name in the header, and tap the contact you want to unlink.

- 4 Tap **Unlink This Profile**.

Add a contact entry to the Launcher

Assign your favorite contacts to the Launcher, so you can open them directly from that location.


- 1 [Open Contacts](#) .
- 2 Search for a contact (see [Find a contact](#)), and tap the contact name.
- 3 Open the [application menu](#) and tap **Add to Launcher**.
- 4 (Optional) Edit the first and last name as you want them to appear in the Launcher.
- 5 Tap **Add To Launcher**. To see the contact in the Launcher, scroll down on page 1 of the Launcher.

If the contact has a picture (see [Add a photo to a contact](#)), the picture appears as a Launcher icon. If the contact doesn't have a picture, the contact name appears in the Launcher with a placeholder icon. Tap the picture or placeholder icon to open the contact.

Get in touch with a contact

- 1 [Open Contacts](#) .

- 2 Tap the contact name.

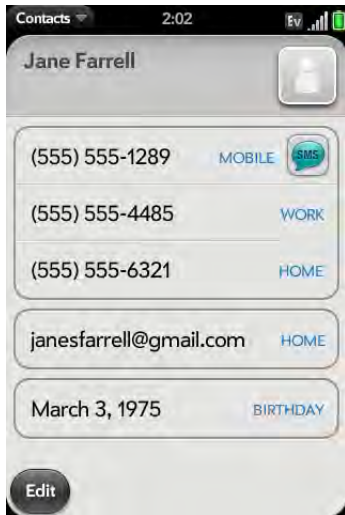

- 3 Do any of the following:
 - Tap the appropriate field to call or send an email or instant message to that contact. For example, tap a phone number to call the contact.
 - Tap  to send a text message.
 - Tap an address field to view the address on a map.

Delete a contact


- 1 [Open Contacts](#) .
- 2 Tap the contact name.

NOTE Entries that you cannot change on your phone, like those from Facebook and LinkedIn, you also cannot delete from the phone. You must delete them from your account on the web to remove them from your phone.

- 3 Do one of the following:

- Delete only one entry in a linked contact: Tap the displayed contact name to open the list of all entries in the linked contact. Tap the entry you want and tap **Delete This Profile**.
- Delete an unlinked contact or an entire linked contact: Open the [application menu](#) and tap **Delete Contact**. Tap **Delete All Profiles** to confirm.

NOTE If you see **Delete Other Profiles** rather than **Delete All Profiles**, you have linked contacts that come from accounts whose info you can't change on your phone (like Facebook and LinkedIn). Tap it. To delete any remaining contacts, go to the account online using your computer and delete them there.

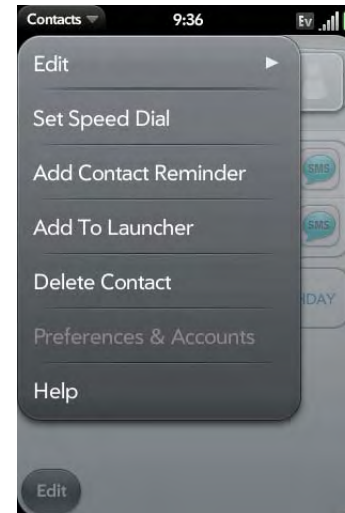

If you delete a contact that is assigned to an online account, the contact is deleted in the online account also.

Customize Contacts

- 1 [Open Contacts](#) .

- 2 Open the [application menu](#) and tap **Preferences & Accounts**.



- 3 Set the following options:

List Order: Tap to select the criteria by which the contact list is sorted. If you select **Last name** to sort on, the names are alphabetized by last name, but they still appear in the Contacts list as first name followed by last name. If you select **First name** to sort on, names are alphabetized by first name.

You can also choose to sort by **Company & first name** or **Company & last name**. In these cases, the company name is alphabetized, and within the company, whichever you choose, the names are still listed as first name followed by last name.

Accounts: Tap an account to change login settings and sign in using the new settings.

Default account: Tap the current default account, and then tap another account you want to now be the default account. New contacts you create are assigned to this account unless you specify otherwise.

Sync Now: Tap to manually synchronize your online accounts.

Add An Account: Tap, and then tap an account type. Enter the account information. Before you can set up an account on your phone, you must already have an account online with the provider.

Manually synchronize Contacts with your online accounts

If you want to get contacts from an online account on your phone immediately—or upload contacts from your phone to the online account—you can do a manual sync. This synchronizes Contacts with all the accounts you have set up on your phone, and it synchronizes your calendar and email with those accounts also.

- 1 [Open Contacts](#) .
- 2 Open the [application menu](#) and tap **Preferences & Accounts**.
- 3 Tap **Sync Now**.

Stop synchronization of Contacts with an online account

If you synchronize contacts with an online account, to stop synchronizing, you have to delete the account from Contacts. This stops synchronization of contacts only—if you also sync email or calendar events with that online account, those continue to synchronize. Exchange accounts, however, are an exception to this: If you delete an Exchange Contacts account, Exchange data is removed from all apps (Calendar, Tasks, and Email). For all online accounts, including Exchange accounts, deleting the account from Contacts deletes the associated contact entries from your phone only. The entries are not deleted from the online account.

- 1 [Open Contacts](#) .
- 2 Open the [application menu](#) and tap **Preferences & Accounts**.
- 3 Tap the account name.
- 4 Tap **Remove Account** and tap **Remove Contact Account**.

Send Contacts

You can send all contacts to a hands-free car kit (with Bluetooth), or send a contact with multimedia messaging (MMS) or email.

To send all contacts to a car kit, first ensure that your car kit is discoverable by your phone (see [Connect with a paired device](#)).

- 1 [Open Contacts](#) .
- 2 Open the [application menu](#) and tap **Send All To Car Kit**.

To send one contact:

- 1 [Open Contacts](#) .
- 2 Tap a contact.
- 3 Open the [application menu](#) and tap **Send Contact**.
- 4 Tap one of the following:
 - Send To Car Kit** (Your Bluetooth device needs to be on and detected.)
 - Send Via MMS** (Messaging opens.)
 - Send Via Email** (Email opens.)

Receive vCards

To get an emailed vCard into Contacts.

- 1 From the open Email message, tap the vCard attachment.

The vCard opens automatically within Contacts.
- 2 Tap **Add To Contacts**.

- 3 Tap one of the following:

Add to Existing: Add the vCard information to an existing contact.

Save as New: Save the vCard as a new contact.

Calendar

How do I get events into Calendar?

You have a few options for getting events to show up in Calendar:

Connect to an online calendar: If you have a calendar in an online account that works with the Palm Synergy™ feature (for example, Google or Microsoft Exchange), you can set up Calendar on your phone to synchronize and display events that you store in the online calendar. Set up synchronization the first time you open Calendar (see [Use Calendar for the first time](#)), or anytime after that (see [Customize Calendar](#)). After you set up the connection to the online calendar, events you enter online show up automatically in Calendar, and events you enter on your phone sync to the online account.

DID YOU KNOW? If you synchronize with your Google calendar, you can add Google Weather to the calendar on your desktop and have it appear in Calendar on your phone. On your desktop, log in to your Google Calendar account and open **Calendar Settings**. Click the **General** tab, enter your location, and click the temperature unit you want in **Show weather based on my locations**. The next time your phone synchronizes with your Google account, Google Weather appears in Calendar on your phone.

The Synergy feature makes it easy to synchronize other data from an online account. By setting up synchronization in one app, synchronization of the other apps is automatically set up for you. For example, if you set up your Gmail account in Email before you set up Calendar, when you first open Calendar, you find that your Google calendar events are already downloaded. And when you first open Contacts, you find that your Google contacts are already in your phone's Contacts app.

NOTE See [Online accounts available for webOS phones](#) for the current list of online accounts that you can set up on your phone, from which you can access contacts.

See [Online accounts available for webOS phones](#) for the current list of online accounts that you can set up on your phone, from which you can access Calendar events.

Enter an event directly in Calendar: See [Create an event](#) for instructions. You can assign the event to one of your online calendars—if you do, it synchronizes with the online calendar. Or you can create the event in your Palm profile account, which means it shows up on your phone only. Palm profile events are included in the daily backup of your Palm profile information, so you can restore them if they are accidentally erased.

Use a third-party sync solution: You can keep your info up to date wherever you are, without having a direct connection to your computer. When you sync, any changes you've made to Contacts are automatically added to your computer or to your phone.

Transfer calendar events using the Data Transfer Assistant: When you transfer calendar events from desktop software, you select which account to assign those events to. Look for those events in the account you select (see [How do I get data off my computer?](#)).

Layered calendars


Suppose you use the calendar in both Microsoft Exchange and in Google. If you set up both of those accounts to sync with your phone, your phone's Calendar app shows the events from both in a single view—a layered calendar with events that are color-coded to identify which account they come from. Individual events are stored separately with your different providers; the events are just assembled in one view on your phone for your convenience.

If you change an event, the change is made in the appropriate calendar.

You can also look at the events of just one calendar at a time.

Use Calendar for the first time

1 Open Calendar .

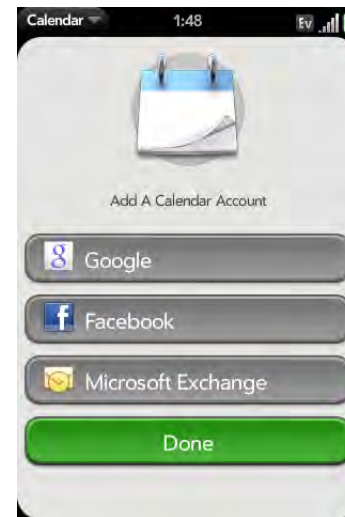

2 Do one of the following:


- To set up your first online account to sync: Tap the account type, enter the account information, and tap **Sign In**.
- To set up a second online account to sync: Tap **Add An Account**, tap the account type, enter the account information, and tap **Sign In**.
- To open Calendar without creating an online account: Tap **Done**. This opens your Palm profile account, and you can start creating events in this account.

NOTE If you choose to sync Calendar with an online Facebook account, your Facebook events show up in Calendar, but you cannot add calendar events to Facebook from the Calendar app. To work directly with Facebook, go to facebook.com in the Web application (see [Web](#)). To update your status and see your Facebook news feed, use the Facebook application developed for your phone (see [Facebook](#)).

Create an event

If you are using Calendar for the first time, you go through a few different steps to add or access the calendar events on your phone (see [Use Calendar for the first time](#)). Follow this procedure to add events directly on your phone after the first time you use Calendar. For information on managing your phone's time settings, see [Date & Time](#).

- 1 **Open Calendar** .

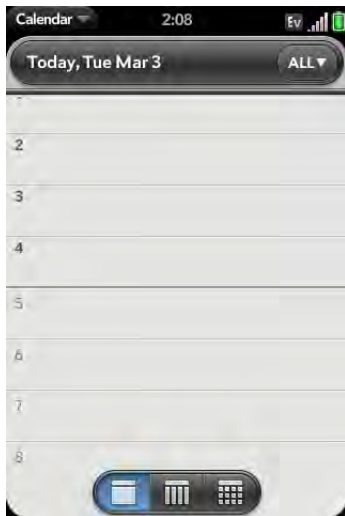

- 2 Tap **All** or an online account name in the upper-right corner, and tap the calendar you want to use for this event.

If you create an event in All Calendars view, the event is created in the calendar set as the default (see [Customize Calendar](#)).

NOTE If an account doesn't appear in the list, you can't add data to that account from your phone.

- 3 Go to the day you want (see [Move around in Calendar](#)) and tap a blank time slot.

In Day view, available time slots between events are compressed and labeled **X Hrs Free**. To expand free time so you can enter an event, tap **X Hrs Free**.

- 4 Enter the event name, and then do one of the following:
 - Press **Enter**  to add the event to the calendar.
 - Tap  to the right of the name or enter more details about the event. Make the back gesture to return to Day view.

Don't look for a save button—your info is automatically saved when you make the back gesture to close the event.

Enter the event location


- 1 While creating an event (see [Create an event](#)), tap  to the right of the event name. To enter the event location after creating an event, tap the event name in Day view.
- 2 Tap **Event location** and enter the location.

TIP Need to find the event location on a map? Open an event that has a location specified in the Event Location field, open the [application menu](#), and tap **Event Location**. Tap either **Show on Map**, which shows the location on Google Maps, or **Get Directions**, which gives directions from your current location.

Schedule a repeating event

- 1 While creating an event (see [Create an event](#)), tap  to the right of the event name. To set an event as repeating after creating the event, tap the event name in Day view.

- 2 Tap **No Repeat** and then tap a repeat interval, or **Custom** to define a repeat interval and set the end date.

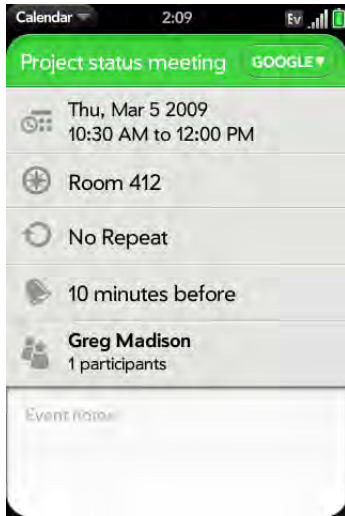

DID YOU KNOW? To enter a birthday, anniversary, or holiday, create an untimed event. Then select **Yearly on [date]** as the repeat interval.

Add an alarm to an event

- 1 While creating an event (see [Create an event](#)), tap ⓘ to the right of the event name. To add an alarm after creating an event, tap the event name in Day view.
- 2 Tap 🔔 and tap the interval for the alarm.

To change notification sounds for events

The settings you select here apply to individual email accounts. You can apply different settings to each email account.

- 1 [Open Calendar](#) 📅.
- 2 Open the [application menu](#) and tap **Preferences & Accounts**.
- 3 Under **Default Event Reminder**, tap **Timed** and choose the notification timing, or if it is an all-day event, choose **All Day** and choose the notification timing.
- 4 Under **Event Reminders**, tap **Alert** and choose one of the following:

Vibrate: The phone vibrates and makes no sound.

System Sound: The system sound plays. If the ringer is off, the phone vibrates (see [Manage system sounds and notifications](#)).

Ringtone: A ringtone that you choose plays.

Mute: No sound plays and the phone does not vibrate.

Add a note to an event


- 1 While creating an event (see [Create an event](#)), tap ⓘ to the right of the event name. To add a note after creating an event, tap the event name in Day view.
- 2 Tap **Event notes** and enter the note.

NOTE If a phone number is displayed in an event note as an underlined link, you can tap the number to make a call. This displays the phone dial pad with the number already entered.

Create an all-day (untimed) event

An all-day event such as a birthday appears in your calendar without a specific time slot.

- 1 **Open Calendar** .
- 2 Go to the day you want, open the [application menu](#) and tap **New > All Day Event**.

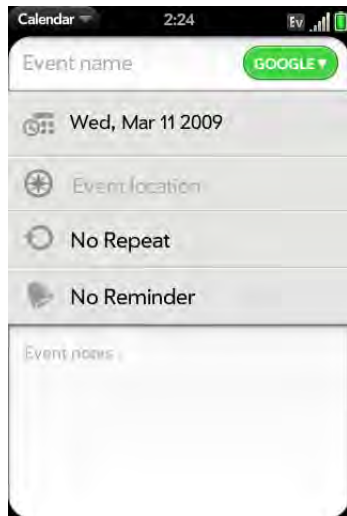

- 3 Enter the event details.

Change the Calendar display

You can change the display of Calendar to show the events from all of your calendars or just the events recorded in one of your calendars. You can also change the color of each calendar, and set whether the calendar view displays one day, a week, or a month.

- 1 **Open Calendar** .
- 2 Tap an icon on the bottom of the screen to see different calendar views:

Table 1. Calendar Views

Icon	Description
	Day view
	Week view
	Month view

- 3 Tap the account icon in the upper-right corner to do any of the following:
 - To switch the Calendar account you're viewing: Tap **All** or one of your Calendar accounts.
 - To remove a Calendar account from the layered calendar view (All): Scroll down and tap **Calendar View Options**. For the account you want to remove, tap **On** to switch the view option to **Off**.
 - To change the color that identifies a Calendar account: Scroll down and tap **Calendar View Options**. Tap the current color, and then tap a new color in the list.

Move around in Calendar

- Next or previous day: In Day view, swipe left or right on the screen.
- Next or previous week: In Week view, swipe left or right on the screen.
- Next or previous month: In Month view, swipe up or down on the screen.
- Go to a specific month, date, or year: Open the [application menu](#) and tap **Jump To**. Tap the month, day, and year and tap **Go To Date**.
- Go to today: Open the [application menu](#) and tap **Show today**.

TIP Other ways to go to today: When you're in Day View, just tap the Day view icon. Also, in the [application menu](#), tap **Jump To** and tap **Go To Today**.

Quickly glimpse your schedule

- In Day or Week view, slightly drag left or right to peek at the next/previous day or week without changing the current view.
- In Month view, slightly drag up or down to peek at the next/previous month.


Delete an event

If you delete an event that is assigned to an online account, the event is also deleted in the online account.

IMPORTANT When you delete a Microsoft Exchange event on your phone, notification is not sent to attendees.


- 1 [Open Calendar](#) .
- 2 Delete an event in one of two ways:
 - In Day view, press and hold the **orange**  key, and tap the event. You have the option to delete this event or to cancel the delete.

- Tap the event name. Open the [application menu](#) and tap **Delete event**, and then tap **Delete** to confirm. If this event is one of a series of repeating events, tap the option to delete just this event or the entire series.

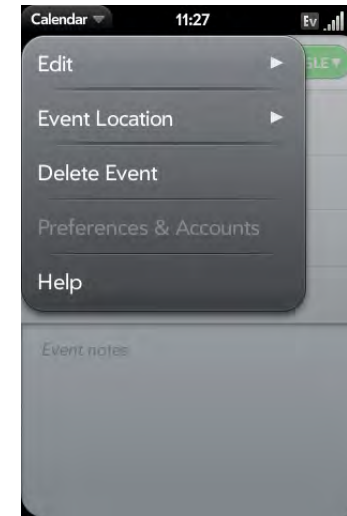

Respond to an event reminder

When an event reminder appears in the notification bar at the bottom of the screen, tap the event description to open the event, or tap one of the following:

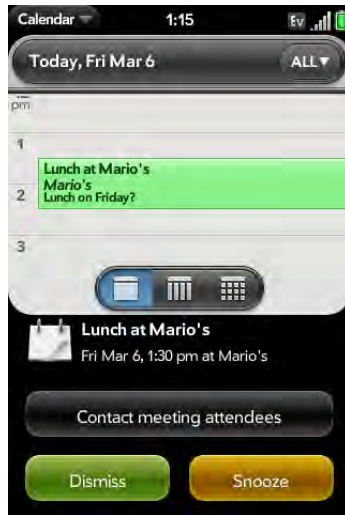

Contact meeting attendees: This opens an email message with the participants' addresses added to the To field. The default message text is "Running late, on my way..."—you can edit the text before sending the message.

Dismiss: Close the notification.

Snooze: The reminder reappears in five minutes.

View meeting participants

If you receive a meeting request, you can view the participants.

- 1 On your calendar, tap the meeting request. The Participants field shows the organizer name plus the number of participants.
- 2 Tap the number to see the participants' names.
- 3 (Optional) Tap a participant's name. If the participant is a contact, the contact entry is displayed. If the participant is not a contact, tap **Add to Contacts** to add the participant to your contacts list.

Customize Calendar

- 1 [Open Calendar](#) .
- 2 Open the [application menu](#) and tap **Preferences & Accounts**.



- 3 Set the following options:

First Day of Week: Select the day that appears as the start of the week in Week view and Month view.

Day Start and End: Tap to enter the default start and end times that appear in Day view and Week view.

Default Event Reminder: Tap the time interval for a notification to appear for timed and all-day events. Reminders you set for individual events override the default setting.

Event Reminders: Select to play a sound when a calendar notification appears.

Default Event Duration The default event duration is set to one hour. Tap to change this to **30 minutes** or **2 hours**.

Accounts: For all calendar accounts, tap an account to change login settings or remove the account. You should change login settings only if you have changed this information for the calendar account online—the information you enter here must match the information in the online account.

Calendar View Options: Set the color for events created in that account and show or hide that account in All Calendars view.

Default Calendar: If you create an event in All Calendars view, the event is assigned to your default calendar. Tap to change the default calendar.

Add An Account: Tap the account type and enter your username and password for the online calendar account. Before you can set up an account on your phone, you must already have an account online with the provider.

Manually synchronize Calendar with your online accounts

If you want to get calendar events from an online account on your phone immediately—or upload events from your phone to the online account—you can do a manual sync. This synchronizes Calendar with all the accounts you have set up on your phone, and it synchronizes your contacts and email with those accounts.

- 1 [Open Calendar](#) .
- 2 Open the [application menu](#) and tap **Preferences & Accounts**.
- 3 Tap **Sync Now**.

Stop synchronization of Calendar with an online account

If you synchronize calendar events with an online account, to stop synchronizing, you have to delete the account from Calendar. This stops synchronization of calendar events only—if you also sync contacts or email messages with that online account, those continue to synchronize. Deleting the account from Calendar also deletes any associated events from your phone only. The entries are not deleted from the online account.

NOTE Microsoft Exchange is an exception to other online accounts. If you delete your Exchange account from Calendar, the account is also deleted from Contacts, Email, and Tasks.

- 1 [Open Calendar](#) .
- 2 Open the [application menu](#) and tap **Preferences & Accounts**.
- 3 Under **Accounts**, tap the account name.
- 4 Tap **Remove Account** and tap **Remove Calendar Account**.

Tasks

Create a task list

A task list is a group of related to-do items. All individual tasks you create (see [Create a task](#)) must be placed in a task list.

1 [Open Tasks](#) .

2 Tap .



3 Enter the list name in the List Name field and press **Enter** .


4 Create a task (see [Create a task](#)).

Create a task

1 [Open Tasks](#) .

2 Tap the list you want to assign the task to.

3 Tap .

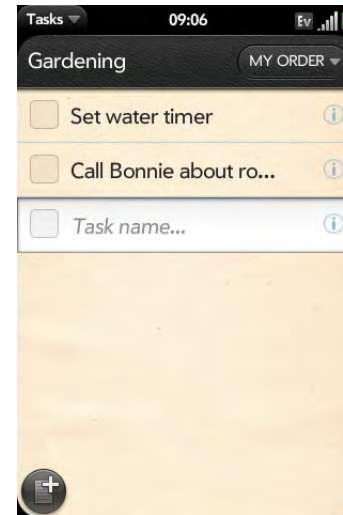


4 Enter the task name in the Task name field. To set the task priority, see [Set task priority, due date, and other details](#).

Set task priority, due date, and other details

1 [Open Tasks](#) .

2 Tap the list containing the task.

- 3 Tap ⓘ to the right of the task name.

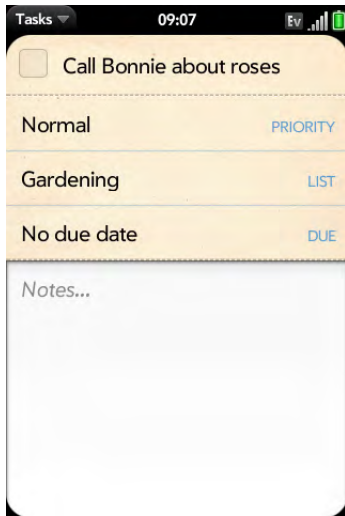

- 4 Set any of the following:

Priority: High priority tasks appear in red. Normal priority tasks appear in bold text, and low priority tasks appear in gray text.

List: Assign the task to a different list.


Due: Tap **No due date**, and tap a due date option. If you set a due date, a notification appears at bottom of the screen on the due date. Tap the notification to open the task.

- 5 To enter a note about the task, tap **Notes** and enter the note.

TIP If you add a due date to a task and then want to add more details, tap the date to open the task details view.

Check off a task

- 1 Tap the list containing the task.
- 2 Tap the box to the left of the task name.

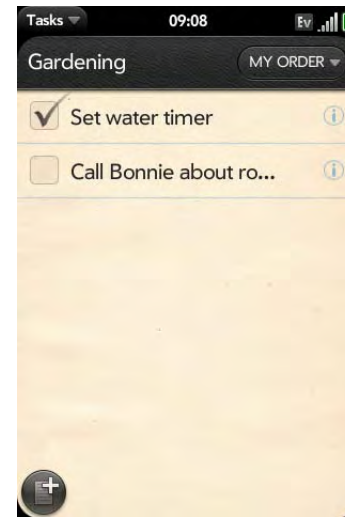

View tasks that are due today

- 1 **Open Tasks** ⓘ. The number to the right of the List all tasks field shows the total number of tasks that are due today or are overdue. The number to the right of each task list name shows the number of tasks in that list that are due today or overdue.



- 2 Tap a task list name to view tasks that are due today or overdue.

TIP Tap **Exchange** to view tasks synchronized from your Microsoft Exchange account.


Rename a task

- 1 On the task list, tap the task name.
- 2 Enter the new name and press **Enter** .

Sort a task list

You can sort a task list to show all tasks (the default setting), remaining tasks, or completed tasks.

- 1 [Open Tasks](#) .
- 2 Tap the list you want to sort.
- 3 Tap the button in the upper-right corner of the screen to sort the list by **My Order**, **Due Date**, or **Priority**.

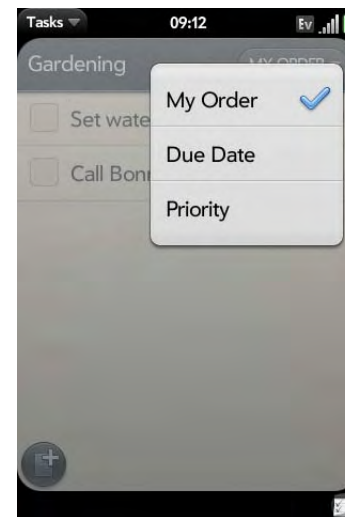

- 4 To manually sort tasks, tap and hold a task, wait for the visual cue, and then drag it to a new location in the list (see also [Check off a task](#)).

Reorder your tasks

You can change the order of a task list or an individual task.

- Tap and hold the list or task name, wait for the visual cue, and drag the item to another position.

Set due dates for all tasks in a list

- 1 [Open Tasks](#) .
- 2 Tap the list containing the tasks.
- 3 Open the [application menu](#) and tap **Set Due Date For All**.



- 4 Tap the month, date, and year, and then tap **Set Due Date**.
- 5 To remove a previously assigned due date, tap **No Due Date**.

Mark all tasks in a list completed/incomplete

- 1 [Open Tasks](#) .
- 2 Tap the list containing the tasks.
- 3 Open the [application menu](#) and tap **Mark All** and then tap **Mark All Completed/Mark All Incomplete**.

Hide or delete all completed tasks in a list

- 1 [Open Tasks](#) .
- 2 Tap the list containing the tasks.
- 3 Open the [application menu](#).
- 4 Do one of the following:
 - To hide completed tasks: Tap **Hide Completed**.
 - To delete completed tasks: Tap **Delete Completed Tasks**.

Delete a task or a task list


- Throw the task or task list off the side of the screen and tap **Delete** to confirm.

Memos

If you used the Data Transfer Assistant and imported notes from Outlook on your desktop to your phone, those notes are in Memos. Your Microsoft Exchange notes, however, do not sync. All memos are backed up to your Palm profile.

Create a memo

- 1 [Open Memos](#) .

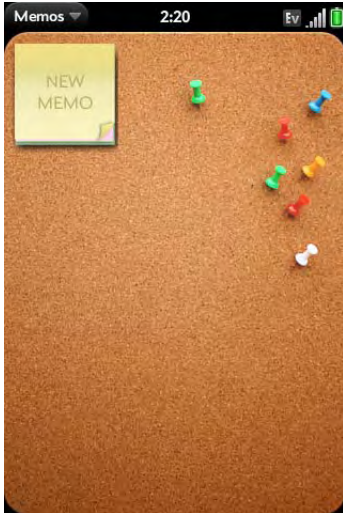

- 2 Do one of the following:
 - Tap **New Memo** .
 - Open the [application menu](#) and tap **Add A Memo**.
- 3 Enter the memo text. Memos are saved as you type.

Find a memo

- In Memos, begin typing any letters or numbers in the memo, and then tap the memo when it appears.

NOTE The results of universal search that you access in Card view or the Launcher do not include memos.

Edit a memo

- 1 [Open Memos](#) .
- 2 Tap the memo you want to edit.
- 3 Tap the screen to position the cursor (see [Text selection gestures](#)), and edit the memo text.


TIP In the [application menu](#), tap **Edit** > **Copy All** to select the whole memo.

Change the color of a memo

Color-code your memos to help you recognize memos of a certain type. For example, make all of your grocery lists blue.

- 1 [Open Memos](#) .
- 2 Tap the memo.

- 3 Tap the lower-right corner of the screen, and tap the new color.

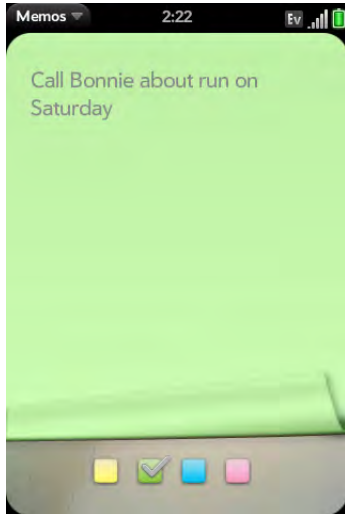

Delete a memo

- 1 In an open memo, open the [application menu](#) and tap **Delete**.
- 2 Tap **Delete** to confirm.

Email a memo

- 1 In an open memo, open the [application menu](#) and tap **Email Memo**.
- 2 Enter the email address.

The subject, “Just a quick memo”, is automatically filled in—you can edit the text before sending the message.

- 3 Tap .

Clock

The Clock application lets you set an alarm. You can set Clock to wake you up at the same time wherever you are, for example, the recurring 7AM alarm you set in San Francisco rings at 7AM in New York. Use Calendar to have your appointment times adjusted so that the notification for a 9AM meeting in San Francisco will sound at noon when you're in New York (see [Create an event](#)).

Manage Clock

- 1 [Open Clock](#) .
- 2 Tap .

 - To change the clock display: Open the [application menu](#), tap **Preferences**, and tap the **Theme**. Then tap a theme.
 - To change the time: See [Date & Time](#).
 - To turn off the alarm when the ringer switch is off: Open the [application menu](#), tap **Preferences**, and tap **Yes** to set **Play alarm anyway** to **No**.


Set an alarm

Make sure ringtone volume is on and you can hear it, and make sure the preference to play the alarm even when the ringer switch is off is set to Yes. That way you can sleep through the night without being disturbed by phone calls, but your alarm still wakes you up in the morning (see [Manage system sounds and notifications](#)).

NOTE When you turn everything off on your phone by pressing and holding **power**  and tapping **Power > Shut Down** alarms don't sound.

- 1 [Open Clock](#) .

- 2 Tap , and then tap .

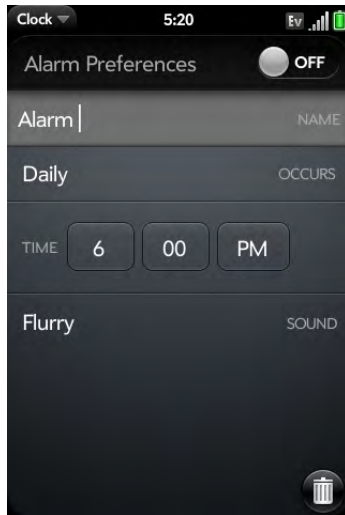

- 3 Set the following options:

Alarm Preferences: Tap **Off** in the upper right to turn the alarm on. When an alarm is turned on, the alarm icon is displayed in the lower-right corner of the phone screen. Tap the icon to see alarm details.

Name: Enter a name for the alarm.

Occurs: Tap to select the alarm frequency.

Time: Tap to set hour, minute, and AM/PM for the alarm.

Sound: Tap to open the list of ringtones, and then tap the name of a ringtone. (Optional) Tap  to preview it.

TIP When you set an alarm, you can adjust the alarm volume by pressing the **volume** button on the side of the phone. This also sets the ringtone volume for incoming calls.

When an alarm sounds on your phone, tap **Dismiss** to stop it or **Snooze** to have it sound again in five minutes.

Cancel an alarm

When an alarm is canceled, it remains in the Clock app, but it doesn't sound again until you turn it back on.

- 1 [Open Clock](#) .
- 2 Tap , then tap **On** to turn an alarm off.

Change the alarm volume

- 1 [Open Sounds & Ringtones](#) .
- 2 Tap, hold, and drag the **Ringtone Volume** slider.

Delete an alarm

When you delete an alarm, it is removed from the Clock app.

- 1 [Open Clock](#) .
- 2 Tap , then tap the alarm name.
- 3 Tap .

Calculator

Use Calculator for addition, subtraction, multiplication, and division, and also for determining percent and square root. You can enter numbers in Calculator using either the onscreen keypad or the phone's keyboard.

Perform calculations

- 1 **Open Calculator** .
- 2 Enter numbers and perform calculations.

NOTE Press the **space bar** to access additional operations.

Calculator buttons

Table 2. Calculator buttons


Button	Description
	Clear the current calculation or displayed number.
	Add the currently displayed number to memory.
	Subtract the currently displayed number from memory.
	Display the memory.
	Clear the memory.

Facebook

The Palm Facebook app allows you to make a status comment, view and respond to friends' comments, and attach photos to your wall. Before you begin, download the Facebook app from the App Catalog. It's free (see [Download a free application](#)).

- 1 **Open Facebook** .
- 2 Do any of the following:
 - Show new posts: If you see this at the top of your Facebook page, tap it to show new comments.

- Update your status: Type a comment, and then tap **Share**.

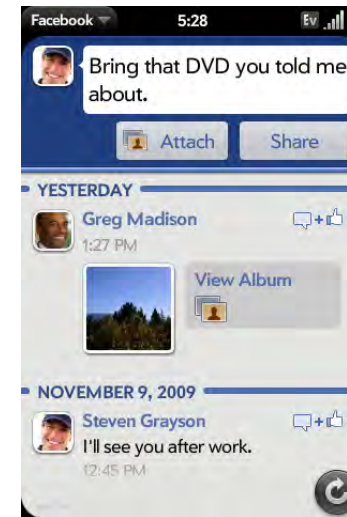

- Add a photo to your status: Type a comment, tap **Attach**, choose a photo or take a new one, tap **Attach Photo**, and then tap **Share**.
- Add a comment to a post: Tap , tap  (optional), type your comment, and then tap .
- Comment on a photo: Tap the photo, tap , type your comment, and then tap .



Photos, videos, and music

There's no need to carry a separate media player; you can play music and videos, and view photos, on your Palm® Pre™ phone. Listen to music through the built-in speaker or through a headset or headphones (sold separately).

In this chapter

110	Camera
110	Photos
115	Videos
117	YouTube
118	Music

Camera

Take a picture

Your phone comes with an easy-to-use, 3-megapixel camera with an LED flash. You can use the camera to take pictures, and then use the Photos app to view them and send them to your friends and family (see [Share a picture](#)). To add a personal touch to your phone, use your pictures as your wallpaper (see [Save a picture as wallpaper](#)) and as caller ID images (see [Add a picture to a contact](#)).

- 1 **Open Camera** .



- 2 The camera is set to automatically determine if the flash is needed. If you want to change the flash setting, tap  to keep the flash on, and tap again to keep the flash off.
- 3 To take the picture in landscape view, turn your phone 90 degrees.
- 4 Press **Space**  or tap .

TIP Press and hold **Space** to take pictures in continuous burst mode. Release **Space** to stop taking pictures. Continuous burst mode allows you to capture several images with a single action.

The picture you took is automatically saved in JPG format. You can keep snapping pictures, and then go to Photos to look at them and delete the ones you don't want.

DID YOU KNOW? Your phone offers another way to “take a picture”: You can save any currently displayed screen as a picture file (also known as a screen capture or screenshot). When the screen you want is open, press and hold the **orange** key + **Sym** + **P**. The picture is saved to the **Screen captures** album in Photos, and you can work with it like any other picture.

Review pictures

- 1 After taking a picture, tap the thumbnail of the picture in the lower-left corner of the screen. This opens the picture in the Photo roll of the Photos application.
- 2 Swipe left or right on the screen to view other pictures you took.

Photos

Look at pictures


To get pictures on the phone, you can do any of the following:

- Take a picture with your phone's camera (see [Take a picture](#)).
- Copy pictures from your computer (see [Copy files between your phone and your computer](#)).
- Receive pictures as email attachments (see [Open email attachments](#)).

- Receive pictures as part of a multimedia message (see [Receive and view text and multimedia messages](#)).

You can view a picture as an email attachment in JPG, GIF, BMP, or PNG format. You can view a picture as part of a multimedia message in JPG format. In the Photos application, you can view pictures you take with the camera or copy from your computer in JPG, BMP, or PNG format. You can also look at pictures on the web directly in the web browser (see [Web](#)).

- 1 **Open Photos** .
- 2 Tap the album containing the picture, and tap the thumbnail of the picture. The Photo roll album contains pictures you have taken with your phone's camera.

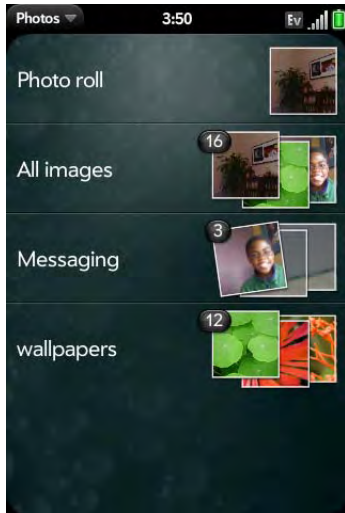

- 3 Swipe left or right on the screen to look at other pictures in the album.

Organize your pictures into albums

The Photos application contains the following default albums:

Photo roll: Contains all pictures you take with your phone's camera.

Wallpapers: Contains pictures that come with your phone that you can use as your wallpaper.

NOTE If you use one of your own pictures as wallpaper (see [Save a picture as wallpaper](#)), that picture is not saved to the Wallpapers album.

The Photos application creates additional albums automatically as you add the following types of pictures to your phone:

Miscellaneous: Contains any pictures you copy from your computer that you do not assign to an album, as described in the procedure in this section.

Messaging: Contains any pictures in JPG format that you save from a multimedia message.

Downloads: Contains any pictures in JPG, GIF, BMP, or PNG format that you save from an email attachment.

Screen captures: Contains any screenshots that you take.

You can assign any pictures on your phone to one of these albums or to an album you create. To create and assign pictures to albums, you must put your phone into USB Drive mode. You then create the albums and move pictures into them using your computer.

TIP Besides using USB Drive mode to copy your photos, videos, and DRM-free music from your computer to your phone, you can also use solutions available from third-party software developers (sold separately) that facilitate the transfer of media files to your phone. For more information, open the browser on your computer and go to palm.com/sync-solutions.

- 1 Connect your phone and your computer using the **USB cable**.
- 2 On your phone, tap **USB Drive**. If prompted, tap **OK**. On your computer, your phone appears as a removable drive.

NOTE On a Windows computer, if the Found New Hardware wizard opens, click **Cancel** to close the wizard.

- 3 Open **My Computer** (Windows XP), **Computer** (Windows Vista), or the **Finder** (Mac), and double-click the drive representing your phone.
- 4 To create an album, use your computer's controls for creating a new folder. To be sure the Photos application can find the album, create it at the root level of the drive representing your phone, not as a subfolder of another folder.

NOTE The Photos application displays an album you create only if the album contains at least one picture in JPG, GIF, BMP, or PNG format.


- 5 Assign pictures to albums using your computer's controls to copy or move items. It is easiest to find the pictures you want by displaying them as thumbnails.
- 6 End the connection safely. On a Windows computer, right-click the drive representing your phone and click **Eject**. On a Mac computer, from your desktop, drag the drive representing your phone to the **Trash**. The Trash icon changes to **Eject**.
- 7 Disconnect the **USB cable** from the computer and from the phone when the USB Drive screen no longer appears on your phone.

Add a picture to a contact

You can also add a picture to a contact using the Photos application.

TIP You can also add a picture to a contact in the Contacts application (see [Add a photo to a contact](#)).

- 1 Tap a picture thumbnail to view it full-screen.
- 2 If  is not visible, tap the screen to display it.

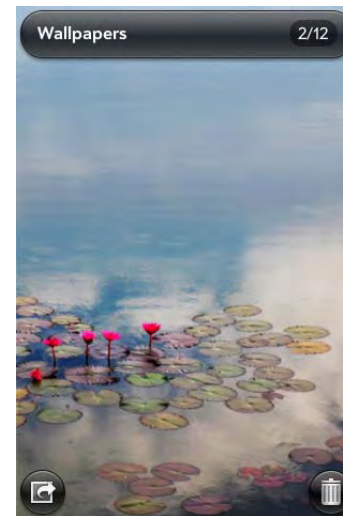

- 3 Tap  and tap **Assign to contact**.
- 4 Enter the contact name and tap the contact.

- 5 (Optional) Do either or both of the following:



- To zoom out or in on part of the picture: Pinch in or out on the picture.
- To capture the portion of the picture you want for the contact photo: Tap and hold the picture, and then drag the portion you want to the center of the onscreen box. This portion becomes the contact photo.

- 6 Tap **Set To Contact**.

Save a picture as wallpaper

Your wallpaper appears as the background in Card view.

- 1 Tap a picture thumbnail to view it full-screen.
- 2 If  is not visible, tap the screen to display it.
- 3 Tap  and tap **Set wallpaper**.

- 4 Do either or both of the following:

- To zoom out or in on a part of the picture, pinch in or out on the picture.
- To capture the portion of the picture you want to use as wallpaper, tap and hold the picture, and then drag the portion you want to the center of the onscreen box. This portion becomes the wallpaper.

- 5 Tap **Set Wallpaper**.

Share a picture

You can send a picture to other picture-enabled devices or to an email address as an attachment.

- 1 Tap a picture thumbnail to view it full-screen.
- 2 If  is not visible, tap the screen to display it.
- 3 Tap  and tap **Share via email** or **Share via MMS**.
- 4 Create the email or multimedia message.

TIP You can also copy pictures from your phone to your computer (see [Copy files between your phone and your computer](#)).

Upload a picture to the web

To upload a picture to a web service such as Facebook or Photobucket, you must already have an account with the service, and you must have the account set up on your phone. You can set up the account on your phone during the upload process, as described in this procedure, or you can set it up at any other time (see [Set up an online pictures account on your phone](#)).

- 1 Tap a picture thumbnail to view it full-screen.
- 2 If  is not visible, tap the screen to display it.
- 3 Tap  and tap **Upload**.
- 4 Do one of the following:
 - If you have already set up your picture web service on your phone, tap the name of the service you want to use.
 - If you have not set up your picture web service on your phone, tap **Add An Account** and tap the account type. Enter your username and password and tap **Sign In**.

Set up an online pictures account on your phone

To upload pictures to an account you have with a web service such as Facebook or Photobucket, you must set up the account on your phone.

DID YOU KNOW? If you set up a Facebook account in the Photos application, your Facebook contacts and calendar events appear in the Contacts and Calendar applications on your phone also. Likewise, if you set up a Facebook account in Contacts or Calendar, the account is already set up to allow you to upload pictures from Photos. See [Online accounts available for webOS phones](#) for information about the behavior of Facebook, Photobucket, and other online accounts on your phone.

- 1 [Open Photos](#) .

- 2 Open the [application menu](#) and tap **Preferences & Accounts**.



- 3 Tap **Add An Account**, and tap the type of account you want to add.
- 4 Enter your account username and password and tap **Sign In**.

Delete a picture

- 1 Tap a picture thumbnail to view it full-screen.
- 2 If  is not visible, tap the screen to display it.
- 3 Tap .
- 4 Tap **Delete** to confirm.

Videos

Record a video

- 1 **Open Camera** .



- 2 If  is hidden, tap  to display it.
- 3 Tap  to begin recording.
- 4 (Optional) To record a video in landscape view, turn your phone 90 degrees.
- 5 Tap  to stop recording.
- 6 (Optional) To watch a video when you finish recording: Tap the thumbnail on the lower-left side of the screen > .

Edit videos you recorded

- 1 **Open Videos** .
- 2 Tap **Video Roll**, and tap the video date or title.
- 3 To rename the video: Tap the video date or name and enter a new name.

- 4 To add a description: Tap **Description** and enter the description.
 - 5 Tap .
 - 6 Video frames are displayed at the bottom of the screen. To shorten the video: Tap, hold, and drag either end of the video frame display.
 - 7 After you shorten the video, tap, hold, and drag the video frames to the left or right to select the video segment you want to save.
 - 8 Tap .
- The edited copy of the video is saved in Video Roll along with the original.

Upload or share videos you recorded

- 1 **Open Videos** .
- 2 Tap **Video Roll**, and tap the video date or title.
- 3 Tap .
- 4 Tap any of the following:

Upload to YouTube

Upload to Facebook, and then tap **Upload Video** (you must already have a Facebook account)

Share via email

Share via MMS

- 5 To share a link to a video you uploaded to Facebook: Tap , and then tap **Share Facebook Link**. Tap **Email** or **Messaging**.

Watch a video

To get videos on your phone, you can do any of the following:

- Record a video (see [Record a video](#)).
- Copy videos from your computer (see [Copy files between your phone and your computer](#)).
- Receive videos as email attachments (see [Open email attachments](#)).
- Receive videos as part of a multimedia message (see [Receive and view text and multimedia messages](#)).

You can view DRM-free videos that you receive as email attachments or that you copy from your computer in the MPEG4, H.263, H.264, MP4, M4V, 3GP, 3GPP, 3G2, and 3GP2 formats. You can view videos you open in a multimedia message in MP4 format. Videos play on your phone in landscape orientation.

KEY TERM DRM-free file: A file that is not protected by Digital Rights Management. DRM-free video files can be copied as many times as you like and can be played on your Pre phone.

Use the YouTube application to view YouTube videos (see [YouTube](#)).

BEFORE YOU BEGIN Before you put videos on your phone, make sure you have enough storage space on your phone to fit the file. [Open Device Info](#) ⓘ and look at the **Available** field under **Phone**.

1 Open Videos .



2 Tap the video you want to watch.

Use video playback controls

Playback controls automatically appear when you start a video. They disappear after a few seconds. Tap the video to manually display or dismiss the controls.



Table 1. Video playback controls

Control	Function
	Play.
	Pause.
	Move forward or backward (tap and hold the slider, then drag it right to move forward or left to move backward).
	Switch between full-screen view and the original size.

TIP To skip ahead 30 seconds in a video, flick left to right on the screen. To jump back 10 seconds, flick right to left.

Delete a video

- 1 **Open Videos** .
- 2 Tap the album containing the video.
- 3 Throw the video off the side of the screen, and tap **Delete**.


YouTube

Watch a YouTube video

The YouTube application on your phone lets you watch videos available online at the YouTube website. Videos are displayed on your phone in landscape orientation.

- 1 **Open YouTube** .

- 2 Do one of the following:

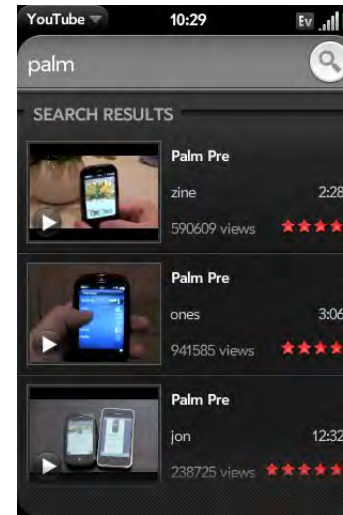

- To search for a video: Tap **Search All Videos**, enter a search term, and press **Enter**  or tap .
- To display the most highly rated videos: Tap **Videos** and tap **Popular** (the default view).
- To display the most frequently viewed videos: Tap **Videos** and tap **Most Viewed**.
- To display videos you have recently viewed: Tap **Videos** and tap **History**.

- 3 When the video you want appears, do one of the following:

- To view the video: Tap the video thumbnail.
- To view video details: Tap the text to the right of the video thumbnail.

DID YOU KNOW? Some videos can be viewed in YouTube on your computer only. For those videos, you can view video details on your phone, but if you try to play the video on your phone, an error message appears.

Use video playback controls

Playback controls automatically appear when you start a YouTube video. They disappear after a few seconds. Tap the video to manually display or dismiss the controls.

Table 2. Video playback controls

Control	Function
	Play.
	Pause.
	Move forward or backward (tap and hold the slider, then drag it right to move forward or left to move backward).
	Switch between full-screen view and the original size.

Find related videos

Find videos from the same author or otherwise related to the one you selected.

On the video details screen (see [Watch a YouTube video](#)), do one of the following:

- View videos from the same author: Tap **More > More from This Author**.
- View related videos: Tap **More > Related Videos**.

Share a video

Send a friend a link to a YouTube video.

- 1 On the video details screen (see [Watch a YouTube video](#)), tap **Share**.

- 2 Tap **Email** or **Text Message**.
- 3 Address and send the message.

Music

Listen to music

You can listen to music through the speaker on the back of your phone, through the stereo headset included with your phone, or through headphones (sold separately). You can also use a stereo headset equipped with Bluetooth® wireless technology or speakers (both sold separately).


To get music onto your phone, you can do any of the following:

- Copy music files from your computer (see [Copy files between your phone and your computer](#)).
- Receive music files as email attachments (see [Open email attachments](#)).
- Receive music files as part of a multimedia message (see [Receive and view text and multimedia messages](#)).

You can also listen to streaming music from the web directly in the web browser (see [Web](#)).

KEY TERM DRM-free: Describes a file that is not protected by Digital Rights Management. DRM-free music files can be copied as many times as you like and can be played on your Pre phone.

- 1 [Open Music](#) .
- 2 Do one of the following:

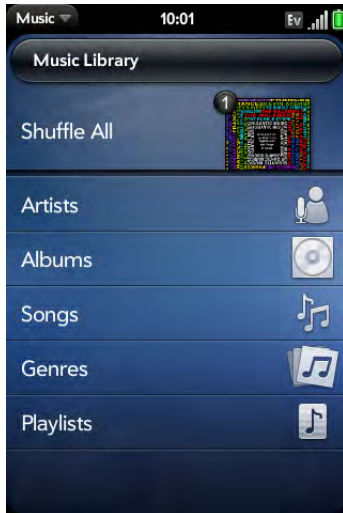

- Listen to all songs on your phone: Tap **Shuffle All**.
- Listen to a specific song: Tap **Artists**, **Albums**, **Songs**, **Genres**, or **Playlists** to search that category. Continue making selections until the song you want appears. Tap the song name.
- Listen to all songs from an artist: Tap **Artists** and tap the artist name. To listen to the artist's songs in the order they are displayed onscreen, tap the first song. The songs play one after the other in sequence. To listen to the songs in random order, tap **Shuffle All**.
- Listen to an album: Tap **Albums** and tap the album name. To listen to the album's songs in the order they are displayed onscreen, tap the first song. The songs play one after the other in sequence. To listen to songs in random order, tap **Shuffle All**.

- Listen to all songs in a genre: Tap **Genres** and tap the genre name. To listen to the songs in the order they are displayed onscreen, tap the first song. The songs play one after the other in sequence. To listen to the songs in random order, tap **Shuffle All**.
- Listen to playlists you have synced to your phone: Tap **Playlists**. Go to palm.com/sync-solutions for a list of third-party solutions (sold separately) that you can use to sync music and playlists from your computer to your phone.

DID YOU KNOW? Music continues to play in the background if you switch to another application, turn off the screen, or slide the **ringer** switch off.

Use music playback controls



Table 3. Music playback controls

Control	Function
	Play.
	Pause.
	Rewind.
	Fast forward.
	Shuffle current playlist.
	Repeat. Tap once to repeat the current song. Tap again to repeat the entire playlist.
	Move forward or backward. Tap the song name, then tap and hold the slider, and drag it right to move forward or left to move backward. To display the slider, tap the text below the album art in Album Art view.

DID YOU KNOW? If you stop playback of an audio file for which the Genre field is defined as **podcast**, **speech**, **spoken word**, **netcast**, or **audiobook**, when you play the item again, playback resumes at the point it was stopped.

TIP If you leave the Music app, the playback controls continue to appear at the bottom of the screen. You can use the controls even if the screen is locked.

Switch the Now Playing display

You can switch the display to show the songs you are listening to by name or by album cover art.

- While you are listening to a song, tap the header at the top of the application to switch between Playlist view and Album Art view.

Search for related songs or content

When you are listening to a song, you can search the web for related items such as songs by the same artist or from the same album.

- 1 While listening to a song, open the [application menu](#).
- 2 Tap one of the web search options (such as YouTube), and then tap the info you want.

Change the order of items in the Now Playing list

- In Playlist view, tap and hold a song name. Drag the song to move it to a new location in the list.

Remove a song from the Now Playing list

- In Playlist view, throw the song name off the side of the screen. This does not delete the song file from your phone.

Delete a song

To delete a song file from your phone, you must put your phone in USB Drive mode and delete the song using your computer.

- 1 Connect your phone and your computer using the **USB cable**.
- 2 On your phone, tap **USB Drive**. If prompted, tap **OK**. On your computer, your phone appears as a removable drive.

NOTE On a Windows computer, if the Found New Hardware wizard opens, click **Cancel** to close the wizard.

- 3 Open **My Computer** (Windows XP), **Computer** (Windows Vista), or the **Finder** (Mac), and double-click the drive representing your phone.
- 4 Delete the song using your computer's controls.
- 5 End the connection safely. On a Windows computer, right-click the drive representing your phone and click **Eject**. On a Mac computer, drag the drive representing your phone to the **Trash**. Trash changes to **Eject**.
- 6 Disconnect the **USB cable** from the computer and from the phone when the USB Drive screen no longer appears on your phone.



Web and wireless connections

With your wireless service provider's network and your phone's web browser, you can take the web with you almost anywhere you go.

You can use your phone's Wi-Fi feature to connect to a public, work, or home network. The Bluetooth® wireless technology on your Palm® Pre™ phone helps you easily set up wireless connections to a number of devices.

In this chapter

124	Wi-Fi
127	Location Services
128	Web
133	Google Maps
133	Bluetooth® wireless technology
136	Use your phone as a modem

Wi-Fi

What is a Wi-Fi connection?

Many environments, such as corporate offices, coffee shops, airports, and libraries, offer access to a Wi-Fi network. A Wi-Fi network is a wireless local area network (WLAN). Your phone supports W-Fi connectivity based on the 802.11 standard (802.11b and 802.11g), with WPA, WPA2, WEP, and 802.1x authentication. A Wi-Fi access point, also called a hotspot, is a network device with an antenna that provides wireless connections to a larger network. When you're within range of an accessible Wi-Fi network, you can use your phone's Wi-Fi feature to connect to that network and access the web.

Why use a Wi-Fi connection?

A Wi-Fi connection is especially helpful in the following situations:

- You're outside a coverage area and you want to access the web.
- You're inside a coverage area, but outside your wireless service provider's EVDO coverage area. (A Wi-Fi connection may provide faster throughput than a 1x data connection.)
- You want to maintain a web connection while talking on the phone.

Are there different kinds of Wi-Fi networks?

There are two types of Wi-Fi networks:

- Open networks: These networks broadcast their name (SSID) and do not require you to enter a password or other settings. To learn how to connect to an open network for the first time, see [Connect to a new open network](#).


- Secure networks: These networks may broadcast their name, but at the very least, they require you to enter a password that you get from an administrator (who may be, for example, the librarian or the person behind the counter at the coffee shop). You may also have to get other network settings from the system administrator. To learn how to connect to a secure network for the first time, see [Connect to a new secure network](#).

To connect to either type of network after the first time, see [Connect to a previously used network](#).

Turn Wi-Fi on/off

Do one of the following:

- [Open Wi-Fi](#) , and tap **On** or **Off**.

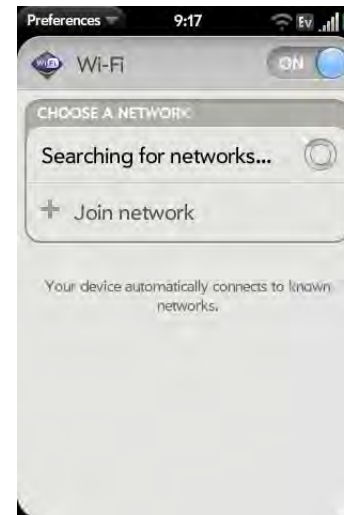

- From any screen: Open the [connection menu](#), tap **Wi-Fi**, and tap **Turn on Wi-Fi** or **Turn off Wi-Fi**.



If your phone finds the network you want, tap the network name to connect to it. Otherwise, see [Connect to a new open network](#) and [Connect to a new secure network](#).

TIP To conserve battery charge when Wi-Fi is turned on, you can turn off **Wake for network access**. When this setting is turned off, your Wi-Fi connection is severed when the phone's screen is off. When the screen is turned on again, your Wi-Fi connection is reactivated. Open the [connection menu](#), tap **Wi-Fi**, tap **Wi-Fi Preferences**, and then turn off **Wake for network access**.

Connect to a new open network

For an explanation of open networks, see [Are there different kinds of Wi-Fi networks?](#).

Some locations, such as airports or coffee shops, provide an open network but charge a fee to use it. After you connect your phone to the network, you need to open the web browser and register with the Wi-Fi service provider before you can check email or browse the web.

- 1 [Open Wi-Fi](#) .
- 2 Make sure Wi-Fi is on (see [Turn Wi-Fi on/off](#)).
- 3 Do one of the following:
 - If the network you want is displayed: Tap the network name.
 - If the network you want is not displayed: Tap **Join network** and enter the network name. Make sure Open is displayed in the Security field, then tap **Connect**.


TIP You can also open Wi-Fi by opening the [connection menu](#), tapping **Wi-Fi**, and tapping **Wi-Fi Preferences**.

Connect to a new secure network

For an explanation of secure networks, see [Are there different kinds of Wi-Fi networks?](#)

- 1 [Open Wi-Fi](#) .
- 2 Make sure Wi-Fi is on (see [Turn Wi-Fi on/off](#)).
- 3 Do one of the following:
 - If the network you want is displayed: Tap the network name, enter your **Username** and/or **Password**, and tap **Sign In**. You're done.

- If the network you want is not displayed: Tap **Join network** and enter the network name. Follow steps 4 to 7.

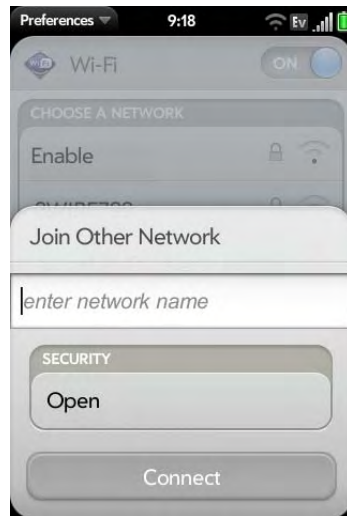

- 4 Tap the **Security** field, and then tap the network type: **Open**, **WPA-personal**, **WEP**, or **Enterprise**.
- 5 Tap **Connect**.
- 6 A series of different screens appears depending on the network type. Enter or select the following if you are prompted to do so: **Username** and/or **Password**, and **Certificate**.
- 7 Tap **Sign In**.

Connect to a previously used network

- If Wi-Fi is turned off: Turn on Wi-Fi (see [Turn Wi-Fi on/off](#)). Your phone automatically attempts to connect to a previously used network, starting with the most recently used network.
- If Wi-Fi is turned on but you are not connected to a network: Your phone automatically attempts to connect to a previously used network, starting with the most recently used network.

- If you are connected to one network and want to use a different one: [Open Wi-Fi](#) . Tap another network name.

Disconnect from a network

When you disconnect from a network, you can keep it on your list of known networks so that your phone can automatically connect to it again. If you remove the network from your list of known networks, however, you must reconnect to the network. Follow the steps in [Connect to a new open network](#) or [Connect to a new secure network](#) to connect to the network again.

- To disconnect from a network but keep it on your list of known networks: Turn off Wi-Fi (see [Turn Wi-Fi on/off](#)). This disconnects from the network.
- To disconnect from a network and remove it from your list of known networks: Open **Wi-Fi** . Tap the network name, and then tap **Forget Network**.

Customize connection settings

Do not change Wi-Fi settings unless you are having trouble connecting to a network.

BEFORE YOU BEGIN You must be connected to the network you want to customize (see [Connect to a new open network](#), [Connect to a new secure network](#), or [Connect to a previously used network](#)).

- 1 [Open Wi-Fi](#) .
- 2 Tap the network name.
- 3 In **Automatic IP settings**, tap **On** or **Off**.
 - When Automatic IP Settings are on: The IP address is automatically and dynamically configured.
 - When Automatic IP Settings are off: You can manually configure the IP address.

- 4 If you turned automatic IP settings off, enter any of the following:

IP Address

Subnet Address

Gateway

DNS Server: addresses (#1 and #2)

- 5 Tap **Done**.

Location Services

The Location Services application provides information about your location to applications that request it. For example, Google Maps may use your location information if you need driving directions.

NOTE Location Services is available only when Google Services are on.

- 1 **Open Location Services** .
- 2 The first time you open Location Services you may be asked to review and accept the terms of use, and decide whether to allow anonymous data collection. Tap **Next** and do the following:
 - Review the terms of use.
 - If you decide not to allow anonymous data collection, tap the checkmark to remove it.
 - Tap **Agree** or **Don't Agree**.
- 3 Decide whether to enable auto locate, or whether you want to be asked each time an application needs to know your location: Tap **Auto Locate** or **Ask Each Time**.

- 4 To change settings after you accept the terms of use, tap **On** or **Off** for any of the following:



Auto Locate: If you turn Auto Locate off and an application subsequently needs to know your location, a notification appears asking if the application can identify your location. Tap **Allow** to turn on Location Services for that session only.

Geotag Photos: If Geotag Photos is turned on, photos are tagged with the latitude and longitude coordinates of the location in which they were taken.

DID YOU KNOW? The geotag data is stored as an Exif tag in the photo file, not on the image itself. A common use of the geotag occurs in online photo services like Photobucket and desktop applications like Google Earth, which use the data to position the photo as a thumbnail on a map.

Background Data Collection: Turn on Background Data Collection to allow the collection of anonymous aggregate location data to improve the quality of the location services provided to applications that require them.

- 5 To choose how you want to be located, open [application menu](#), tap **Locate Me Using**, and choose one or both of the following:

GPS


Google Service

Web

Go to a website

The web browser on your phone is capable of displaying most web content. The browser features the latest web standard technologies such as HTML 4.01, CSS 2.1, Ajax, and JavaScript. It does not support plug-ins such as Flash or Java applets.

- 1 [Open Web](#) .
- 2 Enter the address of the page. You don't need to enter the prefix `http://www`.

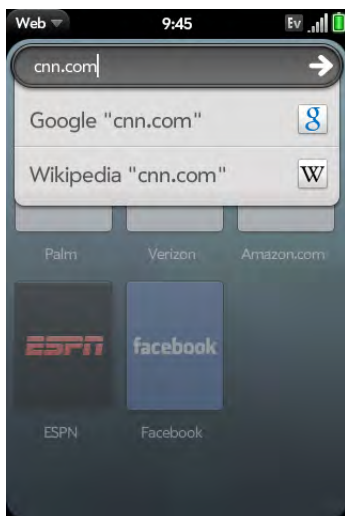

If the page appears in the list of viewed pages, tap it to go there again. If not, press **Enter** .


DID YOU KNOW? If you browse to a secure web page, the lock icon in the address line appears closed.

- 3 To cancel a page while it is loading, tap .

Go to a website using search

You can also search the web from the Launcher or Card view (see [Search to find info and make calls](#)).

- 1 [Open Web](#) .

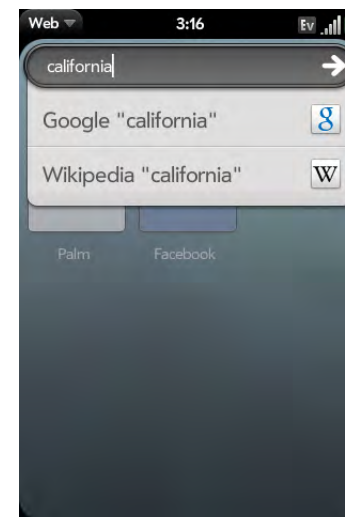

- 2 Enter the search term and tap a search option.

Open another browser

If you are looking at one web page and need to check something on a different one, simply open another browser.

- Open the [application menu](#) and tap **New card**. Enter the address or search term for the second web page. To move between the two pages, tap **Center**  to display Card view. Tap one web page and then the other to go between the two.

Navigate a web page

- Move back through previously viewed pages: Tap  or make the back gesture from right to left anywhere in the gesture area.
- Move forward through previously viewed pages: Tap  or make the forward gesture from left to right anywhere in the gesture area.
- Refresh the current page: Tap .
- Scroll a page: Swipe up or down on the screen.
- View a web page in landscape mode: Turn the phone on its side. When the display is in landscape mode, you can swipe up and down on the gesture area to scroll up and down a page.
- Zoom in or out on a page: Pinch out to enlarge items onscreen. Pinch in to decrease the size of items onscreen. Double-tap the screen to zoom in or out a specified amount.
- Zoom into a column of a web page: Double-tap the page to center a column and enlarge it. To zoom out to see the whole page again, keep double-tapping.
- Pan a page: Tap, hold, and drag the page.
- Enter information in a form: Tap the form field. Enter or select information and press **Enter** .
- Share a web address as a link in an email message: Open the [application menu](#), tap **Page**, and tap **Share**. Create the email message.
- Display the address bar: Begin typing a search term or web address, or scroll to the top of the page.
- Save a photo to Photos: Press and hold the **orange**  key and tap the photo. Tap **Copy to Photos**.

Add a web page to the Launcher

Add any web pages you visit frequently to the Launcher so you can access them in a few taps.

- 1 Open the page you want to add to the Launcher.
- 2 Open the [application menu](#), tap **Page**, and tap **Add To Launcher**.



- 3 Enter any of the following:

Icon: Tap the currently displayed page icon thumbnail. Then tap, hold, and drag the web page to use a different portion of the page as the Launcher icon. You can zoom into or out of the page while selecting the portion you want to use. The portion that appears in the white square is used as the icon. Tap **Done**.

Title: See [Text selection gestures](#) for useful gestures if you want to edit the page title.

URL: Enter or edit the URL for the page. For example, change the URL to the home page of a site instead of a drill-down page within the site.

- 4 Tap **Add To Launcher**.

The page now appears as an icon on the Launcher. Tap the icon to open the page. To delete the page from the launcher, see [Delete an application](#).

Create a bookmark

- 1 Open the page you want to bookmark.
- 2 Open the [application menu](#) and tap **Add Bookmark**.



- 3 Enter any of the following:

Icon: Tap the currently displayed bookmark icon. Then tap, hold, and drag the web page to use a different portion of the page as the bookmark icon. You can zoom into or out of the page while selecting the portion you want to use. The portion that appears in the white square is used as the icon. If you add the bookmark to the Launcher, the icon is used as the Launcher icon. Tap **Done**.

Title: See [Text selection gestures](#) for useful gestures if you want to edit the bookmark title.

URL: Enter or edit the URL for the bookmark. For example, change the URL to the home page of a site instead of a drill-down page within the site.

- 4 Tap **Add Bookmark**.


The first 12 bookmarks you create become thumbnails on the start page of the Web app.

NOTE Web bookmarks are part of the data backed up to your Palm profile. After a partial or full erase, a bookmark is restored with a generic thumbnail icon. After you revisit the page for which you created the bookmark, the original thumbnail icon is restored.

Open a bookmarked page

Do one of the following:

- From the start page when you open the browser, tap a thumbnail.
- While navigating a website, or to open a bookmark that does not appear as a thumbnail on the start page, open the [application menu](#) and tap **Bookmarks**. Then tap a bookmark.

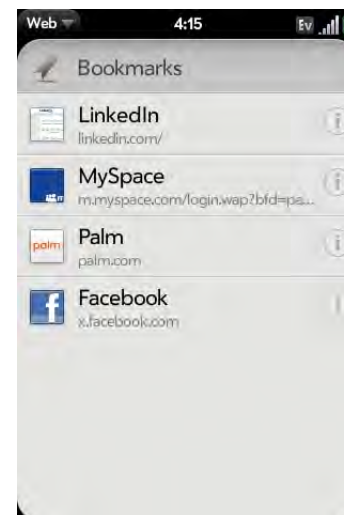

Edit, reorder, or delete a bookmark


- 1 Open **Web** .
- 2 Open the **application menu** and tap **Bookmarks**.



- 3 Do one of the following:
 - Edit: Tap  to the right of the bookmark name. Enter the new icon, title, or URL and tap **Save Bookmark**.
 - Reorder: Tap, hold, wait for the visual cue, and then drag the bookmark.
 - Delete: Throw the bookmark off the side of the screen and tap **Delete**.

Return to previously viewed web pages

- 1 Open the **application menu** and tap **History**.

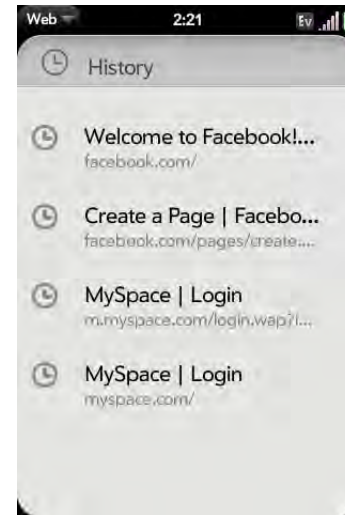

- 2 Scroll to the page name and tap the page.

You can also search for a recently viewed page by entering a term or address in the address bar in the standard Web view, that matches the page name or address.

Use links on a web page

- To follow a link to another page: Zoom in on the page (pinch out or double-tap the page), and tap the link.
- To open a link in a new card: Press and hold the **orange**  key and tap the link. Tap **Open In New Card**.
- To dial a phone number that appears as a link: Tap the link to display the dial pad with the number entered, and tap .
- To share a link with someone via email: Press and hold the **orange**  key and tap the link. Tap **Share Link**.

- To share a link to a photo with someone via email: Press and hold the **orange**  key and tap the photo. Tap **Share Image**.
- To copy the URL for a link: Press and hold the **orange**  key and tap the link. Tap **Copy URL**.

Download files from the web

- 1 [Open Web](#) .
- 2 Go to the web page with the file you want to download.
- 3 Tap the file name.
- 4 If an app on your phone supports the file type, the file name appears at the bottom of the screen. Tap to open the file.

All files are downloaded to the phone's USB storage. If an app on your phone supports the file type, you can also find the file in that app. For example, if it's a PDF file, find it in PDF View, and if it's an MP3 file, find it in Music.

Customize web browser settings

- 1 [Open Web](#) .

- 2 Open the [application menu](#) and tap **Preferences**.



- 3 Set any of the following:

Block Popups: Prevents websites from opening up new browser windows. Tap **Yes** to turn Block Popups off.

Accept Cookies: Allows cookies from any website you view, even if you are redirected to a site from another site. Tap **Yes** to turn Accept Cookies off.

JavaScript: Tap **On** to turn off JavaScript. Turning off JavaScript may prevent some websites from functioning properly.


Clear History: Tap to delete your browsing history.

Clear Cookies: Tap to delete cookies used by some websites to remember visiting history and user settings.

Clear Cache: Tap to delete any web page content that has been stored in the local cache. This ensures that you are viewing the most current content when you visit a web page.

Google Maps

- 1 [Open Google Maps](#) .
- 2 Tap **Menu** in the lower-right corner.

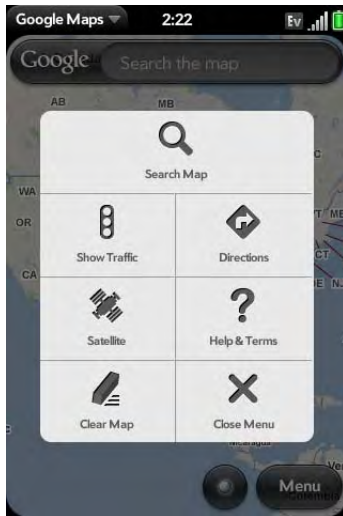

In Google Maps, use these icons to do the following:

Table 1. Google maps icons

Icon	Description
	Search Map: Search for a location.
	Show Traffic: View local traffic conditions.
	Get Directions: Get directions.
	Satellite: View a satellite photo of the map area.
	Map: In Satellite view, tap to return to Map view.
	Help & Terms: Get help.

Table 1. Google maps icons

Icon	Description
	Clear Map: Clear the current map.
	Close Menu: Close the Google Maps menu.

Bluetooth® wireless technology

What is Bluetooth® wireless technology?

With the Bluetooth® wireless technology on your phone, you can connect to a number of Bluetooth devices, including a hands-free device such as a headset or car kit (see [Set up and use a Bluetooth® hands-free device](#)). If your computer is enabled with Bluetooth wireless technology, you can also use your phone to connect your computer to the Internet (see [Use your phone as a modem](#)).

Before you can connect to another Bluetooth device, you need to pair with that device. You can either make the pairing request from your phone (see [Make a pairing request to another device](#)), or accept a pairing request from the other device (see [Accept a pairing request from another device](#)).

Turn the Bluetooth feature on/off

Do one of the following:

- [Open Bluetooth](#) , and tap **On** or **Off**.
- From any screen: Open the [connection menu](#), tap **Bluetooth**, and tap **Turn on Bluetooth** or **Turn off Bluetooth**.

Make a pairing request to another device

BEFORE YOU BEGIN The other device must be discoverable to appear on your phone's Devices list. Check the documentation that came with the other device for information on making it discoverable.

You can make a pairing request to a Bluetooth audio device such as a headset, car kit, or A2DP device.

1 Open Bluetooth .

TIP You can also open the Bluetooth app by opening the [connection menu](#), tapping **Bluetooth**, and tapping **Bluetooth Preferences**.

2 Make sure Bluetooth is on (see [Turn the Bluetooth feature on/off](#)).



- 3 Tap **Add device** and tap the device name on the list of available Bluetooth devices.
- 4 If a passkey is not required, pairing is complete when the Devices list appears. If a passkey is required, tap **Yes, allow**.

5 Do one of the following:

- An automatically generated passkey appears on the passkey screen: Check the other device screen to verify that the passkey is correct, and tap **Yes, connect** to connect.
- The screen displays a passkey generated by your phone: Enter the displayed passkey on the other device.
- The screen prompts you to enter a passkey: Check the documentation that came with the other device to see if there's a required passkey. If so, enter that passkey on your phone. If not, make up a passkey and enter it on both devices.

TIP You can also open the Bluetooth app by opening the [connection menu](#), tapping **Bluetooth**, and tapping **Bluetooth Preferences**.

Accept a pairing request from another device

NOTE Your phone is only discoverable when the Bluetooth app is open, the app windows is maximized, and Bluetooth is turned on. If you move away from the Bluetooth app, minimize the app to a card, or turn off the screen, your phone is no longer discoverable.

1 Open Bluetooth .

- 2 Make sure Bluetooth is on (see [Turn the Bluetooth feature on/off](#)).
- 3 Initiate a pairing from the other device.
- 4 When the connection request appears, tap **Yes, allow**.
- 5 If a passkey is not required, pairing is complete when the Devices list appears. If a passkey screen appears, do one of the following:
 - An automatically generated passkey appears on the passkey screen: Check the other device screen to verify that the passkey is correct, and tap **Yes, connect** to connect.


- The screen displays a passkey generated by your phone: Enter the displayed passkey on the other device.
- The screen prompts you to enter a passkey: Check the documentation that came with the other device to see if there's a required passkey. If so, enter that passkey on your phone. If not, make up a passkey and enter it on both devices.

Connect with a paired device

After you pair with a device, you can connect to that device without having to go through the pairing process again.

NOTE To connect with a paired computer, you must initiate the connection from the computer. See the computer documentation for instructions.

- 1 **Open Bluetooth** .

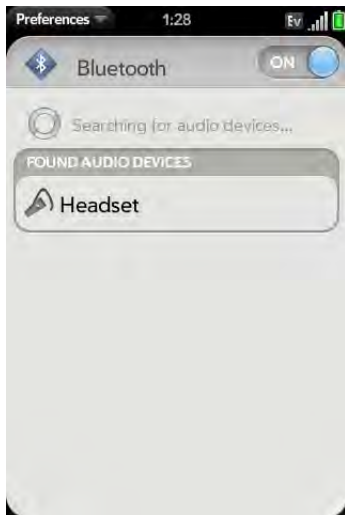

- 2 Make sure Bluetooth is on (see [Turn the Bluetooth feature on/off](#)) and tap the device name.

Disconnect from a device

Disconnecting from a device does not mean you delete the relationship you created between the device and your phone. See [Connect with a paired device](#) for instructions on how to reconnect with the device.

- 1 **Open Bluetooth** .
- 2 Tap the connected device name to disconnect from it. Or tap another device name to disconnect from the current device and connect to the new device.

Delete a device

Deleting a device means you end the relationship you created between your phone and the device. This means that you will need to pair with the device again if you want to connect (see [Make a pairing request to another device](#) or [Accept a pairing request from another device](#)). If all you want to do is temporarily disconnect from a device, see [Disconnect from a device](#).

- 1 **Open Bluetooth** .
- 2 Throw the name off the side of the screen and tap **Delete**.

Rename a device

- 1 **Open Bluetooth** .
- 2 Tap and hold the device name.
- 3 Enter a new name.

Use your phone as a modem

You can use your phone as a modem by setting up a personal area network (PAN). Using your phone as a modem lets you access the Internet from your computer anywhere you can connect to your wireless service provider's network. Check with your wireless service provider to see if your service plan supports this feature.

- 1 Pair your phone and your computer. You must initiate the pairing request from your computer (see [Accept a pairing request from another device](#)).
- 2 After the two devices are paired, make a Bluetooth connection from your computer to your phone. You must initiate the connection from your computer.
- 3 To check the connection, open your computer's web browser. If the browser opens successfully, the connection is working.



Documents

Your Palm® Pre™ phone enables you to take your office with you—including your Microsoft Office files. You can view and search Microsoft Word, Excel®, and PowerPoint® files on your phone.

You can also view PDF files on your phone.

In this chapter

138	Doc View
141	PDF View

Doc View


With Doc View, you can view Microsoft Word, Excel®, and PowerPoint® files on your phone.

Open a file

BEFORE YOU BEGIN Before you put files on your phone, make sure you have enough storage space on your phone to fit the file. [Open Device Info](#) and look at the **Available** field under **Phone**.

You can view a file that you copy from your computer (see [Copy files between your phone and your computer](#)) or receive as an email attachment (see [Open email attachments](#)). You can view files in DOC, DOCX, TXT, XLS, XLSX, PPT, and PPTX formats.

- 1 [Open Doc View](#) . The list of the Microsoft Office files that are on your phone appears onscreen.

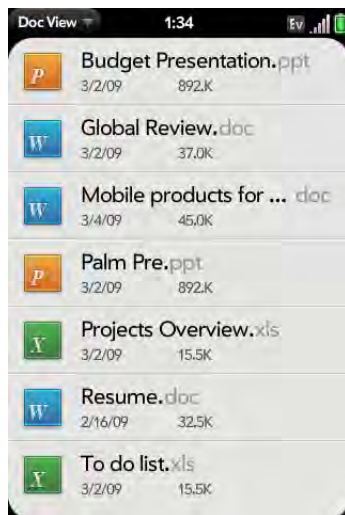

- 2 To search for a file, enter the name. Tap the file when it appears.

- 3 To open a second file: Open the [application menu](#) and tap **Open**. Tap the file.

Change the display size

For information on zooming in and out, see [Zoom gestures](#).

- Pinch out to enlarge items onscreen.
- Pinch in to decrease the size of items onscreen.
- Double-tap the screen to zoom in or out a specified amount.
- Turn on horizontal scroll (Word documents only): Open the [application menu](#) and tap **Wide View**. In Wide view, text does not wrap on the right side of the screen. You can scroll horizontally to see more text.

Find text in a file

- 1 With a file open, open the [application menu](#) and tap **Find**.



- 2 Type the text you want to find and press **Enter**  or tap . The first instance of the text appears highlighted.

3 Do one of the following:

- Find the next instance: Tap ▼.
- Find the preceding instance: Tap ▲.

4 To exit search, open the [application menu](#) and tap **Find**.

Save a file with a new name

- 1 With the file open, open the [application menu](#) and tap **Save As**.
- 2 Enter the new file name and tap **Save As**.


Share a file

- 1 With the file open, open the [application menu](#) and tap **Share**.
- 2 Create the email message and tap ✉.

View file properties

You can view properties such as the file size, date created or modified, and more.

1 With the file open, tap the file name.

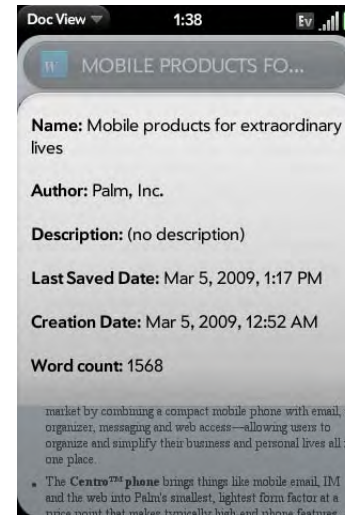


2 Tap outside the file properties to dismiss them.

Work with comments, endnotes, and footnotes in a Microsoft Word document

In an open Word document, comments, endnotes, and footnotes are indicated by highlighted text.

- 1 Tap the text or footnote indicator to open the comment, endnote, or footnote.

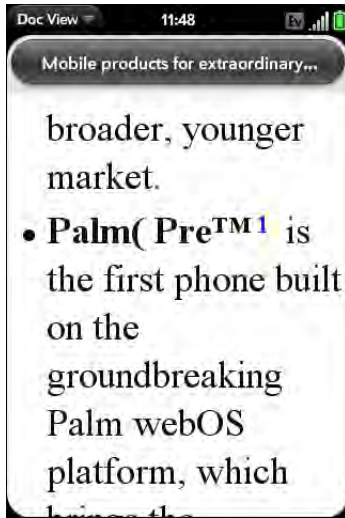

- 2 To close the comment, endnote, or footnote, tap outside it.

Select a row or column in an Excel® spreadsheet


- Tap the row header or column header.

Resize rows or columns in a spreadsheet

- 1 Open the [application menu](#) and tap **Resize**.
- 2 Tap, hold, and drag the row or column.

Show or hide rows or columns in a spreadsheet

- To hide a row or column: Tap the row or column header to select it, and tap **Hide selected**.

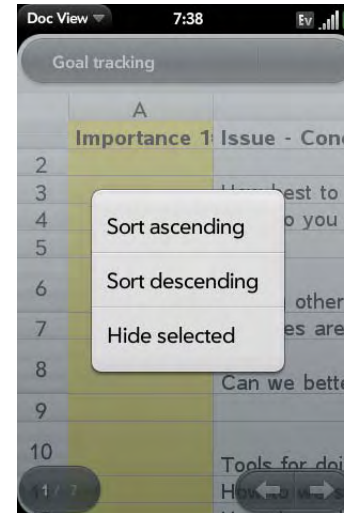

- To show a hidden row or column: Tap, hold, and drag one of the row or column headers to either side of the hidden row or column. Tap **Show Hidden**.
- To display all hidden rows or columns: Open the [application menu](#) and tap **Show All Hidden**.

Sort your data in a spreadsheet

- Tap the column header and tap **Sort ascending** or **Sort descending**.

Switch among sheets

Do one of the following:

- Tap  or  to move to the next or previous sheet.
- Open the [application menu](#) and tap **Worksheets**. Tap the sheet.
- Tap the current sheet number in the lower-left corner of the screen. Enter the page number you want to jump to and press **Enter**.

View comments in a spreadsheet

In an open Excel® spreadsheet, comments are indicated by a red triangle in the upper-right corner of the relevant cell.

- 1 Tap the red comment indicator to open the comment.
- 2 Tap the comment to close it.

Switch among views in a PowerPoint® presentation

In an open presentation, open the [application menu](#) and tap a view.

To return to normal presentation view from Outline or Show Notes view:

- From Outline view: Tap a slide.
- From Notes view: Open the [application menu](#), and tap **Show Notes**.

Move around in a presentation

- Go to the next or preceding slide: Tap  or .
- Jump to a different slide: Tap the current slide number in the lower-left corner of the screen. Enter the slide number you want and press **Enter** .

Upgrade to Documents To Go® from DataViz

With Documents To Go® from DataViz, you can create and edit Word, Excel, and PowerPoint files right on your phone, in addition to viewing them.

- 1 [Open Doc View](#) .
- 2 Open a document, open the [application menu](#), scroll down the menu if needed, and tap **Document Editing**.

For more information on Documents To Go, go to dataviz.com.

PDF View

With PDF View, you can view PDF (Adobe Acrobat) files on your phone.


Open a file

You can view a PDF file that you copy from your computer (see [Copy files between your phone and your computer](#)) or receive as an email attachment (see [Open email attachments](#)).

BEFORE YOU BEGIN Before you put files on your phone, make sure you have enough storage space on your phone to fit the file. [Open Device Info](#) and look at the **Available** field under **Phone**.

- 1 [Open PDF View](#) . The list of your files appears onscreen.

- 2 To search for a file, begin typing the name. Tap the file when it appears.

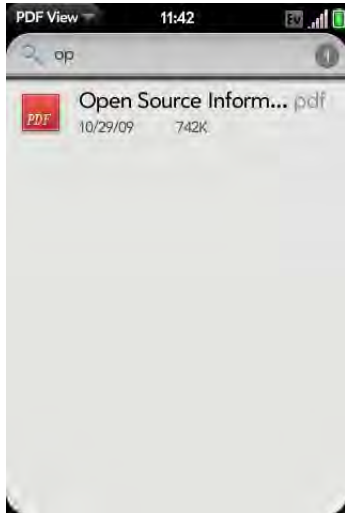

If the PDF file was created with a password, enter the password to open the file.

- 3 To open a second file: Open the [application menu](#) and tap **Open**. Tap the file.

TIP To move between open PDFs, tap the center of the gesture area to go to Card view. Tap the card of the PDF you want.

Move around in a file

- Go to the next or preceding page: Tap  or .
- Jump to a different page: Tap the current page number at the bottom of the screen. Enter the page number you want and press **Enter** .
- Move a part of the current page to the center of the display: Tap and hold on the part of the page you want, and drag it to the center.


Change the display size

For information on zooming in and out, see [Zoom gestures](#).

- Pinch out to enlarge items onscreen.
- Pinch in to decrease the size of items onscreen.
- Double-tap the screen to zoom in or out a specified amount.

Save a file with a new name

- 1 With the file open, open the [application menu](#) and tap **Save As**.

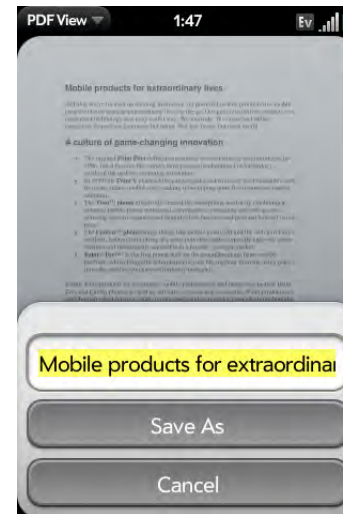

- 2 Enter the new file name and tap **Save As**.


Share a file

- 1 With the file open, open the [application menu](#) and tap **Share**.
- 2 Create the email message and tap .

View bookmarks

If a PDF file was created with bookmarks, you can see the bookmarks on your phone.

- 1 With the file open, open the [application menu](#) and tap **Bookmarks**.

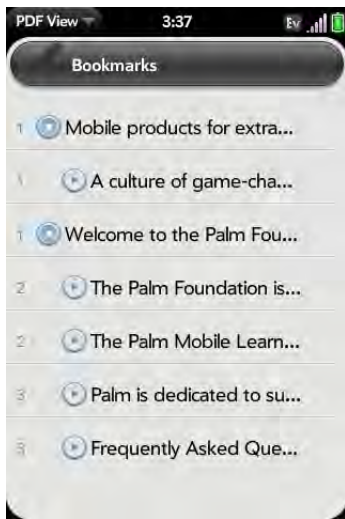

- 2 To search for a specific bookmark, type the bookmark name.
- 3 Tap a bookmark to jump to that section of the file.



Preferences

There are lots of ways to make your Palm® Pre™ phone work better for you. Personalize your phone to make it match your lifestyle.

You can easily customize many features of your phone like the wallpaper, screen brightness, ringtone for incoming calls, and more.

In this chapter

- 146 Backup
- 149 Date & Time
- 149 Device Info
- 153 Regional Settings
- 153 Screen & Lock
- 156 Sounds & Ringtones

Backup


Back up your information

A Palm profile connects your phone to Palm to get automatic updates, back up your data, and more. You create a Palm profile when you set up your phone.

Your phone backs up the contacts, calendar events, tasks, and memos that are in your Palm profile account, as well as system settings and applications you downloaded to your phone. All this information is automatically backed up to your Palm profile. So if you ever need to erase the info from your phone, you can restore all your backed-up info. You can turn off automatic backup, and you can also perform a manual backup.

Backup does not affect information stored in online accounts like Google. Information stored in online accounts is synchronized by the online provider at regular intervals. Information stored in Outlook is synchronized by your company's Exchange server.

1 [Open Backup](#) .

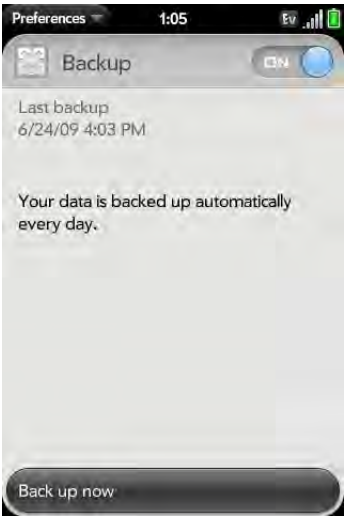

- 2 Do any of the following:
- Back up your information manually: Tap **Back up now**.
 - Turn off automatic backup and delete backed-up information: Tap **On** to switch backup from On to Off. Tap **Turn Off And Erase Data**. This deletes all your information on the server. It does not affect the information on your phone.

TIP Go to Device Info to delete the information on your phone (see [Erase data and reset your phone](#)).

- Turn on automatic backup if you had previously turned it off: Tap **Off** to switch Backup from Off to On.

What is backed up?

All data backed up to your Palm profile is encrypted, and only you, the profile owner, can access your data. Backed up data cannot be accessed by Palm. Data in your Palm profile account can only be added to or edited on your phone.

IMPORTANT In the event that your phone is lost or stolen, you can go to your Palm profile on [palm.com](#) and from there erase the data on your phone.

The following table summarizes the data that is backed up:

Table 1. Backup summary table

Application	Backed up	Not backed up
Backup	Backup setting is on by default.	
Bluetooth	Nothing is backed up.	

Table 1. Backup summary table

Application	Backed up	Not backed up
Calendar	Events in your Palm profile account. Username for accounts like Google that sync calendar events online. Preferences (see Customize Calendar).	Events in online accounts. Password for online accounts.
Contacts	Contacts in your Palm profile account.Username for accounts like Google that sync contacts online. Preferences (see Customize Contacts). Linking relationships between contacts.	Contacts in online accounts. Original contact photos added from a local image on the phone. Password for Facebook accounts. Speed dials.
Date & Time	Nothing is backed up.	
Doc View	Nothing is backed up. Keep a copy of these files on your computer (see Copy files between your phone and your computer).	
Email	Username of your email accounts. When you sign in to your Palm profile after your phone is erased, email accounts are restored and synchronized after you enter the password for each account.	Emails, their contents and attachments, their sort order, and account preferences.
Launcher	Nothing is backed up.	
Location Services	Nothing is backed up.	

Table 1. Backup summary table

Application	Backed up	Not backed up
Memos	All memos.	
Messaging	Username of accounts.	Message contents, passwords, attachments, and history.
PDF View	Nothing is backed up. Keep a copy of these files on your computer (see Copy files between your phone and your computer).	
Phone	Nothing is backed up.	
Photos	Username of online accounts like Facebook and Photobucket.	No photos are backed up. On your computer, keep a copy of your photos that are on your phone (see Copy files between your phone and your computer). Online passwords are not backed up.
Regional Settings	Nothing is backed up.	
Screen & Lock	Nothing is backed up.	
Sounds & Ringtones	Nothing is backed up.	
Tasks	Tasks in your Palm profile account. Username for accounts like Microsoft Exchange that synchronize tasks online.	Tasks in online accounts. Passwords are not backed up.
Third-party apps	Apps you downloaded are downloaded again from App Catalog.	

Table 1. Backup summary table

Application	Backed up	Not backed up
Videos	Nothing is backed up. Keep a copy of these files on your computer (see Copy files between your phone and your computer).	
Wallpaper	Nothing is backed up.	
Web	Bookmarks. Browser cookies.	
Wi-Fi	Nothing is backed up.	

Update your Palm profile settings

IMPORTANT To ensure that the data on your phone is consistent with that stored on your Palm profile, it is recommended that you perform a manual backup of your data after changing any of your Palm profile settings (see [Back up your information](#)).

- 1 [Open Backup](#) .
- 2 Open the [application menu](#) and tap **Palm Profile**.

- 3 Enter your Palm profile password and tap **Sign In**.



- 4 Edit any of the following:

First Name/Last Name: Change the first name and/or last name associated with your Palm profile.

Email: Change the email address associated with your Palm profile. A verification email is sent to the new address. Click the link in the email to verify the new address. After you verify, the email address is changed.

Security Question/Answer: Tap the current question and tap a new one. Then tap **Answer** and enter an answer.

Change Password: Tap **Change Password**. Enter your new password and confirm it. Tap **Done**.

Erase your Palm profile data

In the event that your phone is lost or stolen, you can go to your Palm profile on your computer and from there, erase the data on your phone.

- 1 On your computer, go to palm.com/palmprofile.
- 2 Log in to your profile.
- 3 Click **Device Info**.
- 4 Click **I Lost My Phone**.
- 5 Read the information carefully, and if you decide to erase your data, click **Erase Device**.

Date & Time

You can set your phone to adjust the date and time automatically to the local date and time wherever you are, or you can turn this feature off and enter this information manually.

- 1 [Open Date & Time](#) .



- 2 Set any of the following:

Time Format: Set whether to use a 12-hour or a 24-hour format.

Network time: Tap **On** or **Off**. If you turn this option off, select the date and time. If you switch from manual time to network time, there might be a delay before the network time updates on your phone.

Network time zone: Tap **On** or **Off**. If you turn this option off, tap the city that appears onscreen. Type the name of a country or city in the time zone you want, and then tap the location.

Device Info

View system information

- 1 [Open Device Info](#) . Basic system information is displayed, such as your phone number, battery usage, and available memory.

- 2 To view more detailed system information, tap **More Info**, and tap **Software** or **Hardware**.

Rename your phone

- 1 [Open Device Info](#) ⓘ.
- 2 Tap the **Name** field and enter the new name.

Restart your phone

If an application freezes, first try restarting your phone. No files or settings are changed when you restart.

Do one of the following:

- [Open Device Info](#) ⓘ, tap **Reset Options** and tap **Restart**.
- Press and hold **power** ⏻, tap **Power**, and then tap **Restart**.


NOTE If the screen does not respond to taps, press and hold **power** ⏻ and slide the **ringer switch** three times to restart your phone.

Erase data and reset your phone

If restarting your phone does not solve the problem, you may need to reset the phone. A reset deletes some or all information from your phone (depending on the type of reset you select). After a reset, you must follow the prompts to sign in to your Palm profile again before you can use your phone.

IMPORTANT You should perform a manual backup of your data before resetting your phone (see [Back up your information](#)).

- 1 [Open Device Info](#) ⓘ.
- 2 Tap **Reset Options**.

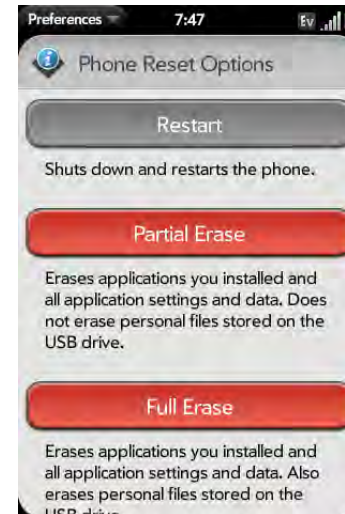

- 3 Do one of the following:
 - Erase any applications you installed from App Catalog, as well as any information associated with those applications: Tap **Erase Apps & Data** twice.
 - Erase all files stored in USB drive storage, such as pictures, videos, and music: Tap **Erase USB Drive** twice.
 - Erase all data from the phone, including any applications you installed from App Catalog, all files stored in USB drive storage, and information about your Palm profile: Tap **Full Erase**. To erase all data on your phone, tap **Full Erase** again. To erase all data in such a way that it is completely wiped from your phone and is unrecoverable, tap **Secure Full Erase**. Regardless of which full erase option you choose, all your data on the web—in your online accounts and in your Palm profile—is untouched.

Perform a secure full erase when you give your phone to somebody else and you don't want that person to be able to access your data. Also, before giving your phone to another person, you must manually

delete all the apps you installed, because they are automatically reinstalled on your phone after a full erase (see [Delete an application](#)).

After either type of full erase, you can sign in to your Palm profile either on a new webOS phone or the same phone you just erased. Signing in restores your Palm profile data and information from online accounts, but not your stored files such as pictures, videos, and music (you must copy those again to the phone; see [Copy files between your phone and your computer](#)). You can also sign in to your Palm profile on a new phone and restore your data to the new phone.

IMPORTANT If you have a Palm profile from a phone that you no longer use, you can sign in to your existing profile. All info associated with your profile is downloaded to your new phone.

TIP You can also perform a full erase by pressing and holding **Sym**  plus the **orange**  key plus **power**.

Run Quick Tests

If you are troubleshooting your device with a support agent, you can run Quick Tests to get diagnostic information. If you need more information after running Quick Tests, you can run one or more Interactive Tests (see [Run Interactive Tests](#)).

- 1 [Open Device Info](#) .
- 2 Open the [application menu](#) and tap **Quick Tests**.
- 3 Work with the support agent to view and report the test results.

Run Interactive Tests

If you are troubleshooting your device with a support agent and need more information after running Quick Tests (see [Run Quick Tests](#)), you can run one or more Interactive Tests.

- 1 [Open Device Info](#) .
- 2 Open the [application menu](#) and tap **Interactive Tests**.
- 3 Work with the support agent to run and view results from one or more tests.

Change default applications

If you have more than one application on your phone that can use to perform a particular function, you can change the default application to use for that function.

- 1 [Open Device Info](#) .
- 2 Open the [application menu](#) and tap **Default Applications**.
- 3 Tap a data type in **Data Types** and tap an application.

To override the default application setting when looking for the map location of an address: Press and hold the **orange**  key, tap the address, and tap an application.


Use Certificate Manager

Certificates are digital documents that are used to authenticate and exchange information on networks. Certificates can be issued for a user, a device, or a service.

Install a certificate from USB Drive storage

You can install a certificate that is located in the USB drive storage on your phone. For information on copying a certificate into USB drive storage, see [Copy files between your phone and your computer](#).

- 1 [Open Device Info](#) ⓘ.
- 2 Open the [application menu](#) and tap **Certificate Manager**.

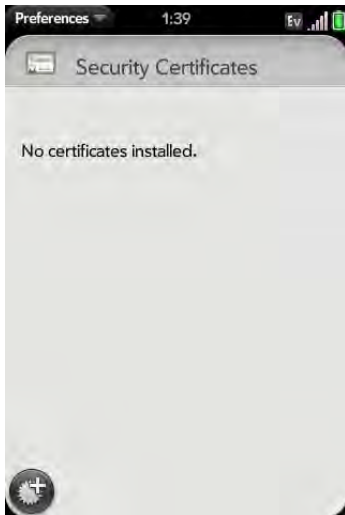

- 3 Tap ⓘ and tap the certificate name.

Install a certificate from an email attachment

- Open the email attachment (see [Open email attachments](#)), and then tap **Trust Certificate**.

View certificate details

You can view user-installed certificates only.

- 1 [Open Device Info](#) ⓘ.
- 2 Tap **More Info**.
- 3 Open the [application menu](#) and tap **Certificate Manager**.
- 4 Tap the certificate name.

NOTE Only user-installed certificates can be viewed.

Delete a certificate

Only user-installed certificates can be deleted.

- 1 [Open Device Info](#) ⓘ.
- 2 Tap **More Info**.
- 3 Open the [application menu](#) and tap **Certificate Manager**.
- 4 Tap the certificate and tap **Delete Certificate**.

NOTE Only user-installed certificates can be deleted.

Enable media sync

If you use iTunes version 9.0.1 or earlier, you can synchronize non-DRM music, photos, and videos from your computer to your phone by enabling Media Sync mode on your phone. You can also disable media sync if you update to a newer version of iTunes or use a different method to copy media files to your phone, such as USB Drive mode or a third-party solution (see [Copy files between your phone and your computer](#)).

NOTE If you've already transferred media files using Media Sync mode—or if the Media Sync button appears when you connect your phone to a computer with the USB cable—then media sync is already enabled on your phone.

- 1 [Open Device Info](#) .
- 2 Open the [application menu](#) and tap **Enable Media Sync**.
- 3 To use Media Sync mode to copy files, connect your phone to your computer with the USB cable and tap **Media Sync**.

TIP To disable media sync: [Open Device Info](#), open the [application menu](#), tap **Disable Media Sync**, and tap **Disable and Delete**. This deletes any media files on your phone that you copied from iTunes.

Regional Settings

Language

You can set your phone display to any language available for the device.

- 1 [Open Regional Settings](#) .
- 2 Tap the language in the **Language** field, and then tap a language.
- 3 If a region list is displayed, tap the region.
- 4 Confirm you want to use the new language, or revert to the original language.

Your phone restarts after you select a new language. You do not lose any data or applications from the restart.

Formats

You can set your phone to format numbers, currency, date, and time to reflect your country's style.

- 1 [Open Regional Settings](#) .
- 2 In **Formats**, tap the country name.
- 3 Do any of the following:
 - Begin typing the name of another country, and when it appears, tap it.
 - Scroll down to find a country, and then tap it.
- 4 Confirm you want to change the format, or tap **Cancel**.

Your phone restarts after you select a new country format. You do not lose any data or applications from the restart.

Screen & Lock

Change screen brightness

- 1 [Open Screen & Lock](#) .
- 2 Under **Screen**, tap, hold, and drag the **Brightness** slider to the preferred level.

Set the interval for turning the screen off automatically

By default, your screen turns off after one minute of inactivity to save battery power. You can change this interval.

- 1 [Open Screen & Lock](#) .

- 2 In **Turn off after**, tap the interval shown, then tap the number of seconds or minutes.

Set options for unlocking the screen

- 1 **Open Screen & Lock** .
- 2 To turn Secure Unlock on: Tap **Off** in **Secure Unlock**, tap **Simple PIN** or **Password** and do one of the following:

Simple PIN: Enter a PIN of any length. This is a PIN that you make up. Enter the PIN again to confirm, and then tap **Done**.

Password: Enter a password containing any combination of letters and numbers. Enter the password again to confirm, and then tap **Done**.

IMPORTANT Be sure to write down your PIN or password and keep it somewhere safe. If you forget your PIN or password, you need to remotely reset your phone and may lose data.

- 3 (Optional) Under **Notifications > Show When Locked > On** or **Off** to set whether notifications are displayed when the screen is locked.
- 4 (Optional) Under **Notifications > Blink Notifications > On** or **Off** to set whether the gesture area light pulses if a notification arrives when the screen is off.
- 5 To turn Secure Lock off: In **Secure Unlock**, tap **Off**, enter the PIN or password, and then tap **Done**.

TIP To change your PIN or password, in **Secure Unlock**, tap **Change PIN** or **Change Password**. Enter the old PIN/password and the new PIN/password, and then tap **Done**.

Get notifications when the screen is off

When notifications are set to blink, when the screen is off, the light in the gesture area pulses when a notification arrives and continues to pulse until you tap the notification or turn on the screen. Blink Notifications is on by default.

- 1 **Open Screen & Lock** .
- 2 Under **Notifications**, in **Blink Notifications**, tap **On** or **Off**.

Change your wallpaper

Your wallpaper is the screen background in Card view. You can customize the wallpaper to show a favorite picture.

- 1 **Open Screen & Lock** .
- 2 Tap **Change Wallpaper**.
- 3 Do one of the following:
 - Use an existing picture as the background: Tap the album containing the picture, and tap the picture.
 - Use a new picture as the background: Tap **New Photo** and take the picture.
- 4 (Optional: applies to the New Photo option only) Do either or both of the following:
 - To zoom out or in on a part of the picture: Pinch in or out on the picture.
 - To capture the portion of the picture you want to use as wallpaper: Tap and hold the picture, and then drag the portion you want to the center of the onscreen box. This portion becomes the wallpaper.
- 5 Tap **Set Wallpaper**.

Turn advanced gestures on/off

Turning on advanced gestures gives you two additional gestures, previous and next, and also changes the way you make the back gesture and the forward gesture in Web.

- Previous and next gestures: The previous and next gestures let you move among your open applications without first going to Card view. The previous gesture is a full swipe from left to right across the entire length of the gesture area. The next gesture is a full swipe from right to left across the entire length of the gesture area. Use these gestures when you have more than one app open and an app is displayed full-screen. By making the previous and next gestures you go from full-screen view to full-screen view of each app. The order of applications is determined by the order that you opened them or arranged them in Card view.
- Change to the back gesture and to the forward gesture in Web: The back gesture still goes from right to left in the gesture area, but you must make a shorter swipe. The forward gesture in Web also requires a shorter swipe.

1 Open Screen & Lock .



2 In **Switch Applications**, tap **On** or **Off**.

Set options for unlocking the screen

The screen locks five seconds after it turns off automatically, or immediately if you turn the screen off manually. Use Secure Unlock if you want to require a PIN or a password to unlock the screen.

TIP If your company issued your phone to you, check with your system administrator whether the company has its own settings for locking and unlocking the screen of your phone.

1 Open **Screen & Lock** .

- 2 To turn Secure Unlock on: Tap **Off** in **Secure Unlock**, tap **Simple PIN** or **Password** and do one of the following:

Simple PIN: Enter a PIN of any length. This is a PIN that you make up. Enter the PIN again to confirm, and then tap **Done**.

Password: Enter a password containing any combination of letters and numbers. Enter the password again to confirm, and then tap **Done**.

IMPORTANT Be sure to write down your PIN or password and keep it somewhere safe. If you forget your PIN or password, you need to remotely reset your phone and may lose data.

- 3 (Optional) Under **Notifications**, tap **On** or **Off** to set whether notifications are displayed when the screen is locked.
- 4 To turn Secure Unlock off: In **Secure Unlock**, tap **On**. Enter the PIN or password, and then tap **Done**.

TIP To change your PIN or password, in **Secure Unlock**, tap **Change PIN** or **Change Password**. Enter the old PIN/password and the new PIN/password, and then tap **Done**.

Sounds & Ringtones

Manage system sounds and notifications

You can turn system sounds, such as transition sounds, and notification alerts, on or off. You can also set the volume for system sounds.

TIP Sliding the ringer switch off turns off system sounds. The ringer switch does not affect the Clock alarm or media sounds, such as Music and Video.

1 Open Sounds & Ringtones .



2 In **Ringer Switch Off**, tap **Vibrate** or **Mute** to set whether your phone vibrates when you slide the ringer switch off.

3 Under **Ringer Switch On**, set any of the following:

Rings & Alerts: Tap **Sound & Vibrate** or **Sound**. To change the ringtone for incoming calls, see [Select the ringtone for incoming calls](#).

Tap, hold, and drag the **Ringtone Volume** slider to set the ringtone volume.

TIP Adjusting the Ringtone Volume slider is the same as using the **volume** button on the side of the phone.

System Sounds: Set whether to turn on systemwide sounds for general actions such as transitions. Tap, hold, and drag the **Volume** slider to set the system sounds volume.

TIP By default, when the ringer switch is off, you can still hear the Clock alarm. If you want to change this setting, go to **Clock** and tap **Preferences**. Under **Ringer Switch Off**, change **Play alarm anyway** to Off or On.

Select the ringtone for incoming calls

The ringtone you select here applies globally to all incoming calls. You can also set a unique ringtone for a contact (see [Add a ringtone to a contact](#)).

- 1 Open **Sounds & Ringtones** .
- 2 Tap the displayed ringtone to open the full list of tones.
- 3 Tap the name of the ringtone to select it.
- 4 Tap  to listen to the ringtone.
- 5 To set the ringtone volume, tap, hold, and drag the **Ringtone Volume** slider.

Select a song as a ringtone

You can add the first few seconds of a song as the ringtone for your phone.

The ringtone you select here applies globally to all incoming calls. You can also set a unique ringtone for a contact (see [Add a ringtone to a contact](#)).

- 1 [Open Sounds & Ringtones](#) .
- 2 Tap the displayed ringtone.
- 3 Tap .
- 4 Tap the song title to add it as your ringtone. Tap  to the right of a song title to preview it.
- 5 Make the back gesture to return to your list of ringtones.
- 6 Tap the name of the song to add it as your ringtone.
- 7 To set ringtone volume, tap, hold, and drag the **Ringtone Volume** slider.

Download a ringtone

You can copy or download music, a sound, or a ringtone to use as a ringtone on your phone. Supported file types are MP3, AAC, AAC+, AMR, QCELP, and WAV.

- 1 Identify a file on your computer to use as a ringtone on your phone.
- 2 Connect your phone to your computer using the **USB cable**.
- 3 On your phone, tap **USB Drive**. On your computer, your phone appears as a removable drive.
- 4 Open **My Computer** (Windows XP), **Computer** (Windows Vista/Windows 7), or the **Finder** (Mac), double-click the drive representing your phone, and drag and drop files to the **ringtones** folder on your phone.

- 5 On a Windows computer, to end the connection safely, right-click the drive representing your phone and click **Eject**. On a Mac computer, from your desktop, drag the drive representing your phone to the **Trash**. Trash changes to **Eject**.
- 6 Disconnect the **USB cable** from the computer when the USB Drive screen is no longer displayed on your phone.

The new file appears in the list of ringtones on your phone. You can select the new ringtone to apply to all incoming calls (see [Select the ringtone for incoming calls](#)) or set it as a unique ringtone for a contact (see [Add a ringtone to a contact](#)).



Troubleshooting

Although we can't anticipate all the questions you might have, this chapter provides answers to some of the most commonly asked questions. For additional information and answers to other common questions, visit palm.com/support.

In this chapter

- 160 For users of other Palm® devices
- 164 Screen and performance
- 165 Phone
- 166 Hands-free devices
- 167 Synchronization
- 169 Sending and receiving data in Email, Messaging, and Web
- 170 Email
- 171 Messaging
- 171 Wi-Fi
- 171 Web
- 172 Calendar and Contacts
- 173 Camera
- 173 Transferring information from your computer
- 174 Backing up and restoring data
- 174 Updates
- 175 Third-party applications
- 176 Making room on your phone

For users of other Palm® devices

I want to transfer my data from my computer

If you previously synchronized data from a Palm® smartphone—such as contacts or calendar events—with a desktop organizer such as Palm® Desktop by ACCESS or Microsoft Outlook®, you can do a one-way transfer of that data from the desktop organizer to your Palm® Pre™ phone.

IMPORTANT If your desktop Outlook synchronizes with an Exchange server using Microsoft Exchange, you cannot do a one-way transfer of that Outlook data to your phone. Instead, set up your Exchange account to synchronize with your phone (see [How do I add names and other info into Contacts?](#), [How do I get events into Calendar?](#), or [How do I send and receive email on my phone?](#)).

Windows: You can transfer contacts, calendar events, tasks, and memos/notes from Palm Desktop software by ACCESS version 6.2 and Microsoft Outlook 2003 or later. If you don't have Palm Desktop version 6.2, download it from palm.com/support.

Mac: You can transfer contacts, calendar events, and tasks from Address Book, iCal, and Palm Desktop software by ACCESS version 6.2. If you don't have Palm Desktop version 6.2, download it from palm.com/support.

NOTE You can transfer data from Palm Desktop and Outlook on your Windows computer, and from Address Book and iCal on your Mac computer, even if you never synchronized with a Palm smartphone.

For instructions on doing a one-time, one-way data transfer, see [Data transfer](#). For more detailed information, go to palm.com/migrate-pre.

Battery

WARNING Use only batteries and chargers that are approved by Palm with your phone. Failure to use a battery or charger approved by Palm may increase the risk that your phone will overheat, catch fire, or explode, resulting in serious bodily injury, death, or property damage. Use of unapproved third-party power supply accessories may damage the device and void the warranty for the product.

I can't charge the battery

- If you're using a new battery or a new charger, make sure the battery and charger are approved by Palm for use with your phone. Failure to use an approved battery or charger may prevent your phone from turning on or charging.
- If you're using an existing, approved battery, the battery may have reached the end of its useful life and needs to be replaced. See [I need to replace the battery](#) for details.

I need to replace the battery

Your Pre phone comes with a replaceable battery. Be sure to use a battery that is approved by Palm and that is compatible with your phone. Failure to use the proper battery may result in personal injury or product damage, and it voids your phone warranty.

NOTE Please dispose of the old battery properly.

- 1 If the **USB cable** is attached to the phone, disconnect the USB cable.
- 2 If a wired headset is attached to the phone, disconnect the headset.
- 3 Turn the phone completely off (see [Turn everything \(the screen and wireless services\) on/off](#)).

- 4 Press and release the **back cover release**.



- 5 Slide your thumbnail or a credit card between the back cover and the phone, starting at the bottom and moving halfway up one side until you hear the clasp (x) release.



- 6 Repeat step 2 to release the clasp (y) on the other side of the phone.

- 7 Lift off the back cover.



- 8 Remove the **battery** by pulling the tab that appears at the top of the battery.



- 9 Insert the new **battery**.

- 10 Position the back cover over the phone and gently press the top two clasps (a), located at the top corners. Then press the two clasps (b) halfway down either side of the phone.



- 11 Slide out the keyboard (see [Slide out the keyboard](#)), and then press the two clasps (c) at the bottom corners.



- 12 Press and hold the **power**  button on the upper-right corner of your phone until you see a logo on the screen (approximately five seconds). Please be patient while your phone starts up.

TIP If your phone does not turn on after you insert the battery and press and hold **power**, you need to connect your phone to the AC charger to charge it (see [Charge the battery](#)).

I can't get my screen to turn on after removing and replacing the battery

Removing the battery turns off your phone completely, so you can't just slide out the keyboard or press **power**  to turn on the screen. Instead, press and hold **power**  until you see a logo on the screen (approximately five seconds). Please be patient while your phone starts up.

TIP If your phone does not turn on after you press and hold **power**, you need to connect your phone to the AC charger to charge it (see [Charge the battery](#)).

I can't get the back cover off

- 1 If the **USB cable** is attached to the phone, disconnect the USB cable.
- 2 If a wired headset is attached to the phone, disconnect the headset.
- 3 Turn the phone completely off (see [Turn everything \(the screen and wireless services\) on/off](#)).

- 4 Press and release the **back cover release**.



- 5 Slide your thumbnail or a credit card between the back cover and the phone, starting at the bottom and moving halfway up one side until you hear the clasp (x) release.



- 6 Repeat step 2 to release the clasp (y) on the other side of the phone.

- 7 Lift off the back cover.



I can't get the back cover on

- 1 Position the back cover over the phone and gently press the top two clasps (a), located at the top corners. Then press the two clasps (b) halfway down either side of the phone.



- 2 Slide out the keyboard (see [Slide out the keyboard](#)), and then press the two clasps (c) at the bottom corners.



- 3 If you removed the battery when the back cover was off, you need to turn the phone back on: Press and hold **power**  on the upper-right corner of your phone until you see the Palm logo on the screen.

Screen and performance

The screen appears blank

To save power, the screen dims automatically after a period of inactivity, and then turns off.

If you have inserted or replaced the battery, you need to press and hold **power**  until you see the Palm logo on the screen. Otherwise, follow these steps in sequence if you see a blank screen:

- 1 To brighten the screen if it has dimmed, tap the screen.

- 2 To turn on the screen, do one of the following:
 - Press **power** . Drag  up to unlock the screen.
 - Slide out the keyboard.
 - If the keyboard is out, press any key.
- 3 Look closely at the screen. If the display appears but is faint, try adjusting the screen brightness (see [Change screen brightness](#)).
- 4 If the problem persists, connect your phone to the AC charger (see [Charge the battery](#)). If you see a faint display, try to restart your phone (see [Restart your phone](#)).
- 5 If you don't see a display or the screen doesn't respond to taps, press and hold **power**  and slide the **ringer** switch three times to restart your phone. Please be patient while your phone starts up.

An application does not respond to taps

Tap the center of the gesture area. If the application screen minimizes to a card, do the following: [Open Device Info](#)  and restart your phone (see [Restart your phone](#)).

If the screen does not respond to taps at all, press and hold **power**  and slide the **ringer** switch three times to restart your phone. Please be patient while your phone starts up.

Applications are running slower than usual

TIP Be sure that any third-party applications you install are compatible with the Palm® webOS™ platform. Applications written for earlier Palm smartphones using the Palm OS operating system or Windows Mobile are not compatible with your Pre phone. If you can try a free version of the software before purchasing it, you can test it first to make sure it works properly. In App Catalog, you can purchase the Classic application from MotionApps to run Palm OS applications on your Pre phone.

- 1 Press **Center**  to display Card view.
- 2 Scroll through the cards and note how many applications are open.
- 3 Close any application you are not using by throwing its card off the top of the screen.

If the problem persists, try restarting your phone (see [Restart your phone](#)).

My gestures in the gesture area aren't working

- Some gestures begin in the gesture area and end in the touchscreen, and vice versa. Crossing the border between the two areas with your finger is crucial to making the gesture successfully. Likewise, the drag gesture for opening a menu begins at the top of the phone, above the screen, and crosses down onto the screen.



* Gesture area

- If you cannot make the back gesture, check to see if you have the next/previous app gestures turned on (see [Turn advanced gestures on/off](#)). If so, you need to make a short swipe left for the back gesture, and a full swipe right or left for the next or previous open app.
- Likewise, you can't use the next/previous app gestures unless you turn them on (see [Turn advanced gestures on/off](#)).
- You can see animations of many gestures: [Open Help](#)  and tap **Clips**. Or go to palm.com/support to watch the animations on your desktop computer. Also, see [Use gestures: tap, swipe, drag, flick, pinch](#).

There are small icons in the lower-right corner of the screen

Those icons represent notifications that you have not opened or dismissed. For most types of notifications, if you do not tap a notification after a few seconds, it becomes an icon in the lower-right portion of the screen. If you see one or more icons, tap anywhere on the bottom of the screen to display your notifications.

Phone

Signal strength is weak

Become familiar with low coverage areas where you live, commute, work, and play. Then you know when to expect signal-strength issues.

- If you're standing, move about three meters in any direction.
- In a building, move near a window. Open any metal blinds.
- In a building, move outdoors or to a more open area.
- Outdoors, move away from large buildings, trees, or electrical wires.
- In a vehicle, move your phone so that it's level with a window.

My phone won't connect to the mobile network

- Try the suggestions in [Signal strength is weak](#) for weak signals.
- Turn off your phone and turn it on again (see [Turn the phone on/off](#)).
- Restart your phone (see [Restart your phone](#)).

I see five bars in the signal-strength icon, but I still can't connect to the network

The **signal-strength**  icon always displays five bars. Your signal strength is indicated by the number of bars that are shaded white. If most or all of the bars are gray, you are in an area of weak or no coverage.

The person on the other end of the line hears an echo

- Try decreasing the volume on your phone—whether you are using the speakerphone or the earpiece—to avoid coupling or feedback on the other person's end.
- Position the earpiece closer to your ear to prevent sound leaking back into the microphone.
- If you're using the speakerphone feature with your phone lying on a flat surface, try turning the phone face down (screen facing the surface).

I hear my own voice echo

Ask the person on the other end of the call to turn down the volume on his or her phone or to hold the phone closer to his or her ear.

My voice is too quiet on the other end

- Be sure to position the microphone, which is on the lower-left side of the gesture area, close to your mouth. Make sure you are not covering the microphone with your cheek or chin.

- Check the **signal-strength**  icon. If the signal is weak, try to find an area with better coverage (see [Signal strength is weak](#)).

My phone seems to turn off by itself

Your phone has a power-saving feature that's set to turn off the screen if it has been idle for one minute. You can change the auto-shut off interval (see [Set the interval for turning the screen off automatically](#)).

If you restart your phone, wireless services, such as Wi-Fi and Bluetooth, are automatically turned on if they were on before the restart. However, if the phone can't determine if a wireless service was on before the restart, that service does not automatically turn on (see [Turn the phone on/off](#)).

If the problem persists and you're using third-party applications, see [Third-party applications](#) for additional suggestions.

Hands-free devices

I can't make or receive calls using a Bluetooth® hands-free device

Verify all of the following:

- The Bluetooth feature is turned on (see [Turn the Bluetooth feature on/off](#)).
- Your Bluetooth hands-free device is charged and turned on.
- You have already formed a partnership between your phone and your hands-free device, and the hands-free device appears in the **Devices** list (see [Connect with a paired device](#)).
- Your phone is within range of the hands-free device. Bluetooth range is up to 10 meters in optimum environmental conditions, which include the absence of obstacles, radio interference from nearby electronic equipment, and other factors.

- You are away from other devices using the 2.4GHz radio frequency, such as cordless phones and microwaves. If this is impossible, move the phone closer to the hands-free device.
- The hands-free device is compatible with your phone. Go to palm.com/support to see a list of supported devices.

I lost the connection between my phone and my Bluetooth headset

If your headset isn't working, delete the existing partnership (see [Delete a device](#)) and create a new one (see [Set up and use a Bluetooth® hands-free device](#)).

I hear static or interference when using my hands-free device

- Try moving your phone closer to the hands-free device. Audio quality degrades as the distance between your phone and the hands-free device increases. The effective range for a hands-free device varies among manufacturers.
- Confirm that no obstructions, including your body, are between the phone and your hands-free device.
- Move to a quieter location to reduce environmental noise.

Some features of my hands-free device don't work with my phone

- Check the compatibility list at palm.com/support to ensure that your device is compatible with your Pre phone.
- Not all hands-free features work with every hands-free device. Check the documentation that came with your hands-free device or the manufacturer's website for feature-compatibility information specific to your device.

Synchronization

What is synchronization?

Anytime you are in Email, Calendar, or Contacts, you can set up a relationship to wirelessly sync data with selected service providers—for example, Google's Gmail or Microsoft Exchange® (check to see if your company supports this). Sync means that if you enter, change, or delete information in one location, the change automatically shows up in the other location. So if you enter a Google contact in the Contacts application on your phone, the contact appears in your online Google contacts—no need to enter it twice.

You must already have an account with a service provider before you can set it up on your phone.

How do I set up synchronization with an online account?

The first time you open Email, Contacts, or Calendar, you are given the option to enter settings for one or more online accounts (see [Set up email](#), [Use Contacts for the first time](#), or [Use Calendar for the first time](#)). For any account, you need to enter the settings in only one of these applications to synchronize data for all three.

You can add additional accounts at any time using the preferences in any of these applications (see [Set email preferences](#), [Customize Contacts](#), or [Customize Calendar](#)).

You can also set up the Messaging application to work with an online instant messaging (IM) account (see [Set up an instant messaging \(IM\) account](#)), and the Photos application to work with an online pictures account such as Facebook or Photobucket (see [Set up an online pictures account on your phone](#)).

See [Online accounts available for webOS phones](#) for the current list of online accounts that synchronize your info and those that do a one-way transfer of info either from the web to your phone, or from your phone to the web.

I don't want to sync calendar or contact information with my online account—just email

If you do not want to sync an application with an online account, you can remove that account from within the application. For most online accounts, this stops synchronization of that application only. Exchange accounts, however, are an exception to this: If you delete an Exchange Calendar, Contacts, or Email account, Exchange data is removed from all apps (Calendar, Contacts, Tasks, and Email).

- 1 [Open](#) the application.
- 2 Open the [application menu](#) and tap **Preferences & Accounts**.
- 3 Tap the account name.
- 4 Tap **Remove Account**, and then tap **Remove [app name] Account**.

I want to sync with Outlook or Palm Desktop software on my computer

By default, your Pre phone does not support synchronization with Palm Desktop software or Outlook on your desktop computer. Your Pre phone, however, gives you options for synchronization without a cable. You can sync with online services that Palm has partnered with so that you can store and sync your info in online accounts. You can access your data even when you are not able to make a connection to the web because your data is stored on your phone.

If you have data from a Palm smartphone in Outlook or Palm Desktop software, you can do a one-way transfer of the data from the desktop application to your phone (see [Data transfer](#)). You can assign this data to sync with an online account. You can also assign it to the Palm profile

account. Data in this account is backed up to your Palm profile daily, so you can retrieve it if you need to reset your phone. But it is not a true sync because you cannot change your Palm profile data anywhere except on your phone.

If your desktop Outlook synchronizes with an Exchange server using Microsoft Exchange, you cannot do a one-way export of that Outlook data to your phone. However, you can synchronize the Outlook data wirelessly with your phone through your Exchange account.

TIP A number of third-party applications (sold separately) are available that let you synchronize data on your Pre phone with a desktop application. Visit palm.com/sync-solutions to learn more.

I have an Exchange account at work, but my data is not being downloaded to my phone

Check with your system administrator to obtain or verify the name of the mail server that offers you wireless access to the corporate mail system. If you cannot obtain the name of this server (some companies do not give it out, because they do not want wireless access to their servers), you cannot synchronize with your Exchange account.

If your company requires you to change your password for accessing your Exchange account, you must change the password on your phone (see [Change account login settings](#)).

I have entered the settings to sync with Exchange, but I can't synchronize with my company's Exchange server

Check with your system administrator to find out if a systemwide locking policy is in place.

A notification tells me that ActiveSync encountered a problem on the server

There is a temporary problem with the server, or the server may be temporarily overloaded. Try again later, and if the problem persists, contact your system administrator.

A notification tells me that there is not enough free memory to synchronize

- 1 Press **Center**  to display Card view.
- 2 Scroll through the cards and note how many applications are open.
- 3 Close any application you are not using by throwing its card off the top of the screen.

If the problem persists, see [Making room on your phone](#) for other suggestions.

A notification tells me that the server could not be reached

Make sure your phone is connected either to the your wireless service provider network or to a Wi-Fi network (see [Icons in the title bar](#)).

If you have a network connection and receive this notification, it means your phone had to wait too long to connect to the Exchange server. The connection may have been lost, the server may be temporarily overloaded, or the server may have encountered an internal error. Check your Exchange server name and proxy server settings (see [Set up email: Microsoft Exchange](#)), and try again later.

A notification tells me that ActiveSync encountered a problem with [item type] [item name]

There was an error while synchronizing a single item. This error can usually be corrected only by deleting the item that caused the error. If you sync again to see if the error persists, be aware that items causing this type of error are skipped and do not show up again.

Sending and receiving data in Email, Messaging, and Web

I can't tell if data services are available

The following icons appear in the title bar to indicate whether data services are available. If you don't see one of these icons, you cannot open a data connection:

KEY TERM 1xRTT (single-carrier [1x] radio transmission technology): A wireless technology that can provide fast data transfer and Internet access, with average speeds of 60-to-80Kbps and bursts of up to 144Kbps.

KEY TERM EvDO (Evolution Data Optimized): A wireless broadband technology that is designed for very high-speed data transfer, with average download speeds of 400-to-600Kbps, and capable of reaching speeds up to 3.2Mbps and upload speeds up to 1.8Mbps.

Table 1. Data connection icons

Icon	Description
	Your phone is connected to a 1x data network. Data is not currently being transmitted over the network. A 1x data connection is active.
	Your phone is connected to a 1x data network and data is being transmitted over the network. A 1x data connection is active.

Table 1. Data connection icons

Icon	Description
	Your phone is connected to an EvDO data network. Data is not currently being transmitted over the network. A 1x data connection is active.
	Your phone is connected to an EvDO data network and data is being transmitted over the network. A 1x data connection is active.
	Your phone is connected to a Wi-Fi network. You can open a data connection.

Email

I have problems using my email account

Occasionally you may experience problems using an email account after you set it up. If you followed the account setup procedure (see [Set up email](#)) and are experiencing problems using the account, verify that the account complies with your email provider's requirements:

- Verify both your password and your username for your email account.
- If you changed your password in an online email account, you must change the password on your phone (see [Change account login settings](#)).
- Some wireless service providers require you to be on their network to use your email account. If this is the case, be sure to use your provider's network as the connection type for the account.
- Some wireless service providers have other requirements specific to their service. Check with your wireless service provider to find out whether any provider-specific requirements exist.
- Make sure your ISP or email provider allows you to access email on a Pre phone. (Some providers do not offer this option at all; other providers require an upgrade for you to access email on a phone.)

- Email provider settings may change. If your email account was working but you are currently experiencing problems, check with your email provider to find out whether any of the account settings have changed.

I have problems sending and receiving email

- Make sure your phone is on and that your data connection to your mail server or email service provider has not been interrupted (see [Turn the phone on/off](#)).
- Short periods of time when email is unavailable are common, due to server problems or poor wireless coverage. If you have problems sending or receiving mail for an extended period of time, check with your ISP or email service provider to verify that the service is working properly, and check with your wireless service provider for outage information in your area.

I have problems sending email (IMAP and POP accounts)

If you are able to receive email messages but cannot send them, try the following:

- Turn on authentication (see [Set up email when automatic setup fails](#)). Many service providers require authenticated access, or ESMTP, to use their SMTP servers for outgoing mail.
- Enter the name of a different outgoing mail server for sending mail (see [Set up email when automatic setup fails](#)). Many ISPs, such as cable companies, require that you have an Internet connection to their network to send email through their servers. In this case, you can almost always receive email from these accounts, but if you want to send email, you must send it through another server. Check with your email service provider for the correct outgoing mail server name.

After I receive messages, older messages disappear from my Inbox

When email sync takes place, the last three days' worth of email messages are downloaded from your mail server to your Inbox. All messages older than three days are removed from your Inbox; they are not deleted on the server, however.

You can change the setting to download only one or two days' worth of messages. If you select one of these options, any messages older than one or two days are deleted from your Inbox. You can also change the setting to download all messages regardless of the date, in which case all messages continue to appear in your Inbox (see [Enter advanced account settings](#)).

Messaging

I can't send or receive text or multimedia messages

- Make sure that your phone is on (see [Turn the phone on/off](#)).
- If your phone is connected to your computer in USB Drive mode, disconnect your phone from your computer (see [Copy files between your phone and your computer](#)).
- For multimedia messages, do the following:
 - Contact your wireless service provider to verify that your plan includes messaging services, that these services have been correctly activated, and that they are available at your location. (Your wireless service provider should be able to tell you if messaging services have been experiencing transmission delays.)
 - Check to see if you have data services enabled. Open **Phone** , open the [application menu](#), and tap **Preferences**. Under **Network**, make sure **Data Usage** is set to **On**.
 - If you are in roaming coverage, check to see if you have data roaming enabled. Open **Phone** , open the [application menu](#), and tap **Preferences**. Under **Network**, tap **Data Roaming** and tap **Enabled**.

- If possible, contact the recipient of the message, and make sure the receiving device can handle the type of message you're sending.
- If a message arrives but does not display a notification, restart your phone (see [Restart your phone](#)).

I want to send a video in a multimedia message, but do not see it on the list of items I can attach

You can attach pictures in JPG format to outgoing multimedia messages. To send files of other types, attach them to an email message (see [Add attachments to a message](#)).

Wi-Fi

I am trying to connect my phone to my Wi-Fi network and need to find the phone's MAC address

Open **Device Info** , tap **More Info**, and tap **Hardware**. Under **Phone**, the number listed to the right of **Wi-Fi** is your phone's MAC address.

Web

My phone doesn't connect to the Internet

Your phone supports EvDO, 1xRTT, and Wi-Fi wireless data networks. To connect to the Internet, you must either subscribe to data services with your wireless service provider or be within range of a Wi-Fi network.

- Check to see if you have data services enabled. Open **Phone** , open the [application menu](#), and tap **Preferences**. Under **Network**, make sure **Data Usage** is set to **On**.

- If your phone is connected to your computer in USB Drive mode, disconnect your phone from your computer (see [Copy files between your phone and your computer](#)).
- If you are in roaming coverage, check to see if you have data roaming enabled. Open **Phone** , open the [application menu](#), and tap **Preferences**. Under **Network**, tap **Data Roaming** and tap **Enabled**.
- Turn off your phone and turn it on again (see [Turn the phone on/off](#)).
- Restart your phone (see [Restart your phone](#)).
- Contact your wireless service provider to verify that your subscription plan includes data services and that these services have been correctly activated. your wireless service provider should also be able to tell you if there are any outages in your location.

I can't access a web page

- 1 Make sure you have Internet access:
 - [Open Web](#)  and try to view a web page you've loaded before.
 - To ensure that you're viewing the page directly from the Internet, tap .
 - After confirming your Internet connection, try to view the page again. If it comes up blank, tap .
 - If you're still having trouble, the page may contain elements that are not supported by the browser, such as Flash, Shockwave, VBScript, WML script, and other plug-ins.
- 2 Some websites redirect simple web addresses given to the public to actual web addresses that are more complex (for example, if you enter the address www.palm.com/support, it may actually go to the web address <http://www.palm.com/us/support>). If your phone's browser can't follow the redirect, enter the web address in a desktop browser and read the actual web address in the address bar. Then enter the actual address in your phone's browser.

An image or map is too small on my screen

Do either of the following:

- To switch to landscape mode to see more of the image, turn the phone on its side.
- To zoom in on the image, pinch out or double-tap the screen.

A secure site refuses to permit a transaction

Some websites don't support certain browsers for transactions. Contact the site's webmaster to make sure the site allows transactions using your phone's web browser.

Calendar and Contacts

I haven't entered any contacts or calendar events on my phone, but when I open those apps, I see entries

The entries you see displayed in Calendar or Contacts have been downloaded to your phone from one of your online accounts such as Google or Microsoft Exchange. Anytime you are in Email, Calendar, or Contacts, you can set up a relationship to wirelessly sync data with one of these accounts. And after you enter the account settings in just one of these apps, any information you have online is automatically downloaded to all three—so if you set up a Gmail account in Email but also have a Google calendar, your phone's calendar automatically displays events entered in your Google calendar.

You can remove an online account from an application so that that app no longer syncs with that account (see [Stop synchronization of Contacts with an online account](#), [Stop synchronization of Calendar with an online account](#), or [Delete an email account](#)).

My personal and work contact and calendar information is getting merged into a single view—I'd rather keep them separate

The Synergy™ feature on your phone displays information from several sources in a single view, so you can access your info quickly, without having to remember where you stored it. Even though the information is visible in one view, the sources of that information are kept separate.

In Calendar, to see events from just one calendar, tap the word **All** in the upper-right corner of the screen and pick the account you want to see (see [Change the Calendar display](#)).

In Contacts, the list view shows all contacts from all accounts. You can, however, see what data comes from which account by opening the contact and tapping **Edit**. If you want to unlink contacts, see [Unlink a contact](#).

In Email, you can turn off the smart folder for All Inboxes (see [Set email preferences](#)). Then make the inboxes of your individual accounts favorites so that they're always easy to see in Account List view (see [Add an email folder as a favorite](#)).

I started entering a contact's name in universal search, but I'm not seeing the person in the results

- You need to enter at least two letters in universal search before contact matches are returned.
- If the contact is a linked contact, universal search searches on the primary profile only. Scroll through the contact match results to make sure that universal search did not return a different match for your contact from the one you were expecting.

For example, suppose you're searching for your friend Ed Smith's contact info. You have three contact entries for Ed that are linked, and the primary entry happens to be the one listed by Ed's screen name, ScubaEd. Typing **es** is not going to find Ed's contact; you have to type **scu**. To correct this, make the contact listing Ed's real name the primary contact (see [Link a contact](#)).

Camera

Here are some tips for taking good pictures with the camera:

- Clean the camera's lens with a soft, lint-free cloth.
- Take pictures in bright lighting conditions. Low-light images may be grainy, due to the sensitivity of the camera.
- Hold the phone as still as possible. Try supporting your picture-taking arm up against your body or a stationary object (such as a wall).
- Keep the subject of the pictures still. Exposure time is longer with lower light levels, so you may see a blur.
- For best results, verify that you have the brightest light source coming from behind you, lighting the subject's face. Avoid taking indoor pictures with the subject in front of a window or light. If the light is behind the subject, try moving closer to the subject and enabling the flash.
- Make sure the subject is at least 0.5 meter away from the camera to ensure good focus.
- If you take a picture when the keyboard is slid out, press **Space**  to take the picture instead of tapping the onscreen shutter icon.

Transferring information from your computer

I copied files from my computer, but I can't see or play them on my phone

When you connect your phone to your computer in USB Drive mode, you can copy any file onto your phone. However, each media application on your phone—Photos, Music, and Videos—can display or play files in certain file formats only. If your media file is in an unsupported format, you can't use it on your phone.

For a list of supported photo types, see [Photos](#). For a list of supported music file types, see [Music](#). For a list of supported video file types, see [Videos](#).

When I open the Palm Pre drive folder on my computer, I see subfolders. Do I need to move my files into these folders?

The default folders are there to help you organize files you copy to and from your computer. But you can copy files from your computer into any folder you want—you can create your own folders, or just drag your files to the top level of the drive. As long as the file is in a supported format, your phone can detect and open it.

NOTE If you move a music file into the ringtones folder, the Music application cannot find it.

Backing up and restoring data

I need to reset my phone but don't understand the difference between a partial erase and a full erase

Both a partial erase and a full erase delete all personal information, such as events, contacts, and tasks, as well as applications you have added, such as third-party software, on your phone. In addition, a full erase deletes all files stored in the USB Drive of your phone, which includes all pictures, videos, music files, documents, PDF files, and ringtones.

For more information, see [Erase data and reset your phone](#).

How do I get my data back after a full or partial erase?

After a full or a partial erase, on your phone, enter your existing Palm profile email address, and password—don't create a new one! When you do this, all data that has been backed up to your profile—contacts, calendar events, and tasks, as well as apps you bought through App Catalog—is restored to your phone. To restore information about your online accounts to your phone,

simply enter the password for each account when prompted after the erase—synchronization begins again.

A full erase deletes everything deleted by a partial erase, plus everything you stored in your phone's USB drive (photos, videos, music, documents, PDF files, ringtones, and so on). You need to have copies of those files available elsewhere if you want to restore them to your phone. For example, you can save copies on your computer and then transfer them back to your phone (see [Copy files between your phone and your computer](#)).

My bookmarks were restored, but the thumbnail icon is not displaying

Web bookmarks are part of the data backed up to your Palm profile. After a partial or full erase, a bookmark is restored with a generic thumbnail icon. After you revisit the page for which you created the bookmark, the original thumbnail icon is restored.

Updates

I dismissed a system update notification, and now I don't know how to get the update on my phone

If you have a phone network connection or a Wi-Fi connection and the battery has at least a 30% charge, you can start the update yourself: [Open Updates](#) . Your phone checks for the availability of the update, and if one is available, tap **Download Now**. The download happens in the background, so you can continue to use your phone until the actual installation takes over.

Your phone continues to remind you to install the update after it has been downloaded. You are also reminded to install the update automatically the next time you charge your phone. An update installation cannot begin unless you have at least a 30% charge on your battery. If you tap **Install Later**, the update will automatically install the next time all three of the

following conditions are true: the phone is charging and idle, and the battery has at least a 30% charge.

My phone froze while I was downloading or installing a system update

During a wireless software update, there's a small chance that your phone may freeze and stop responding to taps or key presses. If this happens, you can use webOS Doctor™ to restore your phone and install the system update from your computer using the USB cable. On your computer, go to palm.com/rom to download webOS Doctor.

Transferring information from another Palm® webOS™ platform phone

I want to get files off my old webOS phone, but the screen is cracked or doesn't respond to taps, so I can't access USB Drive mode

If you can't put your phone in USB Drive mode using the screen, you can use a keyboard shortcut. Press and hold the **orange**  **key** + **Sym**  + **U**.

Third-party applications

Some third-party applications may cause conflicts with your phone. Third-party applications that modify the wireless features of your phone may require extra troubleshooting. Use caution when installing the following:

- Ringtone managers
- Caller ID applications

- Instant messaging
- Applications that modify when your phone or data connections turn on or off and how your phone behaves

If you recently installed an application and your phone seems to be stuck, try the following in sequence until the problem is resolved:

- 1 Restart your phone (see [Restart your phone](#)).
- 2 Make sure your third-party applications are up-to-date (see [Manually check for system updates](#)).
- 3 See if a system update is available (see [Manually check for system updates](#)).
- 4 Delete the most recently installed application, or the application you think could be causing the problem, from your phone (see [Delete an application](#)).
- 5 Perform a backup (see [Back up your information](#)).
- 6 Perform a partial erase (see [Erase data and reset your phone](#)).
- 7 Enter your Palm profile email address and password to restore your backed-up information.
- 8 If the problem is resolved, begin reinstalling your third-party applications one at a time. Open each application after you reinstall it to see if the problem recurs.
- 9 If the problem recurs, delete the last application you installed and report the problem to its developer.

Getting more help

Contact the author or vendor of any third-party software if you require further assistance. Neither Palm nor your wireless service provider provides technical support for applications that are not built into your phone.

Making room on your phone

If you store a large number of files, or install many third-party applications, the internal memory on your phone may fill up. Here are some ways to clear space on your phone:

- **Photos, Videos, Music, Doc View, PDF View:** Large media files take up a lot of memory. Move files to your computer (see [Copy files between your phone and your computer](#)), or delete them from your phone.
- **Email:** Email attachments can be large and consume lots of memory. Copy attachments to your computer (see [Copy files between your phone and your computer](#)), or delete large files from your phone (see [Delete a message](#)). You may also want to empty the deleted items folder.
- **Web:** Delete stored web browsing information by clearing your history, cookies, and cache (see [Customize web browser settings](#)).
- **Third-party applications:** You can delete infrequently used applications (see [Delete an application](#)).

Terms

airplane mode

A mode in which all the wireless services on your phone are turned off. Wireless services include the phone used for making and receiving calls, the Wi-Fi feature, and Bluetooth® wireless technology. See [Turn wireless services off \(airplane mode\)](#).

application menu

A menu that contains application commands such as cut, copy, and paste (where available); preferences; and application help. To open the application menu, tap the application name in the upper-left corner of the screen. See also [connection menu](#).

application search

The feature that lets you search for entries within an application by typing a search term when the list view is displayed—for example, a contact name or phone number, the subject text of an email message, or a few words from a memo. See also [universal search](#).

application update

An update from the developer of an application you bought through App Catalog on your phone. When an application update is available, a notification appears on your phone. You can also check for application updates manually. Additional fees may apply. See [Update the software on your phone](#).

back

The gesture you use to move up one level from a detailed view to a more general view of the application you're working in. For example, when you finish reading an email message, make the back gesture to close the message and return to your list of messages. Or when you finish writing a

memo, make the back gesture to close and save the memo and return to the display of all your memos. See [Go up one level in an app \(back gesture\)](#). Making the back gesture is also the way you save your work in many apps. If you don't see a Done button, make the back gesture to save your work.

card

A minimized view of an open application. You can easily move among and reorder cards in Card view. Tap a card to restore the full-screen view of the application and continue working in it. See also [Card view](#).

Card view

The view on your phone that displays applications as minimized cards, allowing you to easily move among and reorder them. Don't confuse Card view with the [Launcher](#), which along with [Quick Launch](#), shows you all the apps you have on your phone, not just the open ones. To display Card view, press **Center**  from any open application window, or flick up from the gesture area to the screen. Card view displays your wallpaper.

Center

The button in the center of the gesture area. Press **Center**  to display Card view or to close the [Launcher](#).

connection menu

A menu that lets you turn on or off connection features including the Wi-Fi feature, Bluetooth® wireless technology, and all wireless services (airplane mode). To open the connection menu, tap the upper-right corner of the screen. See also [application menu](#).

dashboard

A list of all your notifications. When one or more notification icons appear at the bottom of the screen, tap the icons to open the dashboard. Tap a dashboard item to act on it. See also [notification](#).

Data Transfer Assistant

A tool that allows you to do a one-way transfer of information such as contacts and calendar events from a desktop organizer to your phone. See [Data transfer](#).

drag

A slow movement of the finger up or down on the touchscreen.

flick

A very fast skimming of the finger horizontally or vertically on the touchscreen.

gesture area

The strip beneath the touchscreen that you use to perform the back gesture, among others. Some gestures you begin in the gesture area and complete on the touchscreen, for example, the slow drag that displays [Quick Launch](#) when you have an application filling the screen.

Launcher

A group of screens displaying all your applications. To open the Launcher, tap  in [Quick Launch](#), or flick up twice from the gesture area to the screen. If you are in Card view, flick up once from the gesture area to the screen to open the Launcher. In the Launcher, swipe up, down, left, and right to see all your apps. Tap an app icon to open it.

linked contact

A contact containing information from more than one source. For example, if you have a work contact in Exchange ActiveSync and a personal contact for the same person in Google, the Contacts application automatically recognizes the connection and links the two contacts so that you can see all the information in one place—but the information is kept separate in the different accounts where it originated. You can also manually link and unlink contacts.

merged view

A feature on your phone that displays data from several sources in a single view, but keeps the sources of your data separate.

Let's say you use Google calendar for your personal events and your company's Outlook calendar for business events. Your phone's Calendar application displays events from both calendars in a single view, called All.

Likewise, if you set up multiple email accounts, the Email application displays the messages from all your account inboxes in a single view, called All inboxes. And in Messaging, all your messages with a person show up in a single conversation view, whether they are text, multimedia, or instant messages. See also [linked contact](#).

notification

A message that appears at the bottom of the screen alerting you of an incoming or missed call; voicemail, email, or text messages; an upcoming event; and more. In most cases, you can tap a notification to act on it. See also [dashboard](#).

online account

An account that you have with an online service such as Google or Microsoft Exchange. You can synchronize contacts, calendar events, and email between your phone and many of your online accounts.

orange key

The key you use to enter characters that appear above the letters on the keyboard keys. Press once to enter a single character. Press twice to lock the alternate character feature, so you can enter a series of characters. Also, press and hold the **orange ** key and then drag your finger onscreen to move the cursor in text.

Palm profile

A Palm profile gives you access to services like automatic updates, backup of your data, and more. You create a Palm profile by entering a working email address during initial setup of your Palm® Pre™ phone. See [Set up your phone](#). Your Palm profile also identifies the location on the web where the data you store in your Palm Profile accounts is backed up. (You cannot see or change this data on the web, however.) See also [Palm profile account](#).

Palm profile account

An account that is automatically set up for you when you create your Palm profile. You can assign contacts and calendar events to it. Palm profile items are included in the daily backup of information to your Palm profile but do not synchronize with any of your online accounts. See also [Palm profile](#).

pinch

A gesture used to go in for a magnified view (zoom in) or move out to see a larger area (zoom out). To zoom in, you pinch out: Place the thumb and index fingertips close together on the touchscreen; then slowly spread them apart. To zoom out, you pinch in: Place the thumb and index fingertips apart on the touchscreen, and slowly bring them together.

Quick Launch

A bar of up to five icons that give you quick access to applications. Quick Launch always appears at the bottom of Card view and the Launcher. By default, Quick Launch displays icons for the following apps: Phone, Email, Contacts, and Calendar. The fifth icon is the Launcher. Tap a Quick Launch icon to open the app.

You can also open Quick Launch from any maximized application window by dragging up from the gesture area to the screen. Move your finger to the app you want, and then lift your finger. The application opens.

smart folder

One of two folders—All Inboxes and All Flagged—that can be set to appear at the top of the Account List view in the Email application. See [Set email preferences](#).

swipe

A light, fast horizontal movement with the finger from right to left or left to right on the touchscreen or the gesture area.

Sym key

The key you use to enter symbols and accented characters. Press Sym to open the full table of symbols. Press Sym + a letter key to narrow the table to symbols associated with that letter—for example, press  + **e** to enter é.

Synergy™ feature

The feature from Palm that lets you take advantage of merged views and linked contacts on your phone. See [Your Palm® Pre™ phone](#).

system update

Updates provided by Palm to the Palm® webOS™ platform and core applications such as Contacts and Calendar. When a system update is available, a notification appears on your phone. You can also check for system updates manually. See [Update the software on your phone](#).

tap

A light quick touch on the touchscreen. Use the fleshy part of your fingertip to tap. Don't tap with a fingernail, and don't use a pen or pencil—the screen does not respond to touches like that. Also, don't bear down. Make the tap firmly, but lightly.

universal search

The feature that lets you make calls, search for applications and contacts on your phone, and search the web simply by typing the number or search term in either Card view or the Launcher. See [Search to find info and make calls](#).

webOS™ platform

The operating system of your Palm® Pre™ phone. Key features of the webOS platform include gestures, cards, merged views, and linked contacts.

Online accounts available for webOS phones

Table 1. Online accounts available for webOS phones

Account/Behavior	Applications that display data from this account	Relationship between phone and online account*	Can I edit and add info to this account on my phone?	Can I edit and add data to this account on the web?	What happens when I delete this account from one app?**
Exchange	Contacts, Calendar, Tasks, Email	Sync	Yes	Yes	All data from all affected apps is simultaneously deleted
Facebook	Contacts, Calendar	Contacts, Calendar: Transfer (from web to phone) Photos: Transfer/upload (from phone to web)	Photos only	Contacts and Calendar only	Only info in that app is deleted; info remains in other apps
Google	My Contacts, Calendar, Messaging, Email	Sync	Yes	Yes	Only info in that app is deleted; info remains in other apps
Yahoo!	Contacts, Calendar, Messaging, Email	Contacts (transfer from web to phone), Calendar (Sync)	Contacts: No Calendar: Yes	Contacts: Yes Calendar: Yes	Only info in that app is deleted; info remains in other apps
LinkedIn	Contacts	Transfer (from web to phone)	No	Yes	Only one app is affected: Contacts
Palm profile	Contacts, Calendar, Tasks, Memos; see “Backup” for full list of affected info	Transfer (from phone to web)	Yes	No	All data is deleted from all affected apps; see “Backup” for details

Table 1. Online accounts available for webOS phones

Account/Behavior	Applications that display data from this account	Relationship between phone and online account*	Can I edit and add info to this account on my phone?	Can I edit and add data to this account on the web?	What happens when I delete this account from one app?**
Photobucket	Photos	Transfer/upload (from phone to web)	Yes	No	Only info in that app is deleted

***Sync:** A two-way exchange and update of your data. What you add or change in one location is automatically added or changed in the other.

Transfer: A one-way update of your data. You can add or change data only in one location; the data is then copied to the other location.

******Only the data on your phone is deleted. The data source is not affected.

Specifications

Table 1. Specifications

Category	Description
Radio	• CDMA2000 digital dual band • EvDO Rev A and 1xRTT
Features	• Speakerphone • Hands-free headset jack (3.5 mm stereo, 3-barrel connector) • HAC M4 • Microphone mute option • TTY-compatible • Ringer switch
Processor technologies	• Dual-band MSM6801A processor • TI® OMAP 3430 processor
Battery	• Rechargeable lithium-ion • 1150mA/hr power capacity • Removable
Operating system	• Palm® webOS™ platform
Camera	• 3 megapixel • LED flash with extended depth in field • Auto-exposure • Auto-white balance • Geotagging
Size	• 3.9 in. x 2.3 in. x 0.67 in. (100.5 mm x 59.5 mm x 16.95 mm)
Weight	• 4.76 ounces (135 grams)

Table 1. Specifications

Category	Description
Connectivity	• Wi-Fi 802.11 b/g with WPA, WPA2, WEP, 802.1x authentication • Bluetooth® wireless technology 2.1 + EDR with A2DP (stereo Bluetooth) support
Display	• 3.1-inch touchscreen • 24-bit color • Resolution: 320 x 480 HVGA • User-adjustable brightness
Keyboard	• Slide-out physical QWERTY keyboard
Sensors	• Ambient light • Accelerometer • Proximity
Memory	• 8GB (~7GB user available) • USB mass storage support
Connector	• microUSB connector with USB 2.0 Hi-Speed
Included Palm webOS applications (at time of purchase)	• App Catalog • Calculator • Calendar • Camera • Clock • Contacts • Doc View (DOC, XLS, PPT) • Email • Memos • Messaging (integrated SMS, MMS, and IM) • Music • PDF View • Phone • Photos • Tasks • Videos • Web

Table 1. Specifications

Category	Description
Included third-party applications (at time of purchase)	• Google Maps • YouTube
Operating temperature range	• 32°F to 113°F (0°C to 45°C) • 5% to 90% RH

Regulatory and safety information

FCC Statements

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This phone meets the FCC Radiofrequency Emission Guidelines and is certified with the FCC as:

FCC ID: O8F-CASC.

The FCC ID on your Palm phone is located on a label inside the battery compartment. The battery must be removed as shown below to view the label.

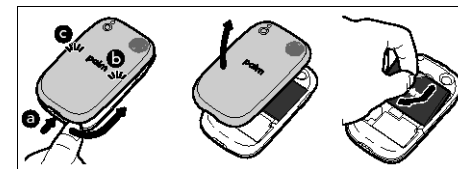

CAUTION Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Antenna Care/Unauthorized Modifications

Use only the supplied integral antenna. Unauthorized antenna modifications or attachments could damage the unit and may violate FCC regulations.

Industry Canada

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The term "IC" before the equipment certification number only signifies that the Industry Canada technical specifications were met.

IC: 3905A-CASC

This Class B digital apparatus complies with Canadian ICES-003.

L' utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) l' utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

Cet appareil numérique de la classe [*] est conforme à la norme NMB-003 du Canada.

Radio Frequency (RF) Safety Exposure

General statement on Radio Frequency (RF) energy: Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Specific Absorption Rate (SAR): Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

In order to certify this unit for sale to the public, this unit has been tested for RF exposure compliance at a qualified test laboratory and found to comply with the regulations regarding exposure to RF Energy under the recommendations of the International Commission on Non-Ionizing Radiation Protection (ICNIRP). The tests are preformed in positions and locations as required by the FCC and IC for each model.

As SAR is measured utilizing the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated below. This is due to automatic changes to the power level of the device to ensure it only uses the minimum power required to communicate with the network.

The SAR limit for mobile devices set by FCC/IC is 1.6 W/kg averaged over 1 gram of tissue for the body or head (4.0 W/kg averaged over 10 grams of tissue for the extremities - hands, wrists, ankles, and feet).

The highest reported SAR values of the Palm phone are:

Table 1.

Maximum 1g SAR values (W/kg) FCC	
Head	0.919
Body	0.936

In order to comply with FCC and IC RF exposure safety guidelines, users MUST use one of the following types of body worn accessories:

- 1 Palm® brand body-worn accessory that has been tested for (specific absorption rate) SAR compliance and is intended for use with this product.
- 2 An accessory that contains NO metal (snaps, clips, etc.) and provides AT LEAST 1.5 cm (0.6 in.) of separation between the user's body and the unit.

Do NOT use the device in a manner such that it is in direct contact with the body (i.e. on the lap or in a breast pocket). Such use will likely exceed the FCC RF safety exposure limits. See www.fcc.gov/oet/rfsafety for more information on RF exposure safety.

To view the most recent SAR values of the Palm® Pre™ phone, visit www.palm.com/sarevdo-pre.

Body worn operation: Important safety information regarding radio frequency (RF) radiation exposure: To ensure compliance with RF exposure guidelines the phone must be used with a minimum of 1.5 cm (0.6 in.) separation from the body. Failure to observe these instructions could result in your RF exposure exceeding the relevant guideline limits.

Limiting exposure to radio frequency (RF) fields: For individuals concerned about limiting their exposure to RF fields, the World Health Organization (WHO) provides the following advice:

Precautionary measures: Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using 'hands-free' devices to keep mobile phones away from the head and body.

Further information on this subject can be obtained from the WHO home page <http://www.who.int/mediacentre/factsheets/fs193/en/index.html> WHO Fact sheet 193: June 2000.

Hearing Aid Compatibility (HAC)

Using Your Phone With a Hearing Device: Your device has been tested for hearing aid compatibility. Your Palm® Pre™ phone has an M4 rating. For additional HAC information, including the HAC rating of this product, please refer to palm.com/hacevdo-pre.

When some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate. The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing-device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that have been rated have a label on the box.

These ratings are not guarantees. Results will vary, depending on the level of immunity of your hearing device and the degree of your hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference with hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T switch" or "Telephone Switch") than unrated phones. T4 is the better/higher of the two ratings.

The more immune your hearing aid device is, the less likely you are to experience interference noise from your wireless phone. Hearing aid devices should have ratings similar to those of

phones. Ask your hearing health care professional for the rating of your hearing aid. Add the rating of your hearing aid and your phone to determine probable usability:

- Any combined rating equal to or greater than six offers the best use.
- Any combined rating equal to five is considered normal use.
- Any combined rating equal to four is considered usable.

Thus, if you pair an M3 hearing aid with an M3 phone, you will have a combined rating of six for “best use”. This is synonymous for T ratings.

Palm further suggest that you experiment with multiple phones (even those not labeled M3/T3 or M4/T4) while in the store to find the one that works best with your hearing aid device. If you experience interference or find the quality of service unsatisfactory after purchasing your device, promptly return it to the store within 30 days of purchase. With the Palm 30-day Risk-Free Guarantee, you may return the device within 30 days of purchase for a full refund, and you will only be responsible for charges based on your actual usage.

Getting the Best Hearing Device Experience With Your Device

To further minimize interference:

- Set the phone's screen and keyboard backlight settings to ensure the minimum time interval.
- Move the phone around to find the point with the least interference.

For more information, please go to the FCC's Consumer Alert on accessibility of digital wireless phones at http://www.fcc.gov/cgb/consumerfacts/hac_wireless.html.

Battery Handling

- Do not disassemble or open, crush, bend or deform, puncture, or shred the battery.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion, or other hazard.
- Only use the battery for the system for which it is specified.
- Only use the battery with a charging system that has been qualified with the system per the IEEE/CTIA-1725 standard. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.
- Replace the battery only with another battery that has been qualified with the system per IEEE/CTIA-1725. Use of an unqualified battery may present a risk of fire, explosion, leakage, or other hazard.
- Promptly dispose of used batteries in accordance with local regulations.
- Battery usage by children should be supervised.

- Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- Do not handle a damaged or leaking Lithium-Ion (LI-ion) battery as you can be burned.
- Improper battery use may result in a fire, explosion, or other hazard.

Based on DOT rules, spare batteries must not be transported in checked luggage on commercial flights. Spare batteries can only be transported in carry-on luggage. For more information: http://safetravel.dot.gov/whats_new_batteries.html

Protecting your Battery

The guidelines listed below help you get the most out of your battery's performance.

Recently there have been some public reports of wireless phone batteries overheating, catching fire, or exploding. It appears that many, if not all, of these reports involve counterfeit or inexpensive, aftermarket-brand batteries with unknown or questionable manufacturing standards. Use only manufacturer-approved batteries and accessories found at Carrier Stores or through your device's manufacturer. Buying the right batteries and accessories is the best way to ensure they are genuine and safe.


- In order to avoid damage, charge the battery only in temperatures that range from 32° F to 113° F (0° C to 45° C).
- Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- Never dispose of the battery by incineration.
- Keep the metal contacts on top of the battery clean.
- Don't attempt to disassemble or short-circuit the battery.
- The battery may need recharging if it has not been used for a long period of time.
- It's best to replace the battery when it no longer provides acceptable performance. It can be recharged hundreds of times before it needs replacing.
- Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:

Less than one month: -4° F to 140° F (-20° C to 60° C)

More than one month: -4° F to 113° F (-20° C to 45° C)

Power Specifications

Use only Palm-approved power accessories such as AC-power adapters and batteries. Unauthorized and non-approved batteries will NOT operate with the Palm phone.

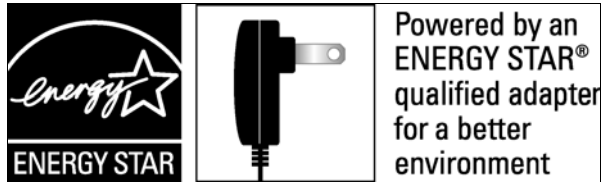

AC Power Adapter source: Palm

Part Number: 157-10108-00 / 157-10114-00

Input Rating: 100-240 Vac, 50/60Hz, 0.2A

Output Rating: 5Vdc, 1000mA

AC Power Adapter source: Palm

Part Number: 157-10124-00

Input Rating: 100-240 Vac, 50/60Hz, 0.2A

Output Rating: 5Vdc, 1000mA

AC Power Adapter source: Palm

Part Number: 157-10130-00

Input Rating: 100-240 Vac, 50/60Hz, 0.2A

Output Rating: 5Vdc, 1000mA

Battery Source: Palm

Type: Rechargeable Li-ion Polymer

Model: 157-10119-00

Rating: 3.7Vdc, 1150mAh (minimum)

Recycling and Disposal



This symbol indicates that Palm products should be recycled and not be disposed of in unsorted municipal waste. Please return Palm products to the electrical and electronic equipment collection points in your municipality or county or to a facility that properly recycles electrical and electronic equipment. These collection points are available free of charge. For detailed information please contact your municipality or county. For information on Palm's environmental programs, visit www.palm.com/environment.

Hazardous substances that may be included in electronic products can potentially affect human health and the environment. Recycling benefits the environment by diverting waste from landfills and by recovering materials that may be recycled into other products. Responsible recycling ensures materials are properly collected and disposed.

Palm is committed to supporting the collection and recycling of its products. Palm is committed to participate and support the European Union WEEE Directive (2002/96/EC) and the protection of the environment for future generations. For more information on the WEEE Directive implementation in the various EU member states please see www.weee-forum.org.

It is everyone's responsibility to ensure that electrical and electronic products are properly reused, recycled, or recovered.

As part of Palm's corporate commitment to be a good steward of the environment, we strive to use environmentally friendly materials, reduce waste and collaborate with our channel partners to raise awareness and help keep Palm handheld devices, phones, and mobile companions out of landfills through evaluation and disposition for reuse and recycling.

Visit palm.com/recycle for additional details and information about how you can help reduce electronic waste.

User Safety

Operational Warnings

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION. Read this information before using your phone. For the safe and efficient operation of your phone, observe these guidelines:

Potentially explosive atmospheres: Turn off your phone when you are in any areas with a potentially explosive atmosphere, such as fueling areas (gas or petrol stations, below deck on boats) storage facilities for fuel or chemicals, blasting areas and areas near electrical blasting caps, and areas where there are chemicals or particles (such as metal powders, grains, and dust) in the air.

Interference to medical and personal Electronic Devices: Most but not all electronic equipment is shielded from RF signals and certain electronic equipment may not be shielded against the RF signals from your phone.

Pacemakers: The Health Industry Manufacturers Association recommends that a minimum separation of 15 centimeters (6 inches) be maintained between a phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by the recommendations of Wireless Technology Research.

Persons with pacemakers should:

- ALWAYS keep the phone more than six inches (15 centimeters) from their pacemaker when the phone is turned ON.
- Not carry the phone in a breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn the phone OFF immediately if you have any reason to suspect that interference is taking place.
- Keep headsets away from pacemakers and other personal medical devices

Audio Safety: This phone is capable of producing loud noises which may damage your hearing. When using the speakerphone feature, it is recommended that you place your phone at a safe distance from your ear.

Other Medical Devices, Hospitals: If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Repetitive Motion Injuries: When using the keyboard or playing games on your phone, you may experience discomfort in your neck, shoulders, hands, arms, or other parts of the body. To avoid any injury, such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorder, make sure to take necessary breaks from use, take longer rests (such as several hours) if discomfort or tiring begins, and see a doctor if discomfort persists. To minimize the risk of Repetitive Motion Injuries, when texting or playing games with your phone:

- Do not grip the phone too tightly
- Press the buttons lightly
- Make use of the special features in the handset which minimize the number of buttons which have to be pressed, such as message templates and predictive text
- Take lots of breaks to stretch and relax

Blackouts and Seizures: Blinking lights, such as those experienced with television or playing video games may cause some people to experience blackout or seizure, even if never experienced before. In the event a phone user should experience any disorientation, loss of awareness, convulsion, eye or muscle twitching, or other involuntary movements, stop use immediately and consult a doctor. Individuals with personal or family history of such events should consult a doctor before using the device. To limit the possibility of such symptoms, wherever possible every hour take a minimum break of 15 minutes, use in a well lighted area, view the screen from the farthest distance, and avoid exposure to blinking lights if you are tired.

Operating Machinery: Do not use your phone while operating machinery. Full attention must be given to operating the machinery in order to reduce the risk of an accident.

Aircraft: While in aircraft, follow all instructions regarding the operation of your phone. Use of your phone while on board an aircraft must be done in accordance and in compliance with airline instructions and regulations.

Vehicles with Air Bags: Your phone should not be placed in a position that would affect the operation of air bag deployment or in a position that, should the air bag inflate, could propel the phone. Air bags will inflate with great force and care should be taken to protect within a vehicle that has air bags. Do not place a phone in the area over an air bag or in the air bag deployment area. Store the phone safely before driving the vehicle.

Hearing Aids: People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby. The level of interference will depend on the type of hearing device and the distance from the interference source. Increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

Small children: Do not leave your phone and its accessories within the reach of small children or allow them to play with it. They could hurt themselves or others, or could accidentally damage the phone. Your phone contains small parts with sharp edges that may cause an injury or which could become detached and create a choking hazard.

Keep the device away from the abdomens of pregnant women and adolescents, particularly when using the device hands-free.

To reduce exposure to radiation, use your device in good reception areas, as indicated by the bars on your phone, at least 3 to 4 bars.

Caution: Avoid potential hearing loss

Prolonged exposure to loud sounds (including music) is the most common cause of preventable hearing loss. Some scientific research suggests that using portable audio devices, such as portable music players and cellular telephones, at high volume settings for long durations may lead to permanent noise-induced hearing loss. This includes the use of headphones (including headsets, ear buds, and Bluetooth® or other wireless devices). Exposure to very loud sound has also been associated in some studies with tinnitus (a ringing in the ear), hypersensitivity to sound, and distorted hearing. Individual susceptibility to noise-induced hearing loss and other potential hearing problems varies. The amount of sound produced by a portable audio device varies depending on the nature of the sound, the device, the device settings, and the headphones. You should follow some common sense recommendations when using any portable audio device:

- Set the volume in a quiet environment and select the lowest volume at which you can hear adequately.
- When using headphones, turn the volume down if you cannot hear the people speaking near you or if the person sitting next to you can hear what you are listening to.
- Do not turn the volume up to block out noisy surroundings. If you choose to listen to your portable device in a noisy environment, use noise-cancelling headphones to block out background environmental noise.
- Limit the amount of time you listen. As the volume increases, less time is required before your hearing could be affected.
- Avoid using headphones after exposure to extremely loud noises, such as rock concerts, that might cause temporary hearing loss. Temporary hearing loss might cause unsafe volumes to sound normal.
- Do not listen at any volume that causes you discomfort. If you experience ringing in your ears, hear muffled speech, or experience any temporary hearing difficulty after listening to your portable audio device, discontinue use and consult your doctor.
- You can obtain additional information on this subject from the following sources:

American Academy of Audiology

11730 Plaza America Drive, Suite 300
Reston, VA 20190
Voice: (800) 222-2336

Email: info@audiology.org
Internet: www.audiology.org

National Institute on Deafness and Other Communication Disorders

National Institutes of Health
31 Center Drive, MSC 2320
Bethesda, MD USA 20892-2320
Voice: (301) 496-7243
Email: nidcdinfo@nih.gov
Internet: <http://www.nidcd.nih.gov/health/hearing>

National Institute for Occupational Safety and Health

395 E Street, S.W., Suite 9200
Patriots Plaza Building
Washington, DC 20201
Voice: 1-800-CDC-INFO (1-800-232-4636)
Internet: <http://www.cdc.gov/niosh/topics/noise>

Product Handling & Safety

General statement on handling and use: You alone are responsible for how you use your phone and any consequences of its use.

You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

- Always treat your phone and its accessories with care and keep it in a clean and dust-free place.
- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture, or high humidity.
- Do not drop, throw, or try to bend your phone or its accessories.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.
- Do not paint your phone or its accessories.
- Do not attempt to disassemble your phone or its accessories; only authorized personnel must do so.
- Do not expose your phone or its accessories to extreme temperatures, minimum 14° F and maximum 140° F (-10° C to 60° C).
- Please check local regulations for disposal of electronic products.
- Do not carry your phone in your back pocket as it could break when you sit down.

Battery: Your phone includes an internal lithium-ion or lithium-ion polymer battery. Please note that use of certain data applications can result in heavy battery use and may require frequent battery charging. Any disposal of the phone or battery must comply with laws and regulations pertaining to lithium-ion or lithium-ion polymer batteries.

Demagnetization: To avoid the risk of demagnetization, do not allow electronic devices or magnetic media close to your phone for a long time.

Normal use position: When making or receiving a phone call, hold your phone to your ear, with the bottom towards your mouth or as you would a fixed line phone.

Emergency calls: This phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

Phone heating: Your phone may become warm during charging and during normal use.

Accessories: Use only approved accessories. Do not connect with incompatible products or accessories. Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit the battery terminals.

Connection to a car: Seek professional advice when connecting a phone interface to the vehicle electrical system.

Faulty and damaged products: Do not attempt to disassemble the phone or its accessory. Only qualified personnel must service or repair the phone or its accessory. If your phone or its accessory has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorized service center.

Interference in cars and to other Electronic Devices: Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a hands-free kit with an external antenna is included in the installation. RF energy may affect improperly installed or inadequately shielded electronic operating and entertainment systems in motor vehicles. Check with the manufacturer or representative to determine if these systems are adequately shielded from external RF energy. Also check with the manufacturer of any equipment that has been added to the vehicle.

Driving Safety

Driving Safety Tips Overview

Always obey all laws and regulations on the use of the phone in your driving area.

Safety—Your most important call. The Wireless Industry reminds you to use your phone safely when driving.

- 1 Get to know your phone and its features, such as speed-dial and redial.
- 2 Use a hands-free device where it is allowed. In some areas, you may not use your phone while driving even with a hands-free accessory.
- 3 Position your phone within easy reach.
- 4 Let the person you are speaking to know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.
- 5 Do not take notes, look up phone numbers, read/write e-mail, or surf the Internet while driving.
- 6 Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic.

- 7 Do not engage in stressful or emotional conversations that may divert your attention from the road.
- 8 Dial your national emergency number to report serious emergencies. This is a free call from your phone.
- 9 Use your phone to help others in emergencies.
- 10 Call roadside assistance or a special non-emergency wireless number when necessary.

Driving Safety Tip Details

- 1 Get to know your phone and its features such as speed-dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most phone models offer, including automatic redial and memory dial. Also, work to memorize the phone keyboard so you can use the speed-dial function without taking your attention off the road.
- 2 Use a hands-free device. A number of hands-free phone accessories are readily available today. Whether you choose an installed mounted device for your phone or a speakerphone accessory, take advantage of these devices. If driving while using a phone is permitted in your area, we recommend using a phone headset or a hands-free car kit (sold separately). However, be aware that use of a headset that covers both ears impairs your ability to hear other sounds. Use of such a headset while operating a motor vehicle or riding a bicycle may create a serious hazard to you and/or others, and may be illegal. If you must use a stereo headset while driving, place a speaker in only one ear. Leave the other ear free to hear outside noises, and do so only if it is legal and you can do so safely.
- 3 Make sure you place your phone within easy reach and where you can grab it without removing your eyes from the road. If you get an incoming call at an inconvenient time, let your voicemail answer it for you.
- 4 Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking to know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.
- 5 Do not take notes, look up phone numbers, read/write e-mail, or surf the internet while driving. If you are reading an address book or business card while driving a car, or writing a to-do list, then you are not watching where you are going. It's common sense. Do not get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.
- 6 Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip, or attempt to schedule your calls with times you may be temporarily stopped or otherwise stationary. But if you need to dial while driving, follow this simple tip: dial only a few numbers, check the road and your mirrors, then continue.
- 7 Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and driving do not mix—they are distracting and even dangerous when you are behind the wheel. Make people you are talking with aware you are driving and if necessary, suspend phone conversations which have the potential to divert your attention from the road.
- 8 Use your phone to call for help. Your phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations—with your phone at your side, help is only three numbers away. Dial your national emergency number in the case of fire, traffic accident, road hazard, or medical emergencies. Remember, your national emergency number is a free call on your phone.

- 9 Use your phone to help others in emergencies. If you see an auto accident, crime in progress, or other serious emergency where lives are in danger, call your national emergency number, as you would want others to do for you.
- 10 Call roadside assistance or a special wireless non-emergency assistance number when necessary. Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call to your national emergency number. But you can still use your phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

General Operation

Prolonged Views of Screen: If you are driving, do not access any function requiring a prolonged view of the screen. Pull over in a safe and legal manner before attempting to access a function of the system requiring prolonged attention. Even occasional short scans to the screen may be hazardous if your attention has been diverted away from your driving task at a critical time.

Volume Setting: Do not raise the volume excessively. Keep the volume at a level where you can still hear outside traffic and emergency signals while driving. Driving while unable to hear these sounds could cause an accident.

Let Your Judgment Prevail: The Device Software is only an aid. Make your driving decisions based on your observations of local conditions and existing traffic regulations. The Device Software is not a substitute for your personal judgment.

Use of Speech Recognition Functions: **Speech recognition** software is inherently a statistical process which is subject to errors. It is your responsibility to monitor the speech recognition functions and address any errors.

Hands-Free Capability

All CTIA Certified portable products provide the consumer with a toll-free number for the purchase of a compatible hands-free device, 1-800-881-7256.

Index

NUMERICS

1xRTT data networks 12, 169
3G2 files 116
3GP files 116
3GP2 files 116
3GPP files 116

A

AAC files 157
AAC+ files 157
AC charger 7
accented characters 29
Accept Cookies option 132
accounts
 See also specific types
 contacts synchronization 84, 85
 online 167, 168
 Palm profile 47, 146
 pictures and 114
active calls. *See* phone calls
ActiveSync accounts. *See*
 Exchange ActiveSync accounts
Add An Account option
 Calendar 94, 100

 Contacts 85, 92
 Email 65
Add Bookmark option 130
Add Contact Reminder 89
Add device option 59, 134
Add Picture 78
Add to Launcher 129
Address Book on Mac 45, 46
address books 51, 84
addresses. *See* contacts; email
 addresses
advanced account settings 67
advanced gestures 155
airplane mode 12, 17, 177
alarms 35, 96, 99, 106–107
Album Art view 120
albums. *See* photo albums; video
 albums
alerts. *See* alarms; notifications
All Calendars view 95
all-day events 97
 See also calendars; events
AMR files 157
animations 7, 19
answering phone 52–53
antenna 187
AOL accounts 65

App Catalog 38–41
application menu 32, 177
application search 177
 See also searching
application update 177
 See also updating
applications
 See also specific types;
 third-party applications
adding 38–41
buying 38
closing 27
default 151
deleting 28, 176
dialing from 50
displaying 26
in Launcher 24
in Quick Launch 24
included with phone 184
keywords for 34
losing 174
moving between 26
music and 119
opening 24–25
Palm OS 38
reinstalling 40
running 6

 searching in 34, 177
 troubleshooting 150, 164, 165, 169
 updating 36–37, 177
appointments. *See* events
attachments
 adding to messages 75
 files as 139, 142
 internal memory and 176
 messages and 69
 opening 71, 79
 pictures as 113
 saving 71
audio quality 167
authentication 126, 170
Auto Locate option 127
auto-correct feature 30
automatic backup 146
Automatic IP settings options 126
auto-shut off interval 153, 166

B

back cover 163–164
back gesture 19, 25, 155, 177
Background data collection option 127

Backup application 44, 146–148

See also Palm profile

basic gestures 19–20

battery

caring for 189

charger for 7

charging 15, 16, 160

icons 12, 15

life 16

purchasing 16

replacing 160

specifications 183

troubleshooting 160–164

billing accounts 40

blank screens 164

Block Popups option 132

blocking caller IDs 58

Bluetooth devices 133–135

adding 59, 134

backup summary 146

connecting to 133, 135

deleting 135

disconnecting from 135

discovering 134

passkeys for 134

renaming 135

setting up 58

troubleshooting 166

turning on and off 133

Bluetooth wireless technology 59, 133

See also wireless services

BMP files 71, 111

bookmarks 130–131, 143

Bottom view 13

Brightness slider 153

browser. See Web browser

Buddies view 76

built-in applications 184

C

cable service providers 170

cache (web pages) 132

Calculator application 107

Calendar application 93–100

calendars 93–100

See also events

alarms and 96, 99

backup summary 147

dates on 98

default 100

events and 93, 95, 97

getting started with 94

Google 64, 93, 172

online 100

preferences for 99–100

saving 95

synchronizing 94, 100, 168

troubleshooting 172–173

call history 54, 57

See also phone calls

call waiting 55

caller IDs 58, 88, 112

camera 110, 173, 183

capitalization 29

Caps Lock 29

car kits 58, 59, 93

Card view 6, 19, 26, 27, 177

See also wallpaper

Center button 19, 177

Certificate Manager 151–152

Change Login Settings option 68, 70

Change Wallpaper option 154

character searches 50

characters 29–30

charging the battery 7, 15, 16, 160

chat rooms. See conversations

Classic application 38, 165

Clear Cache option 132

Clear Call History 57

Clear Cookies option 132

Clear flag command 73

Clear History option 132

Clips (animations in Help) 7

Clock application 106–107

colors

for calendar entries 94

for email message text 69, 73

for memos 105

columns, spreadsheet 140

comments

in documents 139, 141

Facebook 108

compatibility information 38, 58, 160, 165, 167

conference calls 56

connection menu 177

connections

Bluetooth devices and 59, 133

corporate servers and 168

icons for 11

Internet 123

online address books and 84

Palm profile and 146

roaming and 60

timing out 169

transferring files and 112, 121

troubleshooting 166, 171

TTY/TDD devices and 60

Wi-Fi settings 126

contact lists 72, 92

contacts 84–92

adding 84, 86

backup summary 147

car kits and 59, 93

default account 92

deleting 91

dialing by name 51

displaying 57, 87, 89

editing 87, 89

getting in touch with 91

getting started with 85

information for 79

Launcher icons for 90

linked 85

linking and unlinking 89, 90

photos for 88, 112

preferences 91–92

ringtones for 88, 156

saving information for 58, 72, 79, 86

searching 59, 86

selecting 53

sending 93

speed dials for 89

synchronizing 84, 85, 92, 168

troubleshooting 172–173

vCards and 93

Contacts application 84–92

Conversations view 76–77, 79

See also instant messages

cookies 132

- copying
 - calendars 44
 - contacts 44
 - files 41
 - text 31
- corporate accounts 65–66, 168
- coupling 166
- coverage areas 124, 165
- creating
 - bookmarks 130
 - contacts 86
 - email 68–69
 - events 97
 - files 141
 - instant messages 80
 - memos 105
 - multimedia messages 77–78
 - task lists 100
 - tasks 101–102
- cursors 22
- custom messages 81
- customer support 7
- customizing
 - Calendar application 99–100
 - Contacts application 91–92
 - email accounts 67–68
 - Location Services 127
 - phone settings 59
 - roaming preferences 60
 - Web browsers 132
 - Wi-Fi connections 126–127
- cutting text 31
- D**
- dashboard 178
- data connection icons 169
- data service icons 169
- data service providers 170
- Data Transfer Assistant 45, 84, 94, 178
- DataViz 141
- Date & Time application 147
- dates 102, 149
 - See also calendars
- Day view 97
- default accounts
 - Calendar 100
 - Contacts 92
 - Email 74
- Default Event Duration option 100
- Default Event Reminder option 99
- default settings 174
- delete gesture 23
- deleting
 - See also erasing data
 - alarms 107
 - applications 28, 176
 - billing accounts 41
 - Bluetooth devices 135
 - bookmarks 131
 - browsing history 132
 - certificates 152
 - contacts 91
 - conversations 79
 - cookies 132
 - email 68, 73
 - events 98
 - information 150
 - instant messaging accounts 81
 - memos 106
 - messages 79
 - music 120
 - numbers on dial pad 50
 - online accounts 168
 - pictures 114
 - tasks 104
 - web page content 132
- desktop organizers 160
- Device Info application 149–151
- device names 150
- device. See Palm Pre phone; Bluetooth devices
- Devices list 134
- diagnostic information 151
- dial pad 50
- dialing 50–52, 89, 131
- dialing prefixes 60
- dialing shortcuts 60
- dialing tones 60
- display. See touchscreen
- display size 142
- displaying
 - calendar events 97
 - certificates 152
 - contacts 57, 84, 87, 89
 - email folders 73
 - file properties 139
 - images 172
 - maps 91
 - meeting participants 99
 - multimedia messages 79
 - notifications 155
 - phone calls 54, 57
 - pictures 111
 - tasks 102
 - text messages 79
 - videos 116, 117
 - web pages 129
- DNS Server option 127
- DOC files 138
- Doc View 138–141, 147
- Document Editing 141
- documentation 7
- documents 138–143
 - See also Word files; PDF files; Excel files; PowerPoint files
- Documents To Go 141
- DOCX files 138
- Download for free option 39
- downloading
 - See also App Catalog
 - applications 38–40
 - email 68, 70, 171
 - files 132
 - pictures 110
 - updates 36–37
- drafts 69
- drag and drop gesture 23
- drag gesture 20, 24, 178
- driving safety tips 58, 192
- DTA. See Data Transfer Assistant
- DTMF tones 60
- due dates (tasks) 102, 104
- E**
- earpiece 166
- EarthLink accounts 65
- echoes 166
- editing
 - bookmarks 131
 - contacts 87, 89
 - email accounts 68, 70

- files 141
- instant messages accounts 81
- memos 105
- Palm profile 146
- tasks 103
- text 22–23, 31
- email 64–75
 - See also email addresses; Email application
 - advanced settings 67
 - alerts for 67
 - attachments 69, 71, 139, 142
 - backup summary 147
 - creating 68–69
 - deleting 68, 73
 - dialing from 52
 - download options for 171
 - drafts 69
 - folders 73, 74
 - forwarding 72
 - links in 118
 - managing 72
 - merging 64
 - message headers 73
 - pictures and 113
 - preferences for 74
 - receiving 64, 68, 70
 - replying to 72
 - retrieving 125
 - roaming and 60
 - searching for 72
 - sending 64, 69, 75
 - signatures 68, 73
 - synchronizing 64, 68, 70, 168
 - troubleshooting 170–171
- email accounts 64–68

- accessing 64
- changing 68, 70
- default 74
- deleting 68
- multiple 65
- preferences for 67–68
- reordering 75
- setting up 64–67
- troubleshooting 168, 170–171
- email addresses
 - changing 148
 - entering 67, 69
 - saving 72
- Email application 64–75
- email service providers 65, 170
- emergency numbers 52
- emoticons 78
- erasing data 14, 149, 150, 174
 - See also deleting
- ESMTP authentication 170
- EvDO data networks 12, 169, 170
- Event Notes option 96
- Event Reminder option 99
- events 93–97
 - alarms and 96, 99
 - calendar 93, 95
 - creating 97
 - deleting 98
 - displaying 97
 - locations for 95
 - reminders for 98
 - repeating 95
 - saving 95
 - synchronizing 93, 94, 100
- Excel files 138, 140–141
- Exchange ActiveSync accounts

- availability 181
- phone synchronization 46
- setting up 65–66
- Synergy feature and 6
- troubleshooting 168
- Exchange servers
 - searching over 51
 - synchronizing with 168, 169
 - troubleshooting 169
- extensions (phone calls) 60

F

- Facebook accounts
 - availability 181
 - contacts synchronization 85
 - deleting from 91
 - phone synchronization 46
 - pictures and 114
- Facebook application 108
- factory-installed applications 184
- favorites
 - email folders 74
 - web bookmarks 130
- feedback 166
- file types
 - document 138
 - picture 111
 - video 116
- files
 - See also specific types
 - changing contents 141
 - copying to phone 41, 116, 138, 141
 - creating 141
 - display size 138

- downloading 132
- finding text in 138, 139
- freeing memory and 176
- losing 174
- opening 138, 141
- properties for 139
- saving 139, 142
- searching for 138, 142
- sending 69, 139, 142
- storing 174
- Find command 138, 139
- finding. See searching
- flagging messages 73
- flick gesture 20, 178
- folders
 - copying files to 174
 - email 73, 74
- Forget Network option 126
- formatting text 69, 73
- forward gesture 20, 155
- forwarding messages 72
- free applications 39
- Front view 10
- frozen phone 150, 164, 175
- full erase 150, 174

G

- GALs. See Global Address Lists
- Geotag Photos option 127
- gesture area 19, 178
- gestures 6, 19–23
 - See also specific types
 - advanced 155
 - basic 19–20
 - scroll 21

- text selection 22–23
- zoom 21

Get email option 68

GIF files 111

Global Address Lists 51, 84

Gmail 64, 84, 93

Google accounts

- availability 181
- phone setup 64, 84, 93
- phone synchronization 46
- Synergy feature and 6
- website setup 44, 45, 46

Google calendar 64, 93, 172

Google Earth 127

Google Maps 133

Google Services 127

Google Weather 93

GPS applications 128

H

H.263 files 116

H.264 files 116

hands-free devices 58, 166–167

hard resets. *See* full erase

headsets 7, 58–59, 167

help 7, 175

See also troubleshooting

Help application 7

history lists 57, 76, 132

I

iCal on Mac 45, 46

icons

- battery 12, 15

connection 11

data connection 169

data services 169

Google maps 133

Launcher 28

notifications and 165

phone status 12

Quick Launch 27

signal-strength 166

title bar 12

web page 129, 130

IM. *See* instant messages

images 172

- See also* pictures

IMAP email accounts 170

importing information 168

inbox (email) 64, 74, 171

information

- accessing 6, 168
- backing up 146–148
- deleting 150
- entering 129
- importing 168
- linked contact 89
- losing 174
- protecting 146
- restoring 174
- retrieving 6
- saving 86
- transferring 43, 160

installing

- third-party applications 38, 175
- updates 36–37

instant messages

- accounts 80, 81
- notifications for 82

online status 81

- sending 76, 80

Interactive Tests 151

interference 167

internal memory. *See* memory

international language settings 153

Internet. *See* websites

Internet service providers 66, 170

IP addresses 126

ISPs. *See* Internet service providers

J

JavaScript option 132

Join network option 125

JPG files 71, 77, 79, 111

K

keyboard 10, 11, 51

keyboard shortcuts 31, 175

keywords 34

known networks 126

L

language 153

Launcher

- backup summary 147
- contacts in 90
- defined 178
- gesture 25
- icons 28
- pages 11, 25
- web pages and 129

layered calendars 94

lighted dial pad 50

linked contacts 84, 178

LinkedIn accounts

- availability 181
- contacts synchronization 85
- deleting from 91

linking to

- contacts 89
- videos 118
- web pages 129, 131, 176

List Order option 92

lists

- scrolling in 20
- selecting items from 30
- sorting items in 103

location information 95, 127

- See also* maps

Location Services 127, 147

lock icon 128

lost devices 146, 149

lowercase letters 29

M

M4V files 116

Mac computers

- copying files 112
- copying files from 121
- data transfer from 45

maps 91, 133, 172

Mark all completed/incomplete command 104

Mark as read/unread command 72

media files 176

- meeting invitations. *See* meeting requests
- meeting requests 75, 99
- memory 176, 184
- Memos application 104–106, 147
- menus 177
- merged views 64, 73, 178
- message headers 73
- messages. *See specific types*
- Messaging application 75–82, 147
- microphone 166
- misspelled words 30
- modems 136
- Month view 97
- Move to folder command 72
- moving icons 27, 28
- MP3 files 157
- MP4 files 116
- MPEG4 files 116
- multimedia messages
 - addressing 77
 - attachments 79
 - contact information and 79
 - creating 77–78
 - deleting 79
 - dialing from 52
 - displaying 79
 - notifications for 82
 - pictures and 113
 - roaming and 60
 - saving contact information 79
 - sending 55, 76, 78
 - troubleshooting 171
- multitasking 6, 24
- music 118–121
 - answering phone and 53

- deleting 120
- listening to 59, 118
- playback controls 120
- searching for 120
- songs as ringtones 156, 174

Music application 118–121

mute 54

N

names

- Bluetooth device 135
- device 150
- dialing by 51
- sending or receiving messages and 67

national emergency numbers 52

network times 149

networks 124, 125, 126

New card command 129

next gesture 155

notes 96, 102

notifications

- contacts and 53
- defined 178
- displaying 155
- icons 11
- messages and 67, 82
- responding to 35, 165
- sounds for 53
- troubleshooting 171

Now Playing list 120

numbers 50, 107

O

Office Outlook. *See* Outlook

online accounts 64, 167, 178, 181

- See also* accounts; email accounts

online address books 51, 84

online calendars 93, 94, 100

- See also* calendars

online status 81

online support 7

open Wi-Fi networks 124, 125

opening

- applications 24–25
- attachments 71, 79
- files 138, 141
- maps 91
- web pages 128, 131

operating system 179

orange key 11, 28, 178

organizer features 83

outage information 170

Outlook 45, 65, 168

overdue tasks 102

P

pairing devices 133–135, 136

Palm Desktop software 45, 168

Palm online support 7

Palm OS 38

Palm Pre phone 6

- See also* phone

Palm profile 14

- about 6, 14
- backups 146

- defined 178
- restoring data 174
- settings 149

Palm profile account 47, 179, 181

partial erase 150, 174

partnerships. *See* pairing

passkeys 134

passwords

- changing 148
- entering 29
- instant message 81
- PDF file 142
- screen 154, 155
- Wi-Fi 124

pasting text 31

PDF View 141–143, 147

personal area networks 136

Personal Identification Numbers. *See* PINs

personal information 174

phone

- See also* phone calls
- answering 52–53
- backup summary 147
- caring for 192
- conference calls 56
- data services and 169
- dialing 50–52, 89, 131
- disposing of 190
- emergency calls and 52
- getting started with 10
- hanging up 55
- information about 149
- lost 149
- as modem 136
- number for 57

- preferences for 59
 - redialing 52
 - restarting 150, 164, 166
 - safety information 58, 192
 - setting up 14
 - silencing ringer for 53
 - specifications 183
 - status 12
 - stolen 149
 - troubleshooting 151, 165–166
 - TTY/TDD devices and 60
 - volume 55
 - phone calls
 - contact information for 58
 - driving and 58, 192
 - ending 55
 - hands-free devices and 59
 - hold 54, 55
 - information about 54, 57
 - making 50–52, 54, 131
 - messages during 77
 - receiving 52–53
 - replying to 53
 - ringtones for 88, 156
 - searching and 6
 - searching for contacts and 59
 - second 55
 - sending to voicemail 53
 - shortcuts for 60
 - phone headsets 58–59, 167
 - phone icons 12
 - Phone Reset Options settings 150
 - photo albums 111
 - Photobucket accounts 182
 - photos. *See* pictures
 - Photos application 110–114
 - pictures 108, 110–114
 - adding to albums 111
 - backup summary 147
 - caller IDs with 88, 112
 - creating caller IDs with 112
 - deleting 114
 - displaying 111
 - downloading 110
 - Facebook 108
 - sending 77, 78, 113, 171
 - taking 110, 173
 - uploading 113–114
 - as wallpaper 113, 154
 - pinch in gesture 21, 179
 - pinch out gesture 21, 179
 - PINs 154, 155
 - play lists 120
 - Play sound option 67
 - playback controls
 - music 120
 - video 116, 118
 - playing
 - music 120
 - videos 116, 118
 - voicemail messages 54
 - Playlist view 120
 - PNG files 71, 111
 - POP email accounts 170
 - power accessories 190
 - power button 13, 16
 - PowerPoint files 138
 - power-saving feature 166
 - PPT files 138
 - PPTX files 138
 - Pre phone. *See* Palm Pre phone; phone
 - preferences. *See* customizing
 - previous gesture 155
 - priority settings
 - email 69
 - tasks 102
 - processor 183
 - profile 6, 146, 178
 - protecting information 146
- ## Q
- QCELP files 157
 - Quick Launch
 - applications in 27
 - defined 179
 - gesture 20
 - icons 27
 - Quick Tests 151
- ## R
- radio 183
 - rdx 151
 - recharging the battery 16
 - recurring events. *See* repeating events
 - redial 52
 - redirectors (web pages) 172
 - Regional Settings application 147, 153
 - reminders 96, 98
 - See also* alarms
 - for contacts 89
 - preferences for 99
 - remote diagnostics 151
 - Remove Contacts Account option 92
 - Remove Email Account option 68
 - renaming devices 150
 - reordering
 - bookmarks 131
 - cards 26
 - email accounts 75
 - icons 27, 28
 - notifications 36
 - tasks 103
 - repeating events 95
 - Reply-to address option 68
 - resets 150, 174
 - restarting phone 150, 164
 - ringer 53
 - ringer switch 13, 156
 - ringtones 88, 156, 157
 - roaming 60
 - rows, spreadsheet 140
- ## S
- safety information 187
 - satellite photos 133
 - saving
 - attachments 71
 - calendar events 95
 - contacts 86
 - email addresses 72
 - files 139, 142
 - information 86
 - phone numbers 58
 - pictures 113
 - web page bookmarks 131
 - schedules. *See* calendars

- screen
 - brightness 153
 - caring for 11
 - troubleshooting 162, 164
 - turning on and off 16, 153
 - unlocking 155
- Screen & Lock application 147, 153–155
- screen captures 110
- screens 154
- scroll gesture 11, 21
- searching 6, 105
 - for contacts 86
 - for memos 105
 - for messages 72
 - for music 120
 - for text 138
 - for videos 118
- secure networks 125
- Secure Unlock option 155
- secure websites 128, 172
- secure Wi-Fi networks 124
- security
 - See also Certificate Manager;
 - erasing data
 - locking the screen 153, 155
 - network 126
 - Palm profile 148
- sending
 - contacts 93
 - conversation messages 76
 - document files 139
 - email 64, 69, 75
 - instant messages 80
 - multimedia messages 55, 78
 - PDF files 142

- pictures 77, 78, 113, 171
 - text messages 77, 78
 - videos 171
- Set due date for all command 104
- Set flag command 73
- Set speed dial command 89
- setting up
 - billing accounts 40
 - Bluetooth devices 58
 - email accounts 64–67
 - instant messaging accounts 80
 - online picture accounts 114
 - phone 14
 - voicemail 53
- settings 174
- share option 75
- Shift 29
- Show Contact Matches option 59
- Show email option 68
- Show notification option 67
- signal-strength icon 18, 166
- signatures 68, 73
- Simple PIN option 154, 155
- smart folders 74, 179
- SMTP servers 170
- soft resets. See partial erase
- software 168
- software updates 36–37
- songs. See music
- sorting
 - contacts 92
 - data in spreadsheets 140
 - tasks 103
- Sounds & Ringtones application 147, 156–157
- sounds. See *specific types*

- speakerphone 166
- specifications 183–185
- speed dialing 51, 89
- spelling errors 30
- spreadsheets. See Excel files
- static 167
- stereo headsets 58, 59
- stop scrolling gesture 21
- storage space 176
- streaming
 - videos 117
- swipe gesture 19, 179
- Sym key 11, 179
- symbols 29
- Sync deleted emails option 68
- Sync Now option 92
- synchronization
 - defined 167
 - desktop software, Google, and phone 46
 - email 64, 68, 70
 - Facebook accounts 46
 - online accounts 167
 - online calendars 93, 94, 100
 - online contacts 84, 85, 92
 - retrieving information and 6, 168
 - troubleshooting 168–169
- Synergy feature 44
 - Calendar 93
 - Contacts 84
 - defined 6, 179
 - Email 64
 - Messaging 75
- system information 149
- system updates 36–37, 179

See also updating

T

- tap gesture 19, 179
- task lists
 - assigning tasks to 102
 - creating 100
 - deleting 104
 - reordering items in 103
 - sorting 103
- tasks 100–104
 - backup summary for 147
 - completing 102, 104
 - creating 101–102
 - deleting 104
 - displaying 102
 - due dates for 104
 - editing 103
 - priorities for 103
- Tasks application 100–104
- technical support 7
- temperature ranges 185
- text 139
 - copying, cutting 31
 - finding 138
 - formatting 69, 73
 - pasting 31
 - selecting 22–23
- text messages
 - addressing 77
 - contact information and 79
 - creating 77–78
 - deleting 79
 - displaying 79
 - links in 118

- making phone calls and 52
- notifications for 82
- phone calls and 55
- roaming and 60
- sending 76, 77, 78
- troubleshooting 171
- text selection gestures 22–23
- text telephones. *See* TTY/TDD devices
- third-party applications
 - adding 38
 - backup summary 147
 - internal memory and 176
 - losing 174
 - synchronizing using 168
 - troubleshooting 175
- third-party syncing 84
- throwing gesture 20
- thumbnail images 110
- time 149
- time zones 106, 149
- Tips (Help application) 7
- title bar icons 12
- Top view 13
- touchscreen 19
 - See also* screens
- traffic information 133
- transferring data 44–47
 - from computer 44
 - from Exchange 46
 - from Facebook 46
 - from Google 46
 - from old phone 44
- troubleshooting 151, 160–176
 - applications 150, 164, 169
 - battery 160–164

- Bluetooth devices 166
 - calendars 172–173
 - connections 166, 171
 - contacts 172–173
 - email 168, 170–171
 - Exchange servers 169
 - hands-free devices 166–167
 - messages 171
 - notifications 171
 - phone 151, 165–166
 - screens 162, 164
 - synchronization 168–169
 - third-party applications 175
 - volume 166
 - web page access 172
- trusted partnerships. *See* pairing
- TTY/TDD devices 12, 60
- turning on and off
 - Bluetooth 133
 - screen 16
 - Wi-Fi 124
 - wireless services 17
- TXT files 138

U

- universal search 33–34, 179
 - See also* searching
- unlinking contacts 90
- unlocking screens 154, 155
- untimed events 97
 - See also* calendars; events
- up gesture 20, 24
- updating
 - applications 40
 - billing accounts 41

- phone 36–37
 - software 36–37
- uploading pictures 113–114
- uppercase letters 29
- URLs 128, 129, 130
- USB cable 7
- USB Drive mode 41, 174
- Use GPS option 128
- user names 81
- user profile 6, 146, 178
- user safety information 190

V

- vCards 84, 93
- video playback controls 118
- videos 115–118
 - answering phone and 53
 - backup summary 148
 - linking to 118
 - playback controls 116
 - searching for 117, 118
 - sending 171
 - watching 116, 117
- Videos application 115–118
- views 6
 - See also* cards
- Vista computers
 - copying files 112
 - copying files from 121
 - data transfer from 45
 - Outlook 2007 45
- voicemail 54
- volume
 - phone call 55
 - system sounds 156

- troubleshooting 166
- VPN server connections 66

W

- waking up screen 16
- wallpaper 113, 148, 154
 - See also* Card view
- WAV files 157
- weak signals 165
- web addresses 128, 129, 130
- Web application 148
- Web browser 128–132
- web pages
 - accessing information on 6
 - bookmarking 130–131
 - browsing history for 132
 - cache for 132
 - dialing from 52
 - entering information on 129, 172
 - images on 172
 - linking to 129, 131, 176
 - navigating through 129
 - opening 128, 131
 - recently viewed 131
 - refreshing 129
 - setting display options for 129
 - troubleshooting access to 172
- web-based email 64, 65–67
- webOS operating system 6, 14, 38, 179
- websites
 - browsing 60, 125, 133
 - connecting to 124, 128
 - customer support 7

- internal memory and 176
- JavaScript for 132
- popups from 132
- searching for 128
- second browsers for 129
- secure 128, 172
- troubleshooting connections to 171
- uploading to 113–114
- videos from 117
- Week view 97
- Wide View 138
- Wi-Fi
 - See also wireless services
 - backup summary 148
 - connecting to 124, 125–126
 - icons 12
 - known networks 126
 - network types 124
 - software updates and 36
 - turning on and off 124
- Windows XP computers
 - copying files 112
 - copying files from 121
 - data transfer from 45
- wired headsets 58
- wireless networks 124
- wireless services
 - restarted phone and 166
 - turning on and off 17
- WLANs. See wireless networks
- Word files 138, 139–140
- worksheets. See Excel files

X

- XLS files 138
- XLSX files 138

Y

- Yahoo! accounts 46, 65, 181
- YouTube application 116, 117–118

Z

- zoom in gesture 21
- zoom out gesture 21